


Astro 78

Quartz transmitter
30.875 MHz

Astro 78

Quartz transmitter
30.875 MHz

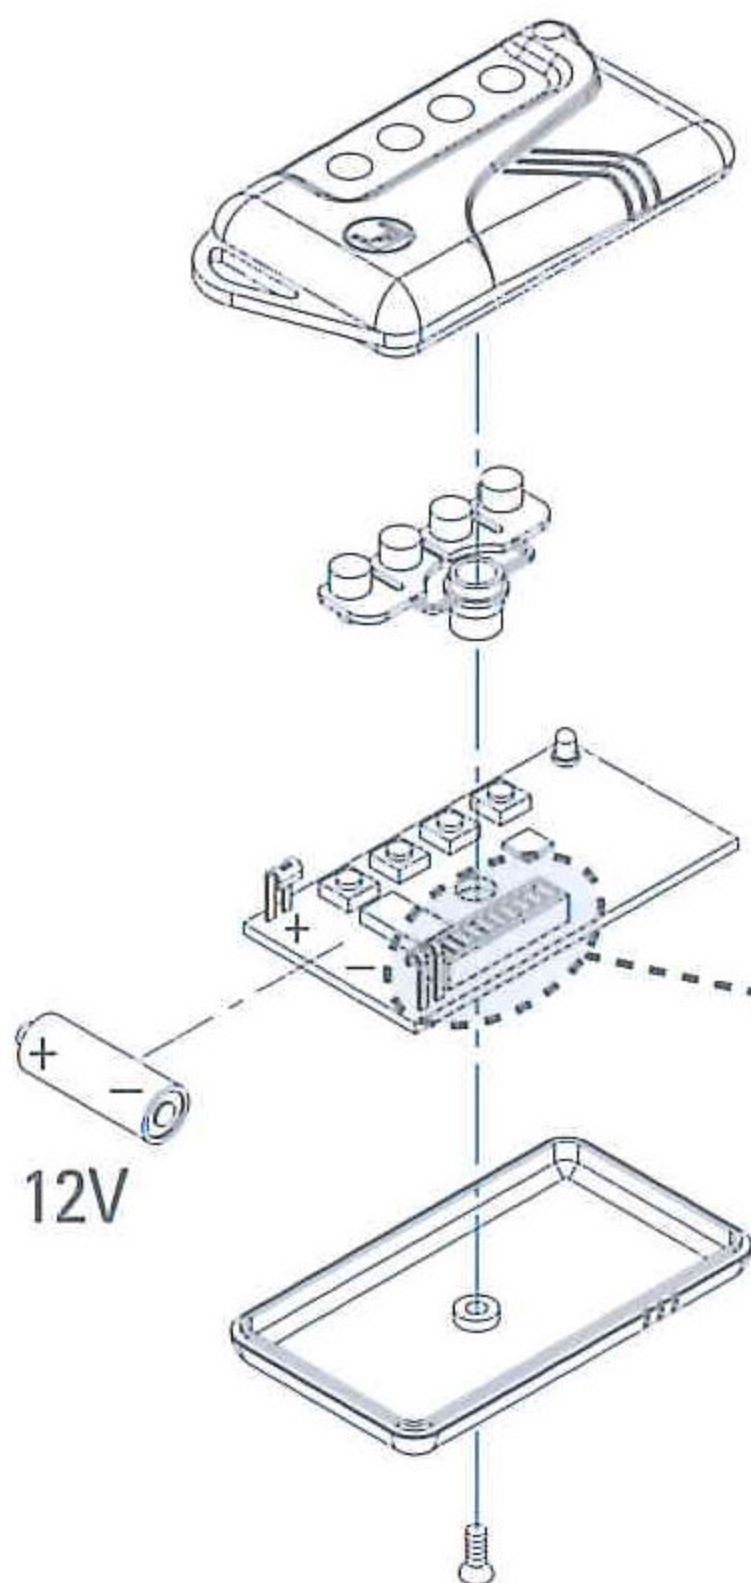

I - Apertura trasmettitore con vite

GB - To open transmitter remove screw

F - Ouvrir l'émetteur en levant la vis

D - Zerlegung des Senders durch die Schraube

