



Installation and operating instructions

Last updated: 05.2023

# Controller for door drives CS 320



# Table of contents

<b>1.</b>	<b>Safety information.....</b>	<b>3</b>
1.1	Correct use.....	3
1.2	Target groups .....	3
1.3	General safety advice .....	4
<b>2.</b>	<b>Product overview.....</b>	<b>4</b>
2.1	Product description .....	4
2.2	Variants.....	4
2.3	Motherboard CS 320.....	5
2.4	Technical data CS 320 .....	6
2.5	Category and performance level of the safety function per EN ISO 13849-1 .....	7
<b>3.</b>	<b>Installation.....</b>	<b>8</b>
3.1	Safety instructions for installation .....	8
3.2	Mains connection .....	8
3.3	Internal fuse protection.....	10
3.4	Mains voltage selection .....	10
3.5	Supply to external devices (only with 400 V / 3-phase connection).....	11
3.6	Connection of electronic limit position system absolute value encoder (AWG) .....	11
3.7	Mechanical limit switch (MEC) connection .....	12
3.8	Connection of command devices .....	14
3.9	Light grid connection.....	16
3.10	Connection of closing edge protective device 1 .....	17
3.11	Connection light barrier 1.....	18
3.12	Terminal assignment, relay outputs .....	19
3.13	Connection of programmable inputs .....	19
3.14	Safety input per EN 12453 .....	22
3.15	Radio receiver, pluggable .....	23
3.16	CS radio.....	24
3.17	Digital 991 .....	24
3.18	Connection of external radio receiver.....	25
3.19	Connection of frequency converter .....	25
3.20	Connection of LCD monitor.....	26
3.21	Connection of MS BUS components .....	26
3.22	Transmission system radio .....	27
<b>4.</b>	<b>Initialisation.....</b>	<b>27</b>
<b>5.</b>	<b>Setting the limit positions.....</b>	<b>28</b>
5.1	Checking the drive / travel direction .....	28
5.2	Setting the mechanical limit switches .....	28
5.3	Setting the electronic end position system using the setting buttons on the circuit board.....	28
5.4	Setting the electronic limit position system via the LCD monitor.....	29
5.5	Setting the intermediate positions of the electronic limit position system via the LCD monitor .....	29
<b>6.</b>	<b>Programming.....</b>	<b>30</b>
6.1	Overview of the LCD monitor .....	30
6.2	LCD monitor operating modes .....	30
6.3	Expert menu.....	31
6.4	RESET .....	31
6.5	RESETTING the controller with LCD monitor.....	31
6.6	RESETTING the controller without LCD monitor .....	31
<b>7.</b>	<b>Navigator (only LCD monitor).....</b>	<b>32</b>

<b>8.</b>	<b>Functional overviews .....</b>	<b>34</b>
8.1	Automatic mode .....	34
8.2	Input operating mode.....	35
8.3	Explanations of the relay modes:.....	44
8.4	Explanations of the inputs:.....	48
8.5	Diagnosis operating mode / error memory .....	52
<b>9.</b>	<b>Fault display and remedial measures .....</b>	<b>55</b>
9.1	Fault display on the LCD monitor .....	55
9.2	Error message via LED indicator .....	57
<b>10.</b>	<b>Service .....</b>	<b>59</b>
<b>11.</b>	<b>Declaration of incorporation (EU) .....</b>	<b>60</b>
<b>12.</b>	<b>Declaration of incorporation (UK) .....</b>	<b>61</b>
<b>13.</b>	<b>Annex .....</b>	<b>62</b>
13.1	Safety circuit measuring points .....	62
13.2	Overview of the connections .....	64

## About this document

- Original operating manual.
- Part of the product.
- Reading and subsequent storage mandatory.
- Protected by copyright.
- No part of this manual may be reproduced without our prior consent.
- Subject to changes which are in the interest of technical improvements.
- All dimensions in millimetres.
- Figures are not to scale.

### Safety instructions

#### **WARNING!**

Safety information regarding a danger that can lead to death or serious injuries.



#### **CAUTION!**

Safety information regarding a danger that can lead to minor or moderate injuries.

#### **ATTENTION!**

Safety information regarding a danger that can lead to damage or destruction of the product.

### Meaning of symbols

- Action prompt
- ✓ Check
- List, itemisation
- Reference to other parts of this document
-  Reference to separate documents that must be observed
-  Factory settings

## 1. Safety information

### **WARNING!**

#### **Risk of death due to a failure to observe the installation and operating instructions!**

This manual contains important information for handling the product safely. Particular reference is made to possible dangers.

- Read this manual through carefully.
- Follow the safety instructions in this manual.
- Store the manual in an accessible location.

### 1.1 Correct use

The controller CS 320 is designed exclusively for controlling door systems through drives with mechanical limit switches (MEC) or an electronic limit position system (AWG).

Use is only permissible:

- In technically faultless condition.
  - Following correct installation.
  - In compliance with the data in the technical specifications.
- "2.4 Technical data CS 320"

Any other use is deemed to be improper use.

### 1.2 Target groups

#### 1.2.1 Operator

The operator is responsible for the building in which the product is used. The operator has the following tasks:

- Knowledge and safekeeping of the instruction manual.
- Instruct all persons who use the system.
- Ensure that the system is inspected and maintained regularly by qualified specialist personnel in accordance with the manufacturer's instructions.
- Make sure that inspection and maintenance are documented in the inspection logbook.
- Safe and proper keeping of the inspection logbook.

#### 1.2.2 Specialist personnel

Qualified specialist personnel are responsible for assembly, maintenance, repair, disassembly and disposal.

Requirements applicable to qualified specialist personnel:

- Knowledge of the general and specific safety and accident-prevention regulations.
- Knowledge of the relevant electrical regulations.
- Training in the use and care of appropriate safety equipment.
- Knowledge of the relevant standards.

Electrical work by qualified electricians exclusively, in accordance with DIN VDE 0100.

Requirements applicable to qualified electricians:

- Knowledge of the basics of electrical engineering.
- Knowledge of national regulations and standards.
- Knowledge of the relevant safety regulations.
- Knowledge of this operating manual.

### 1.2.3 Users

Instructed users operate and care for the product.

Requirements applicable to instructed users:

- Users are instructed in relation to their work by the operator.
- Users must have been instructed on how to use the product safely.
- Knowledge of this operating manual.

Special requirements apply to the following users:

- Children aged 8 and above.
- Persons with reduced physical, sensory or mental capabilities.
- Persons with a lack of experience and knowledge.

These users are only authorised to operate the product.

Special requirements:

- The users must be supervised.
- Users must have been instructed on how to use the product safely.
- The users must understand the dangers involved in handling the product.
- Children are not allowed to play with the product.

### 1.3 General safety advice

Persons or objects must never be moved with the aid of the system.

In the following cases, the manufacturer accepts no liability for damages. The guarantee on the product and accessory parts is voided with:

- A failure to observe these operating instructions.
- Misuse and improper handling.
- The assignment of unqualified personnel.
- Modifications or changes to the product.
- The use of spare parts that have not been produced or approved by the manufacturer.

The product is manufactured according to the directives and standards mentioned in the Declaration of Incorporation. The product has left the factory in perfect condition with regard to safety.

Batteries, accumulators, fuses and bulbs are excluded from warranty.

**Further safety information can be found in the relevant respective sections of the document.**

→ "3.1 Safety instructions for installation"

## 2. Product overview

### 2.1 Product description

The controller CS 320 is designed for use in industrial areas and can be used with all door types in these areas.

It is possible to connect drives with mechanical limit switches (MEC) or an electronic limit position system (AWG).

All the necessary command devices and safety elements can be connected, set and evaluated.

Programming takes place via a pluggable LCD monitor.

Alternatively, a service tool is available as an accessory.

The service tool consists of a stick and an app.

The following supplier variants of the controller CS 320 are possible:

### 2.2 Variants

**Housing variants:**

- Controller CS 320 in the "standard" housing
- Controller CS 320 in the "combination" housing with integrated mounting rail for additional components

**Variants of the pluggable LCD monitor:**

- LCD monitor on the circuit board
- LCD monitor in the housing cover
- Hard-wired LCD monitor, pluggable (MS BUS)
- Without LCD monitor (monitor is required for all settings apart from the limit position setting)

**Command device variants:**

- 3-fold button CS integrated in the housing

**Optional:**

- Housing without 3-fold button
- Housing with ON/OFF key switch
- Housing with main switch
- Housing with emergency stop
- Pluggable components (circuit board)
  - Brake monitoring module
  - Week timer
  - Radio receiver
  - Radio transmission system for closing edge protective device and/or a safety element.

The operating instructions describe the connection and programming options and variants of the CS 320 controller with connected LCD monitor and from software version V1.01a.

## 2.3 Motherboard CS 320

### Explanation:


- X1: Mains connection terminal strip
- X2: Motor terminal strip
- X3: Terminal strip for command devices
- X4: Terminal strip for safety elements
- X5: Terminal strip for relays
- X6: Connector strip for internal ON/OFF switch
- X7: Connector strip for internal 3-fold button KDT
- X8: Connector strip for LCD monitor  
(Beneath the LCD monitor)
- X9: Connector strip for radio receiver
- X10: Connector strip for week timer / brake monitoring module
- X11: Connector strip for electronic limit position system (AWG)
- X12: Connector strip for external radio receiver
- X13: Connector strip for internal 3-fold button CS
- X15: Terminal strip for mechanical limit switches (MEC)
- X16: Connector strip for BUS system (MS BUS)
- X17: Plug-in connector RJ for BUS system (MS BUS)
- X18: Connector strip for frequency converter (interface)
- X19: Terminal strip for supplying external devices 230V / 50Hz
- X20: Connector strip for transmission system
- X21: Mains voltage selection

- H1: Ready for operation (green)  
Lights up with power supply.
- H2: Status indicator (red)  
Lights up with faults or with actuation of the safety equipment

- S1: Programming button (+)  
(Beneath the LCD monitor)
- S2: Programming button (-)  
(Beneath the LCD monitor)
- S3: Programming button (P)  
(Beneath the LCD monitor)

- F1: Fuse protection for external devices 230V / 50Hz  
(max. 1A slow-blow)
- F2.1: Fuse protection for controller and drive L1 (max. 10 A)
- F2.2: Fuse protection for controller and drive L2 (max. 10 A)
- F2.3: Fuse protection for controller and drive L3 (max. 10 A)
- ⊕ Terminal strip for protective conductor (PE)

### 2.3 / 1

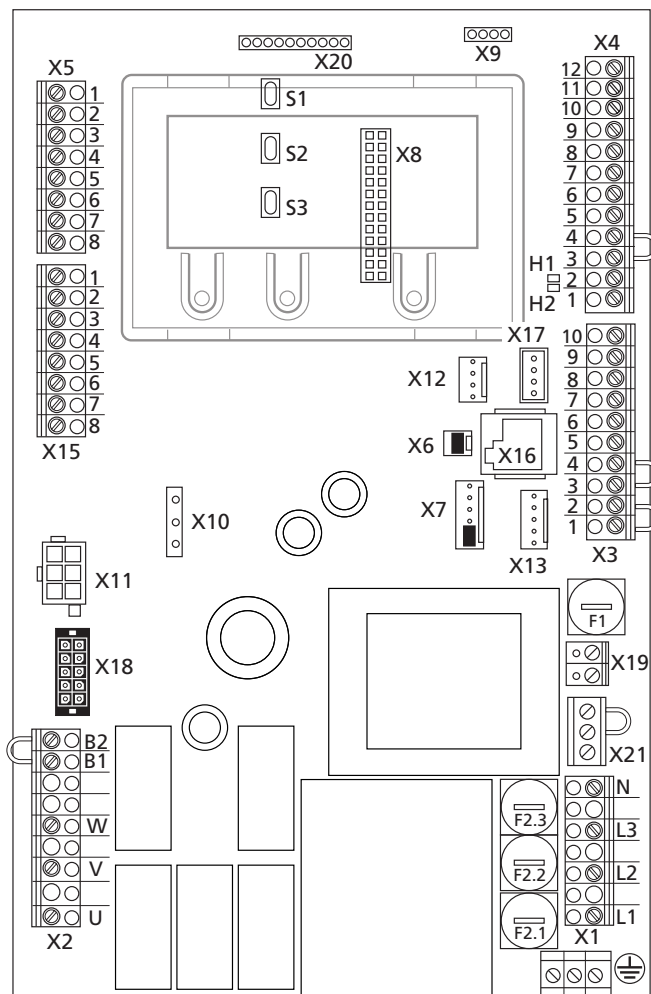

## 2.4 Technical data CS 320

### Mechanical and electrical data

Housing dimensions:	215 x 275 x 190 mm
Installation:	Fix vertically to the wall at a minimum height of 1,100 mm
Power supply via	
L1, N, PE:	230V/1~ , 50/60Hz  Power input max. 2,200W with supply 400V/3~
L1, L2, L3, N, PE:	400V/3~ , 50/60Hz 230V/3~ , 50/60Hz
Fuse protection:	10 A K-characteristic
Controller internal consumption:	max. 750 mA
Control voltage:	24 V DC, max. 500 mA; protected by automatically resetting fuse for external sensors
Controller inputs:	24 V DC, all inputs are to be connected potential-free. Minimum signal duration for input controller command >100 ms.
Controller outputs:	24 V DC, max. 500 mA.
Safety circuit / emergency stop:	All inputs must be connected potential-free; with an interruption of the safety chain, no further electrical movement of the drive is possible, even with dead man's switching.
Safety strip input (protection level C):	Performance Level C, for electrical safety strips with 8.2 kΩ terminal resistance and for dynamically optical systems.
Light barrier (Protection level D):	If the light barrier is used as a protection system according to level D, its function must be checked regularly and within 6 months as a minimum. If this is a self-testing system, this requirement does not apply.
Safety input with resistance evaluation	Performance Level C, cat.2 for safety-related components with 8.2 kΩ terminal resistance

### Mechanical and electrical data

Display (LCD):	Only an original LCD monitor from Marantec may be used.
Relay outputs:	If inductive loads are to be switched (e.g. Additional relays or brakes), these must be equipped with corresponding interference suppression measures (e.g. Free-wheeling diodes, varistors, RC elements). Work contact potential-free; min. 10 mA; max. 230 V AC / 4A. <i>Contacts that have been used for power switching can no longer be used for switching low currents.</i>
Temperature range:	Operation: -10°C to +45°C Storage: -25°C to +70°C
Humidity:	Up to 80% non-condensing.
Vibrations:	Low-vibration mounting, e. g. on a masonry wall.
Protection grade	IP 65
Weight	approx. 1.8 kg

## 2.5 Category and performance level of the safety function per EN ISO 13849-1

Function	Realisation	MTTF <sub>D</sub> Electronics	MTTF <sub>D</sub> Total with output contactor	DC <sub>avg</sub>	Category	Performance Level
Emergency stop	Input terminal X3, X6, X7, X11 Interrupts the power supply to the output relay and main contactor, independent of the CPU. Feedback to the CPU available.	1175 years	191 years	84.7%	3	d
Stop circuit	Input terminal X3, X7 Interrupts the supply to the main contactor. Message to CPU.	1175 years	191 years	-	B	b
End position detection through absolute value encoder	Input terminal X11 For position determination and end position detection. Testing through plausibility check of expected position values to received position values.	1062 years	188 years	83.7%	2	c
End position detection through end position switch	Input terminal X15 Protection through runtime limiting. Inputs are evaluated by the CPU.	1248 years	193 years	63.1%	2	c
Light barrier evaluation	Input terminal X4 Pulse evaluation through CPU. Faults are identified through plausibility evaluation in the CPU. The frequency must lie between 130 Hz and 190 Hz. The function is monitored by switching the supply voltage (T117, IC111) of the light barrier each time before travel and every two minutes when idle. With activation in the CLOSE direction, a stop or reversing of the door takes place.	1000 years	186 years	81.9%	2	c
Evaluation of a pneumatic switching strip	Input terminal X4 Evaluation through CPU. Testing through plausibility evaluation. Switching signal must come shortly before reaching the lower end positions.	1123 years	190 years	85.6%	2	c
Evaluation of single or double 8k2 / single OSE SKS	Input terminal X4 Evaluation through CPU. The function is monitored by switching the supply voltage (IC110, T138) each time before travel.	1123 years	190 years	85.6%	2	c

DC<sub>avg</sub> Average diagnostic coverage  
MTTF<sub>D</sub> Mean time to dangerous failure

## 3. Installation

### 3.1 Safety instructions for installation

#### **WARNING!**

##### **Danger due to a failure to observe the installation instructions!**

This chapter contains important information for the safe assembly of the product.

- Read this chapter through carefully before assembly.
- Follow the safety instructions.
- Perform the assembly as described.

Assembly by qualified specialist personnel only.

→ "1.2.2 Specialist personnel"

Electrical work must be performed by qualified electricians exclusively.

→ "1.2.2 Specialist personnel"

- Before performing wiring work, always disconnect the system from the power supply.
- Make sure that the power supply remains disconnected during wiring work.


The operator of the system or their representative must be instructed on its operation after the system has been installed.

- Children must not play with the control or command devices.
- No persons or objects are permitted inside the danger zone of the system.
- It is necessary to check all available emergency command devices.
- Observe possible crushing and shearing points on the system.
- Never reach into a running system or moving parts.
- The line types and cross-sections must be selected in accordance with the valid specifications.
- With a fixed connection, an all-pole main switch must be used.
- Mains cables and control cables must be routed separately.
- The line types and cross-sections must be selected in accordance with the valid specifications.
- It is essential to observe the local protective regulations.
- Observe the specifications of the door manufacturer for installation.

The following points must be correct to guarantee fault-free functioning:

- The door is installed, fully functional and designed for power-driven operation.
- The gear motor is fitted and ready for operation.
- The command and safety devices are fitted and ready for operation.
- The control housing with the CS 320 controller is fitted.

Observe the valid standards and regulations!

-  The instructions from the respective manufacturer must be observed for the installation of the door, the gear motor and the command and safety devices.

### 3.2 Mains connection

#### **Prerequisites**

The following points must be correct to guarantee the function of the controller:

- The mains voltage must correspond with the information on the type plate.
- The mains voltage must correspond with the voltage of the drive.
- In the case of three-phase power, this must have a clockwise rotating field.
- With a fixed connection, an all-pole main switch must be used.
- With three-phase power, only triple block circuit breakers of type C (max. 16 A) shall be used.

#### **ATTENTION!**

##### **Malfunctions due to improper installation of the controller!**


- Before switching on the control for the first time, a check must be carried out after completing the wiring to ensure that all the motor connections on the motor and the control are securely fixed. All control voltage inputs are galvanically isolated from the supply.
- The control and load lines of the connected drives must be double-insulated along their entire route.



### 3.3 Internal fuse protection

The controller CS 320 is equipped with internal fuse protection (F2) at the mains input. The fuse elements are equipped with fine fuses 8A / T (5.2 x 20 mm) in the factory.

#### 3.3 / 1

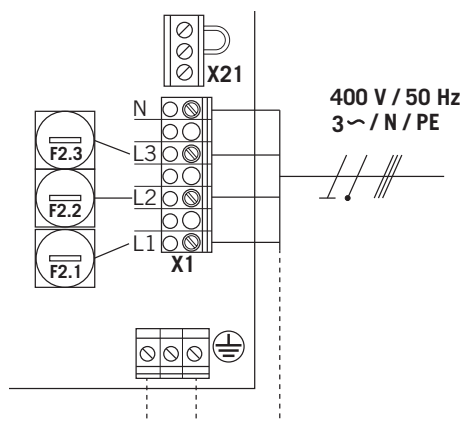

#### **! ATTENTION!**

##### **Malfunctions due to improper fuse protection of the controller!**

Internal fuse maximum 10 A / T!


The internal fuses do not replace fuse protection of the supply cable. This shall be realised with max. 16 A and must be configured as triple block circuit breakers of type C.

→ "3.2 Mains connection"


### 3.4 Mains voltage selection

The position of the bridge connector to X21 must be adjusted to the supply voltage and motor voltage.


#### 3.4 / 1

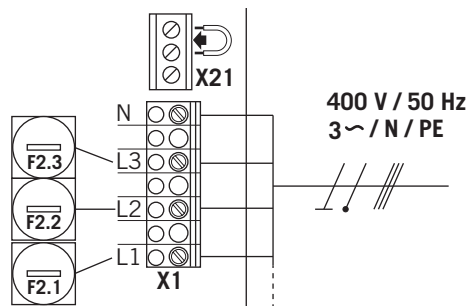

#### 3.4 / 2

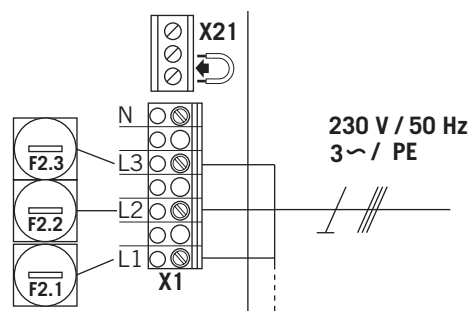

#### 3.4 / 3

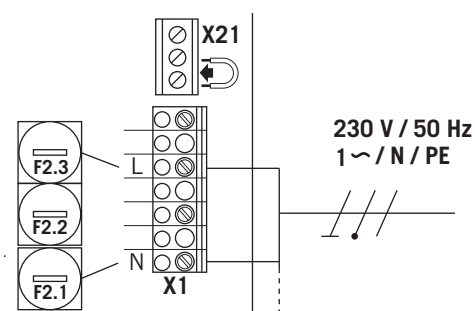


### 3.5 Supply to external devices (only with 400 V / 3-phase connection)

The CS 320 has 2 separate voltage supplies for external components, such as signal devices, light barriers, etc.

X19 230V/1~

X4 24V-DC

#### 3.5 / 1

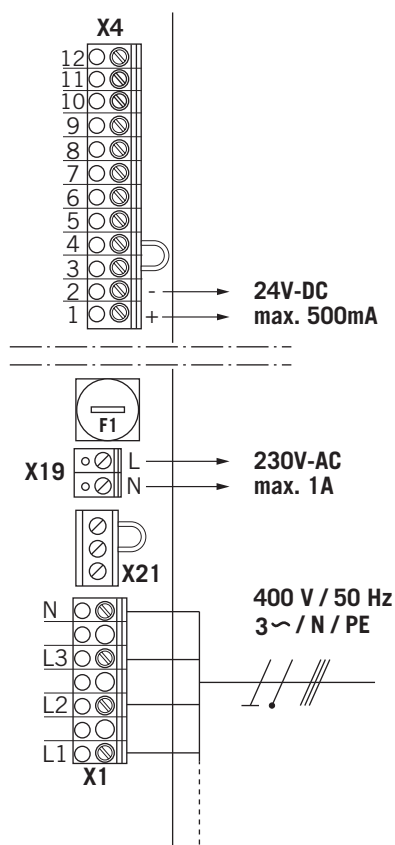


#### NOTE:

Use of the connection X19 is only possible with a supply with 400V / N / 3~.

The connection X19 is protected by the fuse element F1 (max. 1 A / T).

### 3.6 Connection of electronic limit position system absolute value encoder (AWG)

#### 3.6 / 1

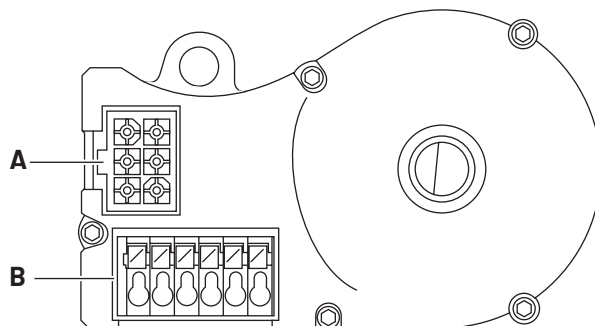

A: Absolute value encoder plug

B: AWG plug-in terminal

#### Connector strip X11 (on connector A)

#### 3.6 / 2

4 grey	7 yellow
5 green	8 pink
6 white	9 brown

Cables with either numbered or coloured wires are used for the AWG, depending on the drive:

4 (grey): Safety chain input

5 (green): RS 485 B

6 (white): GND


7 (yellow): RS485 A

8 (pink): Safety circuit output

9 (brown): 12V DC

#### Connector strip B (only absolute value encoder)

#### 3.6 / 3

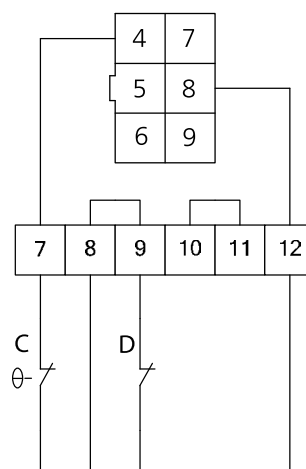

C: Thermal element in the drive

D: Emergency manual actuation (emergency crank or emergency chain)

**NOTE:**


In order to satisfy the requirements of EN 12453:2017 the electronic end position system must comply as a minimum with PL "c" with a min. category 2 per EN ISO 13849-1.  
In order to satisfy this requirement, it is only permissible to use an absolute value encoder from Marantec (art. no. 97957) as an electronic end position system.

**3.7 Mechanical limit switch (MEC) connection**

Alternatively to the absolute value encoder as an electronic system, it is also possible to connect a mechanical cam limit switch and evaluate this.  
With first commissioning and after a RESET, the connected limit position system is automatically detected. With a subsequent change, the respective limit position system must be selected via a parameter setting in the INPUT operating mode.


**Series STA, MDF05, MTZ05**

**3.7 / 1**

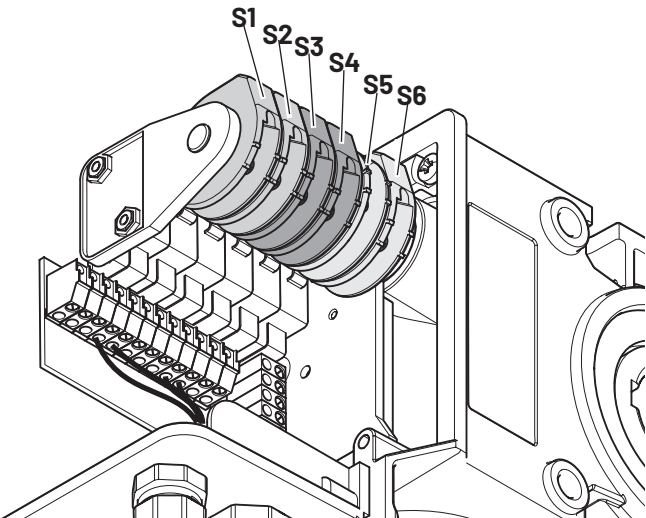


**Series MDF20+, KD, MTZ20+**

**3.7 / 2**

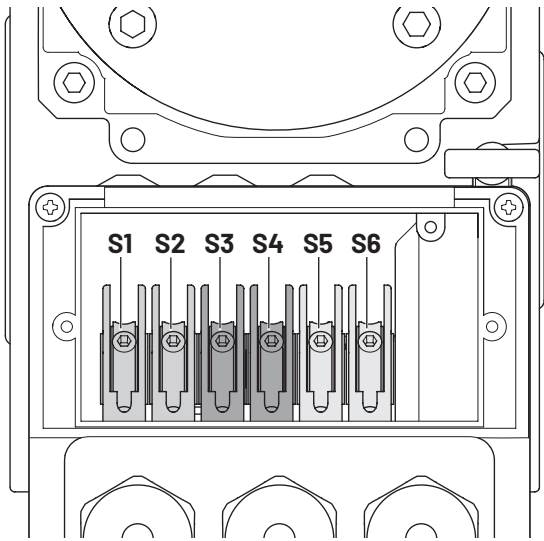


**Mechanical limit switches**

**3.7 / 3**

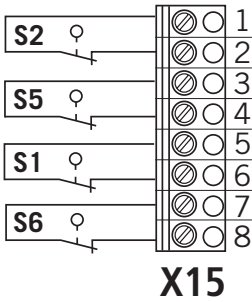


**Safety circuit**

**3.7 / 4**

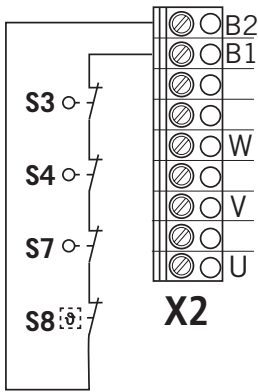

## Example of connection with 7-wire solution

3.7 / 5

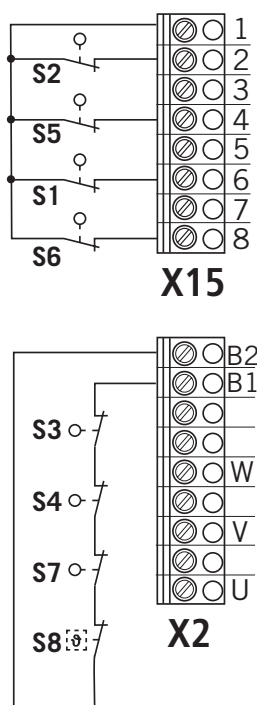

### Legend:

- S1 Supplementary limit switch UP
- S2 Limit switch UP
- S3 Safety limit switch UP
- S4 Safety limit switch DOWN
- S5 Limit switch DOWN
- S6 Supplementary limit switch DOWN
- S7 Emergency operation (NC - contact)
- S8 Motor thermal protection

### NOTE:

In order to satisfy the requirements of EN 12453:2017 the mechanical limit switches must have been approved as a "reliable component" in accordance with EN ISO 13849-1.

Drives with integrated safety catch device must not be equipped with mechanical limit switches.

## ! ATTENTION!


### Property damage due to improper installation!

Connection as a 6-wire solution is prohibited and can lead to destruction of the CS 320 circuit board.

Reference potential on X2/B1-B2 = 24V-DC

Reference potential on X15=12V-DC

3.7 / 6

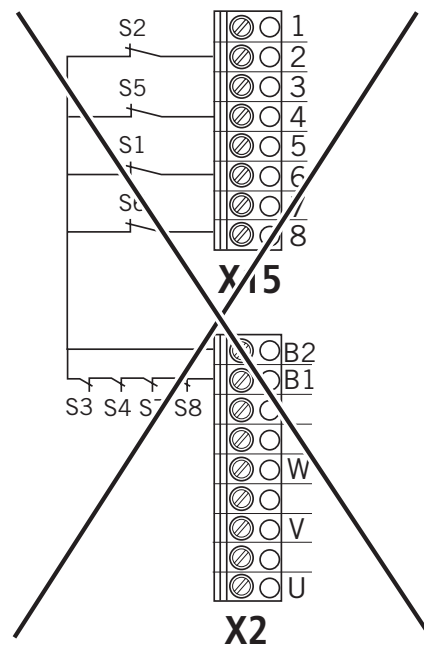

3.8 Connection of command devices

 CAUTION!

**Risk of injury due to uncontrolled door movement!**  
A CLOSE command in dead-man operation without a view of the door is not permitted.


- Install the command devices for the dead-man operation in direct visual contact with the door, although outside the danger zone for the operator.  
A CLOSE command without visual sight of the door may only be given via input 1 / MOD 32 (X4 / 9-10).

If the command device is not a key switch:

- Install it at a height of at least 1.5 m.
- Install it where it is inaccessible to the public.

Command devices (standard)


3.8 / 1

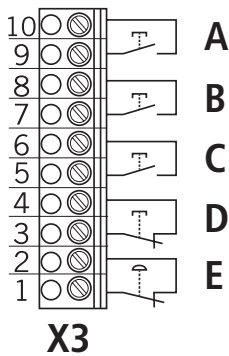

- Legend:**
- A Button / input DOWN
  - B Button / input impuls
  - C Button / input UP  
(UP inside, with active two-way control)
  - D STOP button
  - E Emergency stop command device


UP / STOP / DOWN switch (6-wire solution)

3.8 / 2

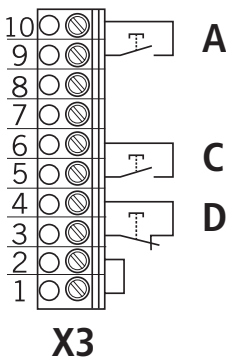


UP / STOP / DOWN switch (4-wire solution)

3.8 / 3

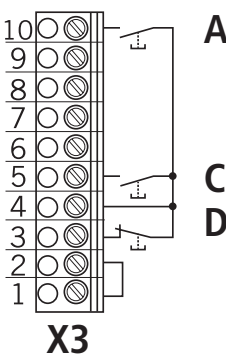

**IMPULS button**  
Selection of the function via IMPULS parameter  
→ "8.2 Input operating mode" on page 35


3.8 / 4

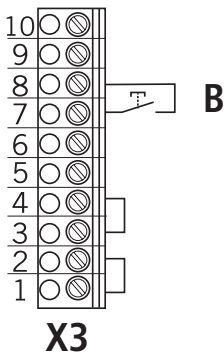

- UP switch
- STOP button

## External radio receiver


3.8 / 5

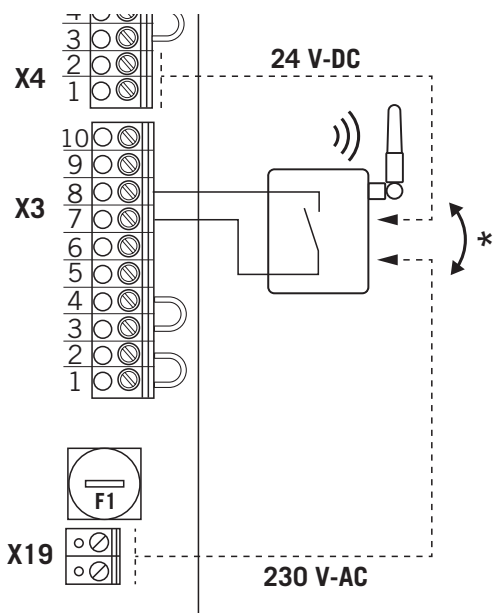

\* optionally, depending on connection of the radio receiver

## Key switch

3.8 / 6

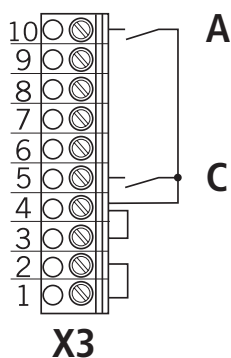


### Legend:

- A Button / input DOWN
- C Button / input UP  
(UP inside, with active two-way control)

## Cover keypad KDT

Push-button with NO / NC contacts.  
Up to year of manufacture 12 / 2009.

3.8 / 7

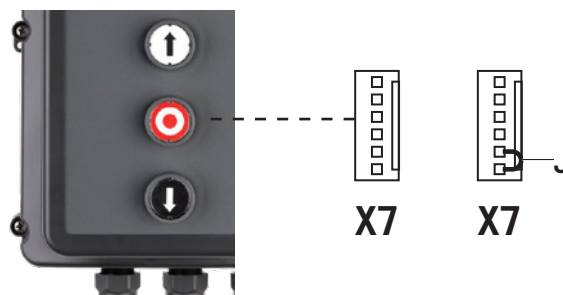


J Jumper (bridge)

The jumper must be connected if the KDT keypad is not connected.

## Cover keypad CS

Silicone keys with NO contacts.  
From year of manufacture 01 / 2010.


3.8 / 8

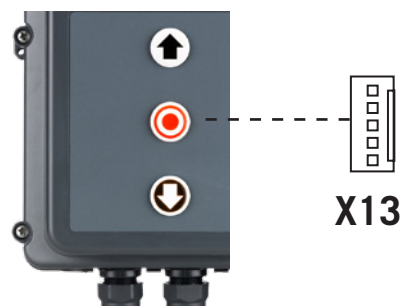

## ON/OFF key switch

NC contact for interrupting the door function (optional).  
This switch is part of the safety circuit.

3.8 / 9

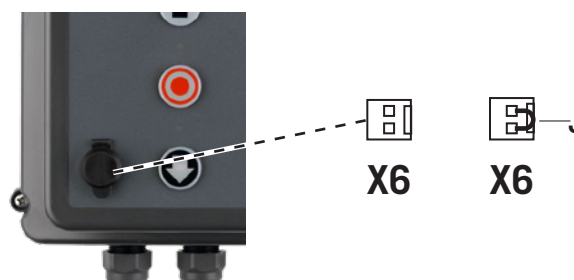

J Jumper (bridge)

The jumper must be connected if the key switch is not connected.

### 3.9 Light grid connection


It is possible to connect up to 2 light grids to the CS 320 Light grid 1 is connected to the closing edge protective device input. Light grid 2 is connected to programmable input 2.

#### Light grid 1

Parameter SKS = MOD 4

The connection cable (A) is pluggable.

#### 3.9 / 1

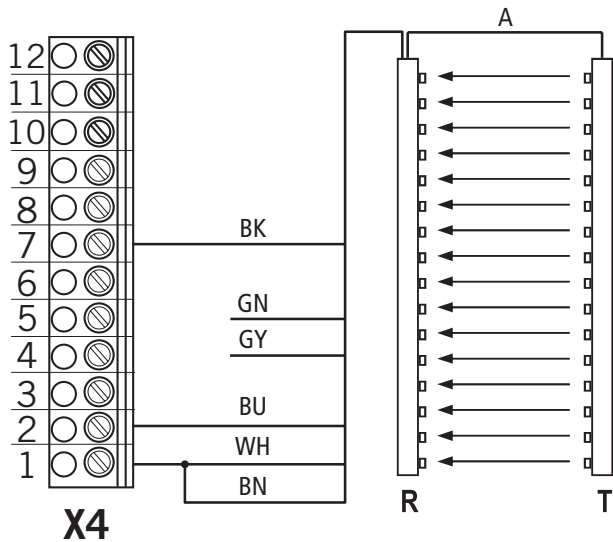


#### Light grid 2

Parameter INPUT 2 = MOD 12

The connection cable (A) is pluggable.

#### 3.9 / 2

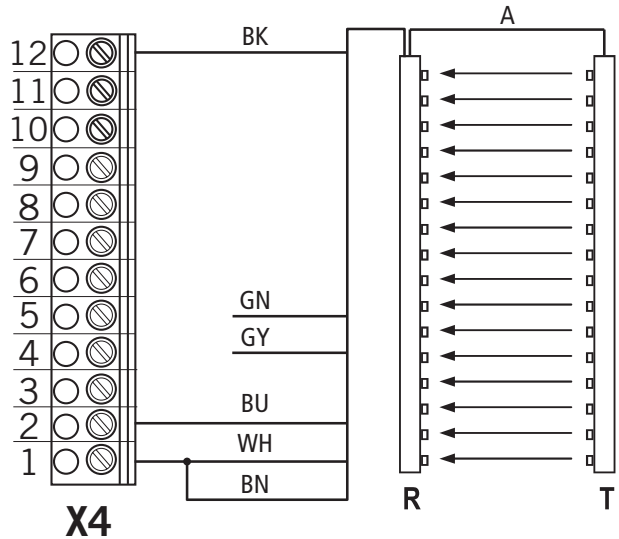

#### Legend:

BK Black  
GN Green  
GY Grey  
BU Blue  
WH White  
BN Brown

R Receiver  
T Transmitter

#### NOTE:

The GridScan/Pro light grids from Cedes are shown on an exemplary basis in this manual.

The GridScan/Pro light grids correspond to

- Performance Level d, category 2 per EN ISO 13849-1
- Protection level E per EN 12453:2017

Diagrams from other manufacturers on inquiry.

For a precise description of the function and connection, refer to the separate documentation for the light grid.

### 3.10 Connection of closing edge protective device 1


With first commissioning and after a RESET the system of the closing edge protective device is automatically detected and programmed. If no closing edge system is connected, the input is requested every time the power is switched on again until a closing edge system has been detected. With a subsequent change, the respective system must be selected via a parameter setting in the INPUT operating mode. In the case of light barriers with a test function, this must be set manually.

→ "8.2 Input operating mode"

#### Optoelectronic closing edge protective device (OSE)

Parameter SKS = MOD 1

##### 3.10 / 1

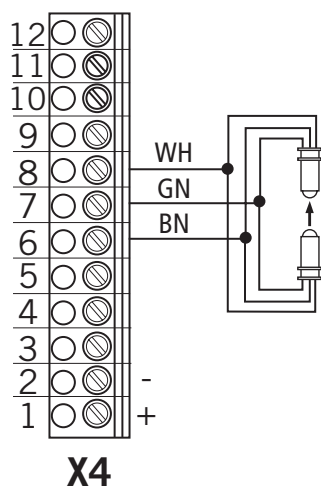


#### Legend:

WH White  
GN Green  
BN Brown

#### Electrical closing edge protection (8.2 kOhm)

Parameter SKS = MOD 2


##### 3.10 / 2

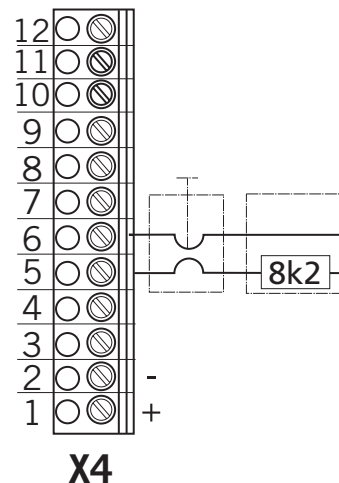

#### Pneumatic closing edge protection (DW)

Parameter SKS = MOD 3 / testing automatically active

##### 3.10 / 3

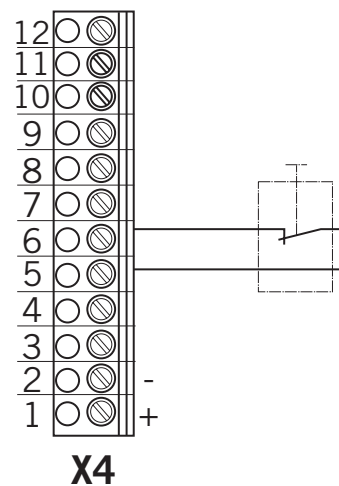


3.11 Connection light barrier 1

With first commissioning and after a reset the light barrier is automatically detected and programmed. If no light barrier system is connected, the input is requested every time the power is switched on again until a light barrier system has been detected. With a subsequent change, the respective system must be selected via a parameter setting in the input operating mode. In the case of light barriers with a test function, this must be set manually.  
→ "8.2 Input operating mode"

Light barrier 4-wire NC

without testing parameter LIGHT BARR 1= MOD 3  
with testing parameter LIGHT BARR 1= MOD 5


3.11 / 1

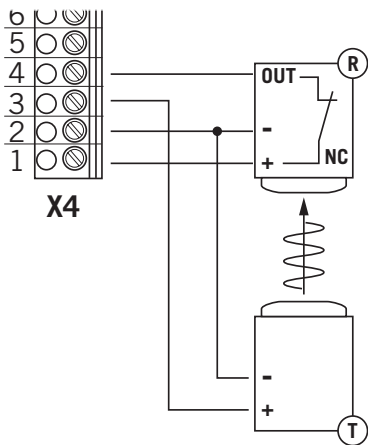

Light barrier Marantec 2-wire

with testing parameter LIGHT BARR 1= MOD 1


3.11 / 2

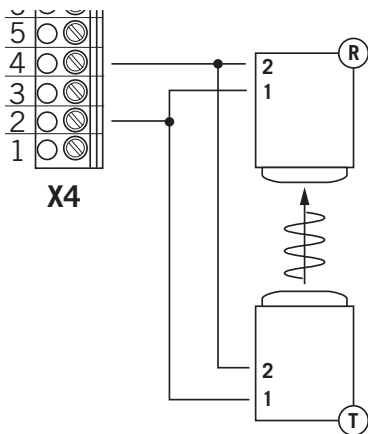

Light barrier 3 wire NPN

without testing parameter LIGHT BARR 1= MOD 2  
with testing parameter LIGHT BARR 1= MOD 4


3.11 / 3

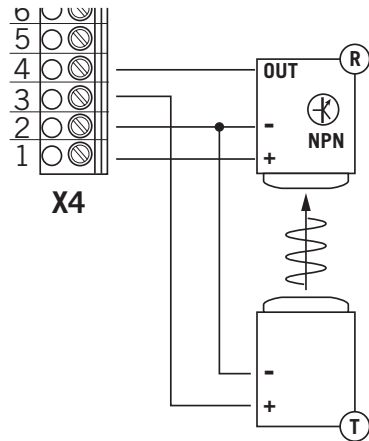

Light barrier 3 wire PNP

without testing parameter LIGHT BARR 1= MOD 3  
with testing parameter LIGHT BARR 1= MOD 5

3.11 / 4

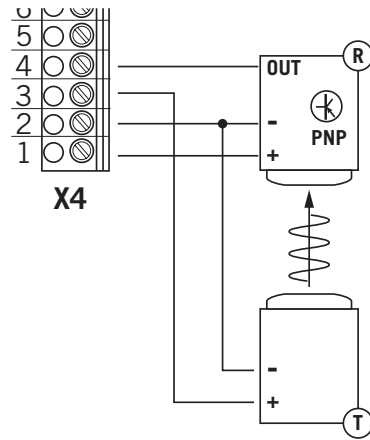

Legend:

R Receiver  
T Transmitter

NOTE:


All light barriers are active in the UP or DOWN direction depending on the setting.  
→ "8.2 Input operating mode" (Parameter LB FUNC 1)

### 3.12 Terminal assignment, relay outputs

Four potential-free relay outputs are available, which can be programmed with a variety of types of function.

→ "8.2 Input operating mode"

#### 3.12 / 1

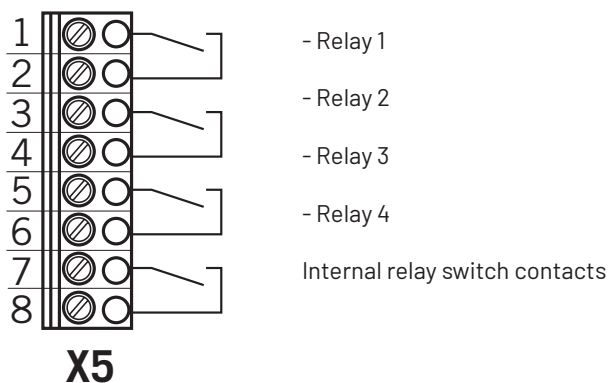

There are four potential-free relay outputs able to take a max. load of 4A at 230 V/1~.

The type of function depends on the parameter setting for the respective relay output in the INPUT operating mode.

### 3.13 Connection of programmable inputs

The controller CS 320 has 3 programmable inputs, for which different functions can be selected.

The type of wiring is determined on the basis of the parameter settings for the individual inputs.

→ "8.2 Input operating mode" (Parameter INPUT 1-3)

#### ! ATTENTION!

**Danger of damage to the circuit board due to incorrect connection!**

Inputs 1, 2 and 3 have different reference potentials and must not be operated from a common potential!


#### Input 1

Optional wiring with NO / NC contacts.

Reference potential 24V-DC

→ "8.2 Input operating mode" (Parameter INPUT 1)

#### 3.13 / 1

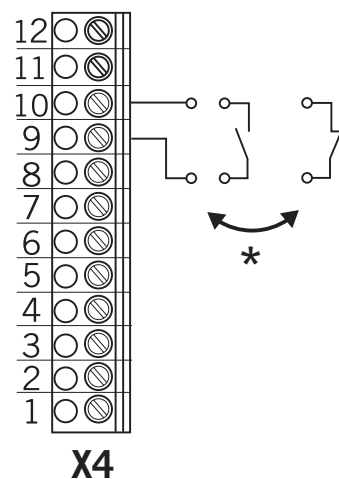

\* optionally


## Input 2

Optional wiring with components on a 8.2 kOhm basis,  
NO / NC contacts and photo sensors.

Reference potential 12V-DC

→ "8.2 Input operating mode" (Parameter INPUT 2)

### 3.13 / 2

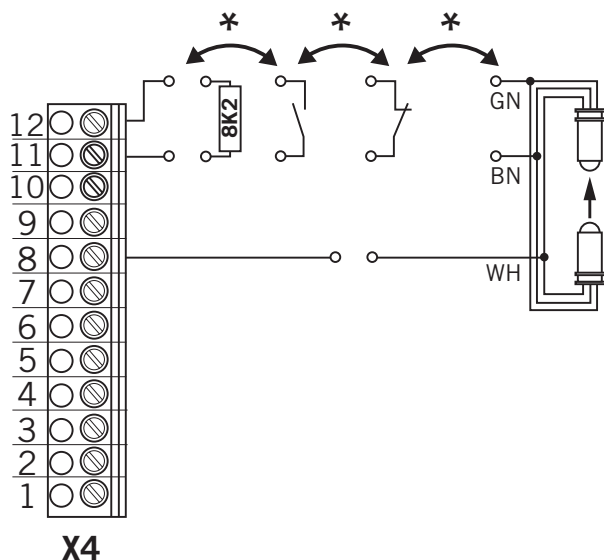

\* optionally

#### Legend:

GN Green  
BN Brown  
WH White

#### NOTE:

Programmable input 2 can also be used for the connection  
of a light grid.

→ "3.9 Light grid connection"

Programmable input 2 is also used as a safety input in accordance  
with EN 12453:2017.

If a resistance value is detected with first commissioning and  
after a reset, the MOD 2 (safety input) is activated automatically.  
Individually connected closing edge protective device 8.2 kOhm  
must be activated manually in this case.

→ "3.14 Safety input per EN 12453"


## Input 3

Connector strip for optional wiring with pluggable week timer,  
pluggable brake monitoring module BWM1 or as connection for  
monitoring an external load contactor and drive brake.

Reference potential 5V-DC

→ "8.2 Input operating mode" (Parameter INPUT 3)

### 3.13 / 3

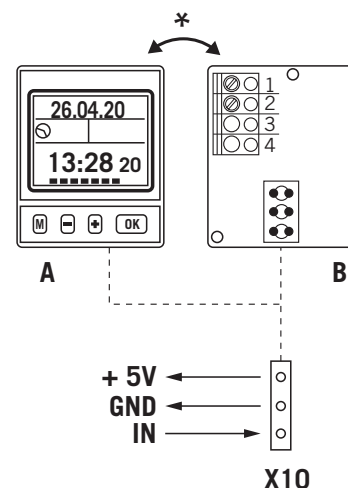

\* optionally

#### A Week timer

The week timer offers a weekly program for opening the door  
system and keeping it open with up to 8 switching times per day.  
While the door is held open, the timer emits a continuous signal  
that prevents the door system from closing.

After the set time interval has expired, this continuous signal  
is switched off and the door system can be closed again, e.g.  
manually via a CLOSE command.

Alternatively, automatic closing is also possible.

For this purpose the parameter OPEN TIME = 1 must be set in the  
input operating mode.

#### B Brake monitoring module BWM1

The brake monitoring module is required for drives with a brake  
connected (relay 4 / MOD 14-16). The module monitors the brake  
function.


#### C Monitoring an external load contactor and drive brake (optional)

→ "3.13 / 5"

For a precise description of the function and connection, refer  
to the separate documentation for the week timer and brake  
monitoring module.

## Connection of the brake monitoring module

3.13 / 4

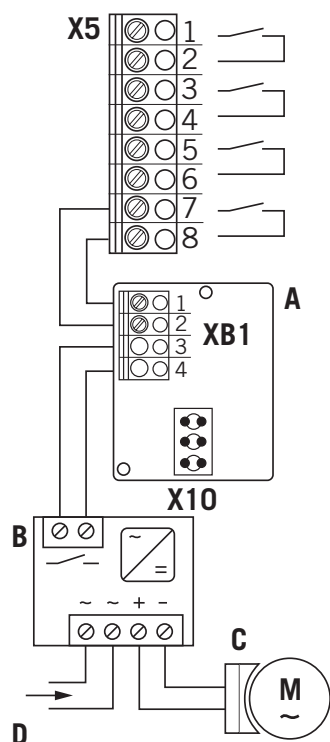

### Legend:

- A Brake monitoring module BWM 1
- B Brake rectifier
- C Drive brake
- D Brake power supply (AC)

### NOTE:

If MOD 14-16 (brake actuation) is set on relay 4, the mode for the brake monitoring module is automatically set at input 3. If a timer is used, this setting must be adapted to set the MOD for the timer at input 3.

Optionally, input 3 can also be used for monitoring an external load contactor and the drive brake.


The parameter INPUT 3 must then be set to MOD 22.

## Connection for monitoring an external load contactor and drive brake (optional)

If the power of the door drive/frequency inverter used exceeds the maximum load capacity of the internal contactor, an external load contactor must be used.

In this case, it is possible to monitor the external load contactor and drive brake with input 3 and therefore guarantee safe operation.

3.13 / 5

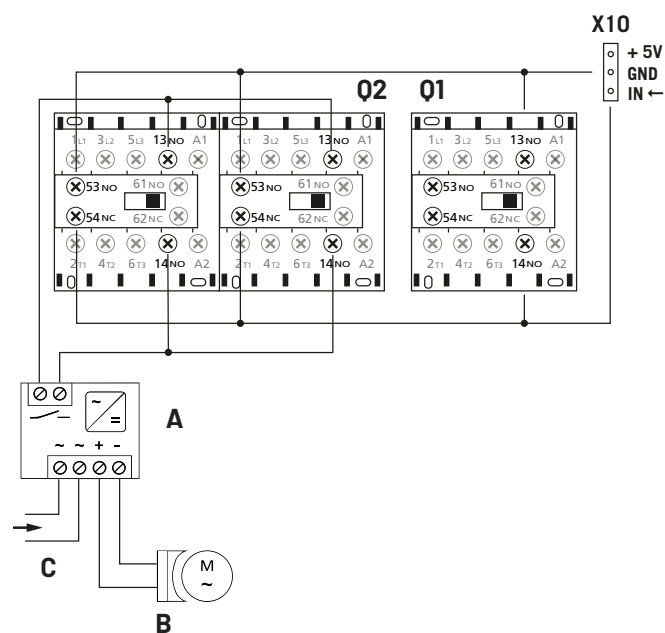

### Legend:

- A Brake rectifier
- B Drive brake
- C Brake power supply (AC)
- Q1 Mains contactor
- Q2 Load contactor

The wiring preparation is carried out in the factory.

### 3.14 Safety input per EN 12453

Increased requirements on the fail-safety of the slip door switch have been part of EN 12453 since 2001. With EN 12453:2017 increased safety requirements (PLc, Cat.2) also apply, for example to slack rope switches and switches of fall protection systems, including the transmission and processing of the signal.

With the setting MOD 2 the programmable INPUT 2 allows the evaluation of these components, which all work with an internal resistance value of 8.2 kOhm. If a fault occurs in one of the components, the system can no longer be operated and the message ERROR STOP appears on the display.


1 – 4 components on a 8.2 kOhm basis can be linked according to the following wiring diagrams. It does not matter which of the respective switches represents the components 1 – 4 here.

\* optionally

- ✓ The tolerance of the individual resistance values must not exceed max. 1%.


#### Connection 4 components

3.14 / 1

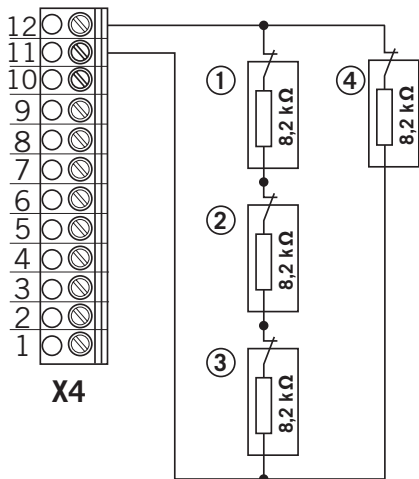


#### Connection 3 components

3.14 / 2

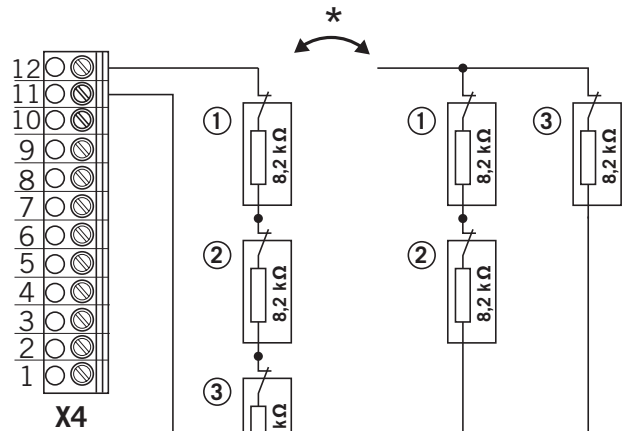


#### Connection 2 components

3.14 / 3

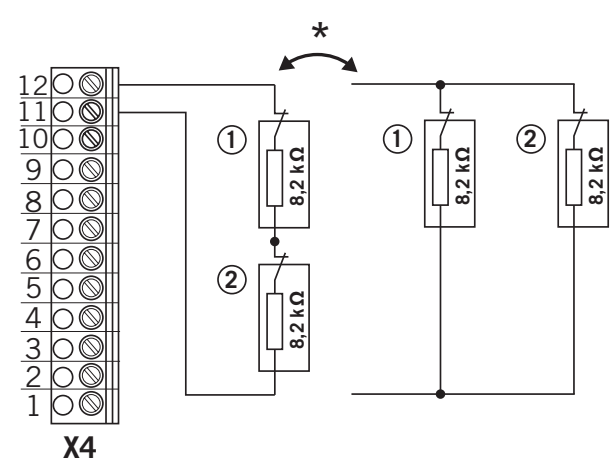

#### Connection 1 component

3.14 / 4

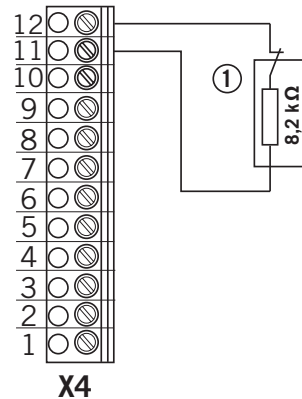

**NOTE:**

With first commissioning and after a reset, input 2 is set to A (self-teaching) once.

If a resistance value is detected, MOD 2 (safety input) is automatically set and the measured value is stored and monitored as a reference for the connected safety-related components. Deviation of the measured value leads to an error message.

If a safety element is subsequently added or removed, the resistance measurement must be performed again. For this purpose the parameter INPUT 2 must be manually reset to A (self-teaching) and the supply voltage must be switched off and on again once. Renewed measurement then takes place.

The components used must either comply with EN ISO 13849-1 PLc/Cat.2 or be approved as a reliable component in order to satisfy the requirements of EN 12453:2017.

Alternatively, the fall protection can also be equipped with an NC contact and integrated in the safety circuit of the controller (X3/1-2). This switch with NC contact must be approved as a reliable component per EN ISO 13849-1. To ensure cross-wire short monitoring, the connection cable must be laid in a protective tube.

### 3.15 Radio receiver, pluggable

2 different pluggable radio receivers can be connected to the controller directly.

#### CS-radio 1-channel, multi-bit, 15 storage spaces

- 868 MHz - art. no. 76616
- 433 MHz - art. no. 76614

Compatible hand-held transmitter:

- RT 52, 28, 29, 31
- Digital 382, 384, 313, 321, 323, 306, 318


#### Digital 991 1-channel, AES 128 Bit, 200 storage spaces

- 868 MHz - art. no. 118726
- 433 MHz - art. no. 118727


Compatible hand-held transmitter:

- Digital 564, 663, 572, 633, 506, 517, 518

#### 3.15 / 1

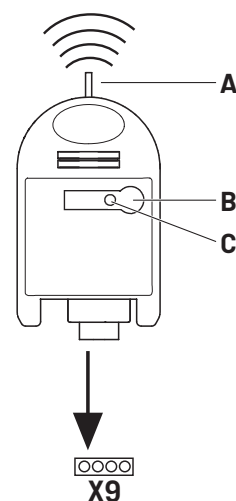

- A Antenna
- B Programming button
- C LED

 For a precise description of the function and connection, refer to the separate documentation for the radio receiver.

## 3.16 CS radio

### Connection

- Plug the radio receiver into connector strip X9.

### Teach transmitter codes

- Press and hold the programming button (B) for longer than 1.6 seconds. The programming mode is activated. The LED (C) flashes.
- Press the channel button of your transmitter. If the radio controller has stored the transmitter code, the LED lights up for approx. 4 seconds.

A total of 15 transmitter codes (hand-held transmitter) can be taught.

If all storage spaces are occupied, the LED flashes very rapidly. Furthermore, it is possible to integrate additional hand-held transmitters through duplication from one hand-held transmitter to the next.

### Targeted deletion of a transmitter code

- Press and hold the programming button (B) for longer than 1.6 seconds. The programming mode is activated. The LED (C) flashes.
- Continue to press and hold the programming button. Erase mode is activated. The LED flashes very quickly.
- Press the desired channel button of your transmitter. If the LED lights up for approx. 4 seconds, the corresponding transmitter code has been deleted.

You can cancel the deletion process by briefly pressing the programming button.

### RESET (completely delete memory)

- Press and hold the programming button (B) for longer than 1.6 seconds. Programming mode is activated. The LED (C) flashes.
- Continue to press and hold the programming button. Erase mode is activated. The LED flashes very quickly.
- Press and hold the programming button for longer than 1.6 seconds. If the LED lights up for approx. 4 seconds, all storage spaces have been deleted.

You can cancel the deletion process by briefly pressing the programming button.

## 3.17 Digital 991

### Connection

- Plug the radio receiver into connector strip X9.

### Teach transmitter codes

- Press and hold the programming button (B) for longer than 1.6 seconds. The programming mode is activated. The LED (C) flashes.
- Press the teach button and then the channel button of your transmitter. If the radio controller has stored the transmitter code, the LED lights up for approx. 2 seconds.

A total of max. 200 transmitter codes (hand-held transmitter) can be taught. If all storage spaces are occupied, the LED flashes very rapidly.

### Targeted deletion of a transmitter code.

- Press and hold the programming button (B) for longer than 1.6 seconds. The programming mode is activated. The LED (C) flashes.
- Continue to press and hold the programming button. Erase mode is activated. The LED flashes very quickly.
- Press the desired channel button of your transmitter. If the LED lights up for approx. 2 seconds, the corresponding transmitter code has been deleted.

You can cancel the deletion process by briefly pressing the programming button.

### RESET (completely delete memory)


- Press and hold the programming button (B) for longer than 1.6 seconds. The programming mode is activated. The LED (C) flashes.
- Continue to press and hold the programming button. Erase mode is activated. The LED flashes very quickly.
- Press and hold the programming button again for longer than 1.6 seconds. If the LED lights up for approx. 2 seconds, all storage spaces have been deleted.

You can cancel the deletion process by briefly pressing the programming button.

### 3.18 Connection of external radio receiver

In addition to the standard connection of an external radio "3.8 / 5" External radio receiver) there is also an additional optional pre-wired, pluggable variant.

3.18 / 1

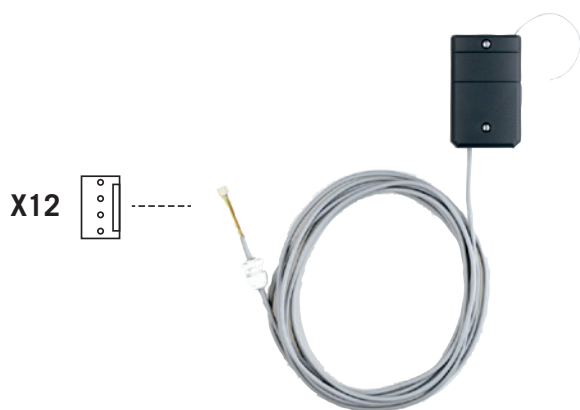


For a precise description of the function and connection, refer to the separate documentation for the BUS modules.

### 3.19 Connection of frequency converter

It is possible to connect a Siemens frequency converter for speed-independent control of the door drive via interface X18.

3.19 / 1

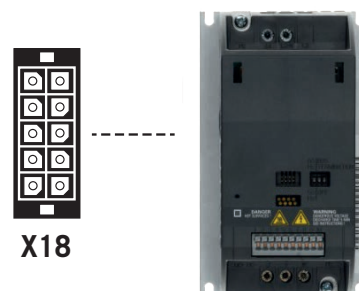

#### **! ATTENTION!**

##### **Property damage due to improper installation!**

When using a frequency converter, the drive, wiring and converter module must be compatible.

- Please contact Marantec technical support.


For a precise description of the function and connection, refer to the separate documentation for the CS 320 FU.

### 3.20 Connection of LCD monitor

Full access to all menu settings and parameters of the controller is possible via the LCD monitor.  
→ "6. Programming"

#### Plug-in base X8

3.20 / 1

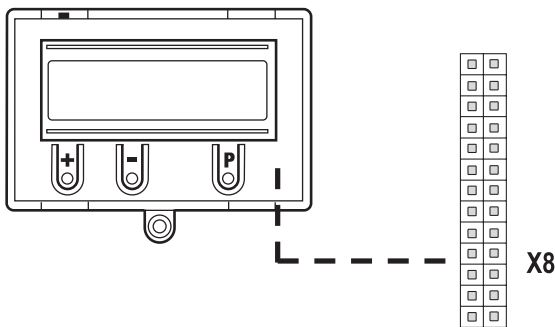

#### ! ATTENTION!

##### Property damage due to improper installation!


The LCD monitor must be plugged in whilst de-energised. Only an LCD monitor from Marantec (art. no. 91447) may be used.

#### ! ATTENTION!

##### Property damage due to improper installation!

The Marantec LED module (art. no. 103239) cannot be combined with the CS 320. Use and commissioning can lead to destruction of the CS 320 circuit board.

3.20 / 2

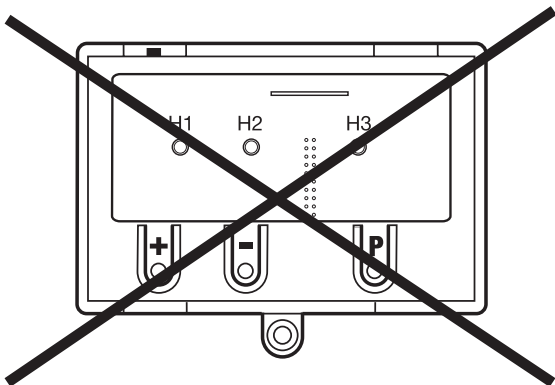

### 3.21 Connection of MS BUS components

Two BUS interfaces are present on the circuit board for connecting different components.

The MS-BUS LCD monitor (#121246) is supplied with a 3 m long connection cable.


The MS-Bus LCD monitor (like the standard LCD monitor) permits full access to all parameter settings.

It is possible to expand functions or realise additional functions with the MS BUS function modules.

- ES module: Evaluation of trap-in protection systems
- I/O module: Input/output expansion
- GV module: Two-way control

#### Connector strip X16 / X17

3.21 / 1

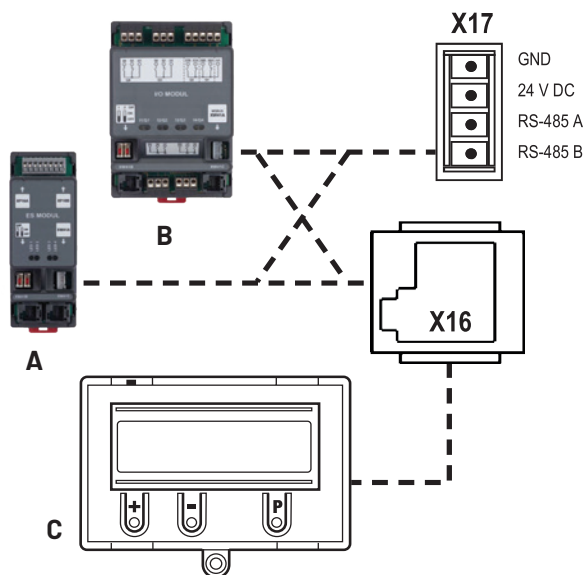

- |   |                        |                          |
|---|------------------------|--------------------------|
| A | ES module              | Connection to X16 or X17 |
| B | I/O module / GV module | Connection to X16 or X17 |
| C | LCD monitor            | Connection to X16 only   |

For a precise description of the function and connection, refer to the separate documentation for the BUS modules.

#### NOTE:

The connector strips X16 and X17 can only be assigned once. However, multiple BUS modules can be connected through special bypass cables. The current consumption must be considered with this.

### 3.22 Transmission system radio


The transmission system radio is a radio system with bi-directional operation. The transmission system facilitates wireless signal transmission from safety equipment to door systems.

The radio connection exists between an internal, pluggable component, which is connected to X20, and an external unit that is mounted on the door leaf.

It is possible to transmit signals from different closing edge systems and/or a safety circuit.

Transmission with spiral cable is thereby omitted.

3.22 / 1

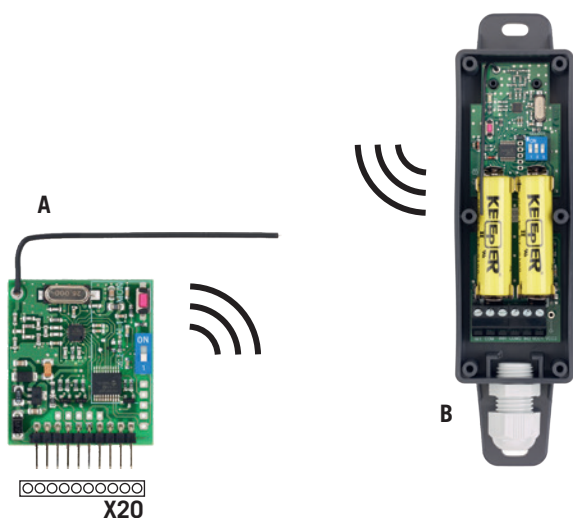

- A Pluggable components. Is connected to connector strip X20 of the CS 320.
- B External unit. Is mounted on the door leaf. The safety strip and safety circuit are connected here.

For a precise description of the function and connection, refer to the separate documentation for the transmission system.

## 4. Initialisation

With first commissioning and after a RESET the following components are automatically detected and programmed:

- End position system
- Closing edge protective device
- Light barrier system
- Input 2 (safety input)

During this process (approx. 60 seconds) the green LED flashes and the display shows "PLEASE WAIT ..." in the top line.

Operation of the system is not possible at this time.

The end position system must be installed before first commissioning.

Components can be retrospectively changed or added via the LCD display or renewed initialisation.

If a component is not yet connected, this is shown in the display with "A".

A search for this component takes place with every subsequent initialisation. If this is detected, the corresponding setting mode is set automatically.

#### Exception:

Input 2 remains inactive (OFF), if a resistance value is not detected with first initialisation.

If a resistor is detected at input 2 with first commissioning, this is evaluated as a safety element and put into operation as a safety input.

→ "8.2 Input operating mode" / Parameter INPUT 2

#### NOTE:

Initialisation serves not only to teach the different system components, but also offers the option of changing the menu language directly.

The pre-set menu language (ENGLISH) appears for 60 seconds as flashing text in the display. With the [+] and [-] buttons it is possible to select the desired language and save this with the [P] button. All texts / messages are subsequently displayed in the selected language.

## 5. Setting the limit positions

### 5.1 Checking the drive / travel direction

#### Change to adjustment mode

- Press the (P) button until ADJUSTMENT appears.

#### Checking the drive direction

- Press the (+) button. The door must open.
  - Press the (-) button. The door must close.
- If this is correct, proceed to setting the limit positions.  
Otherwise, change the direction of travel.

#### Changing the direction of travel

- Press and hold the buttons (+) and (-) simultaneously for more than 5 seconds. The display shows "LEFT ROT FIELD".  
Any limit positions that were saved will have been deleted.  
Proceed with the setting the limit positions.

### 5.2 Setting the mechanical limit switches

#### Change to adjustment mode

- Press the (P) button until ADJUSTMENT appears.

#### Setting the UP and DOWN limit positions



#### REFERENCE

Setting the limit positions is described in the separate documentation for the mechanical limit switches.

- Exit adjustment mode by pressing the (P) button.

#### Note

The system does not exit adjustment mode automatically. Exit adjustment mode by pressing the (P) button in order to change to normal mode.

### 5.3 Setting the electronic end position system using the setting buttons on the circuit board

#### Change to adjustment mode

- Press the button (P) for approx. 5 seconds.  
The red LED flashes slowly.

#### Setting the UP end position

- Drive the door to the desired UP end position by pressing the (+/-) buttons.
- Save end position by pressing the (P) button and additionally also the (+) button.  
The red LED flashes rapidly for approx. 1 second.

#### Setting the DOWN end position

- Drive the door to the desired DOWN end position with the (+/-) buttons.
- Save end position by pressing the (P) button and additionally also the (-) button.  
The red LED flashes rapidly for approx. 1 second.

The adjustment mode is automatically exited.  
The red LED goes out.

#### Note

- The adjustment mode is automatically exited after approx. 7 minutes, if no button is pressed.
- Normal operation is not possible until both end positions have been learned through the initial calibration.
- If an end position is to be corrected, the ADJUSTMENT mode can be exited by pressing the (P) button after learning the special end position.
- After programming the limit switches, the system run-time is learned automatically. The controller functions are the same as in automatic mode.

## 5.4 Setting the electronic limit position system via the LCD monitor

### ATTENTION!

#### **Improper assembly will cause damage or destruction!**

The monitor must be plugged in whilst de-energised. Only a standard LCD monitor (#91447) from Marantec may be used.

#### **Change to adjustment mode**

- Press the (P) button until ADJUSTMENT appears.

#### **Setting the UP end position**

- Drive the door to the desired UP end position by pressing the (+/-) buttons.
- Save end positions by pressing the (P) button and additionally also the (+) button.  
"STORE UP" appears in the display.

#### **Setting the DOWN end position**

- Drive the door to the desired DOWN end position with the (+/-) buttons.
- Save end position by pressing the (P) button and additionally also the (-) button.  
"STORE DOWN" appears in the display.

The adjustment mode is automatically exited.

#### **Note**

- The adjustment mode is automatically exited after approx. 7 minutes, if no button is pressed.
- Normal operation is not possible until both end positions have been learned through the initial calibration.
- If an end position is to be corrected, the ADJUSTMENT mode can be exited by pressing the (P) button after learning the special end positions.
- After programming the limit switches, the system run-time is learned automatically. The display shows TEACH IN RUN. The controller functions are the same as in automatic mode.

## 5.5 Setting the intermediate positions of the electronic limit position system via the LCD monitor

#### **Drive the door to the desired position in automatic mode**

- Drive the door to the desired intermediate positions (INT POS UP or INT POS DOWN) with the (+/-) buttons.

#### **Change to input mode**

- Press the (P) button until INPUT appears.
- Press and hold the buttons (+) and (-) simultaneously for more than 2 seconds. The first parameter appears in the second line of the display.

#### **Save the intermediate UP (INT POS UP) or DOWN (INT POS DOWN) position**

- Press the buttons (+/-) until the parameter INT POS UP or INT POS DOWN appears.  
The value stands at A.
- Press the button (P) to accept the current door position as the intermediate position.
- Save the intermediate position by pressing the (P) button again.

#### **Exit input operating mode**

- Press and hold the buttons (+) and (-) simultaneously for more than 1 second.  
Input is exited.

#### **Change to automatic mode**

- Press the (P) button until AUTOMATIC appears.

#### **Note**

If an intermediate position is to be corrected, the taught value can be changed in the INPUT menu or set to A again, so that a new teach-in can be started.

## 6. Programming


### 6.1 Overview of the LCD monitor

#### ATTENTION!

##### Property damage due to improper installation!

The display must be plugged in whilst de-energised. Only a standard LCD monitor (#91447) from Marantec may be used.

6.1 / 1

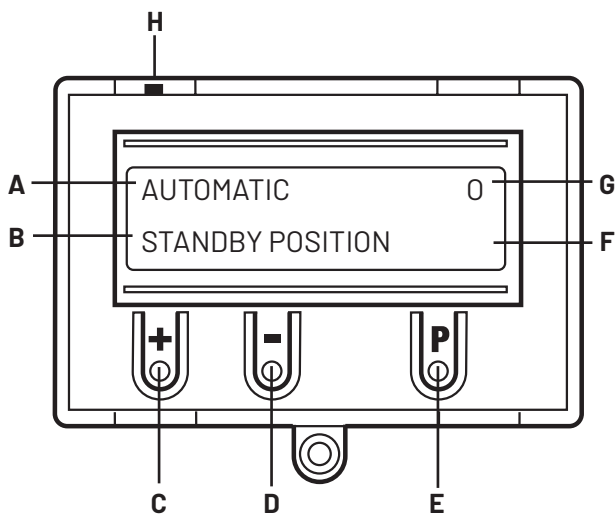

#### Explanation:

- A: Operating mode / diagnostics info
- B: Parameters / diagnostics info
- C: (+) button
- D: (-) button
- E: (P) button
- F: Value/status
- G: Value/status
- H: Jumper

If the jumper H is removed, the (+), (-) and (P) buttons no longer function.

The display continues to function.

After the controller has been switched on, it is in the initialisation phase. The display shows "PLEASE WAIT ...". The controller is not ready for operation. The initialisation phase takes approx. 60 seconds after switching on for the first time.

### 6.2 LCD monitor operating modes

With the LCD monitor, the controller has four operating modes:

1. AUTOMATIC
2. ADJUSTMENT
3. INPUT
4. DIAGNOSIS

The operating modes ADJUSTMENT, INPUT and DIAGNOSIS are automatically exited 7 minutes after the last button was pressed. The controller changes to AUTOMATIC mode.

#### Operating mode 1: AUTOMATIC

The door system is driven in AUTOMATIC mode.

Display:

- Display of the function being carried out
- Display of possible faults

If the "Self-locking" parameter is set to MOD 2-7 or MOD 9 in the input menu, the display switches from AUTOMATIC mode to MANUAL.

#### Operating mode 2: ADJUSTMENT

The UP and DOWN limit positions are set in ADJUSTMENT mode.

#### ATTENTION!

##### Risk of property damage due to improper operation of the controller!

When in ADJUSTMENT mode, there is no shutdown with the electronic limit position system (AWG) upon reaching the limit positions. The door can be damaged by running past the limit positions.

Fine adjustment can be implemented in INPUT mode.

Display:

- Displays the limit position value

#### Operating mode 3: INPUT

The values of various parameters can be changed in INPUT mode.

Display:

- Displays the selected parameter
- Displays the status/value set

#### Operating mode 4: DIAGNOSIS

Door-specific checks can be interrogated in DIAGNOSIS mode.

Display:

- Display of the check
- Display of the check status

## 6.3 Expert menu

Under factory settings (standard), only a few parameters appear in the INPUT operating mode, which can be adjusted by the operator. These setting parameters reflect the most frequently applied requirements for an industrial door system and are sufficient for commissioning in a standard situation.

The last item in this list is the "EXPERT MENU" parameter. This is always set to OFF.

OFF: Limited number of parameter settings:

- Menu language
- INT POS UP
- OPEN TIME
- FOREWARNING TIME
- FAST CLOSE
- REVERSE OFF
- INPUT 1
- SELF LOCK
- EXPERT MENU

Setting the EXPERT MENU parameter to ON activates the expert mode. It is now possible to call up and set all input menu parameters.

→ "8.2 Input operating mode"

### Note

- The expert mode is automatically exited after approx. 7 minutes, if no button is pressed. Now, only the limited selection of parameters is once again available until the EXPERT MENU parameter is set to ON again.
- The same applies to switching off the power. This once again sets the EXPERT MENU parameter to OFF.

## 6.4 RESET

The RESET function can be used to reset the control parameters to the pre-selected factory settings.

→ "8.2 Input operating mode"

### FACTORY SETTING parameter

Selection of the parameter set that should be reset with a RESET.

It is possible to implement different types of reset whereby more or less settings are reset.

→ "8.2 Input operating mode"

### RESET parameter

*Part reset 1 :*

All parameter settings are reset, apart from the settings for the frequency converter (only with CS 320 FU).

*Part reset 2 :*

All parameter settings are reset, apart from the settings for the limit positions and the detected limit position system.

*Full reset :*

Everything is reset to factory settings.

→ "6.5 RESETTING the controller with LCD monitor"

→ "6.6 RESETTING the controller without LCD monitor"

## 6.5 RESETTING the controller with LCD monitor

### Changing to the INPUT operating mode

- Press (P) button until INPUT appears.
- Press and hold the buttons (+) and (-) simultaneously for more than 2 seconds to activate the input.

### Resetting the controller

- Press the buttons (+/-) until the RESET parameter appears. The value stands at "OFF".
- Press the button (+) until MOD 3 appears.
- Press (P) button to start the RESET.

The system runs through the initialisation phase and all connected safety components and the limit position system are automatically taught.

### Change to adjustment mode

→ "5.4 Setting the electronic limit position system via the LCD monitor"

### Change to automatic mode

- Press (P) button until AUTOMATIC appears.

## 6.6 RESETTING the controller without LCD monitor


- Interrupt the supply voltage.
- Press and hold the circuit board buttons (P) and (-) at the same time.
- Switch the supply voltage back on.
- Press and hold the circuit board buttons (P) and (-) at the same time until the red LED (H6) flashes rapidly.
- Release the circuit board buttons (P) and (-).

The system then runs through the initialisation phase (approx. 60 seconds).





During initialisation, it is not possible to program or operate the system.

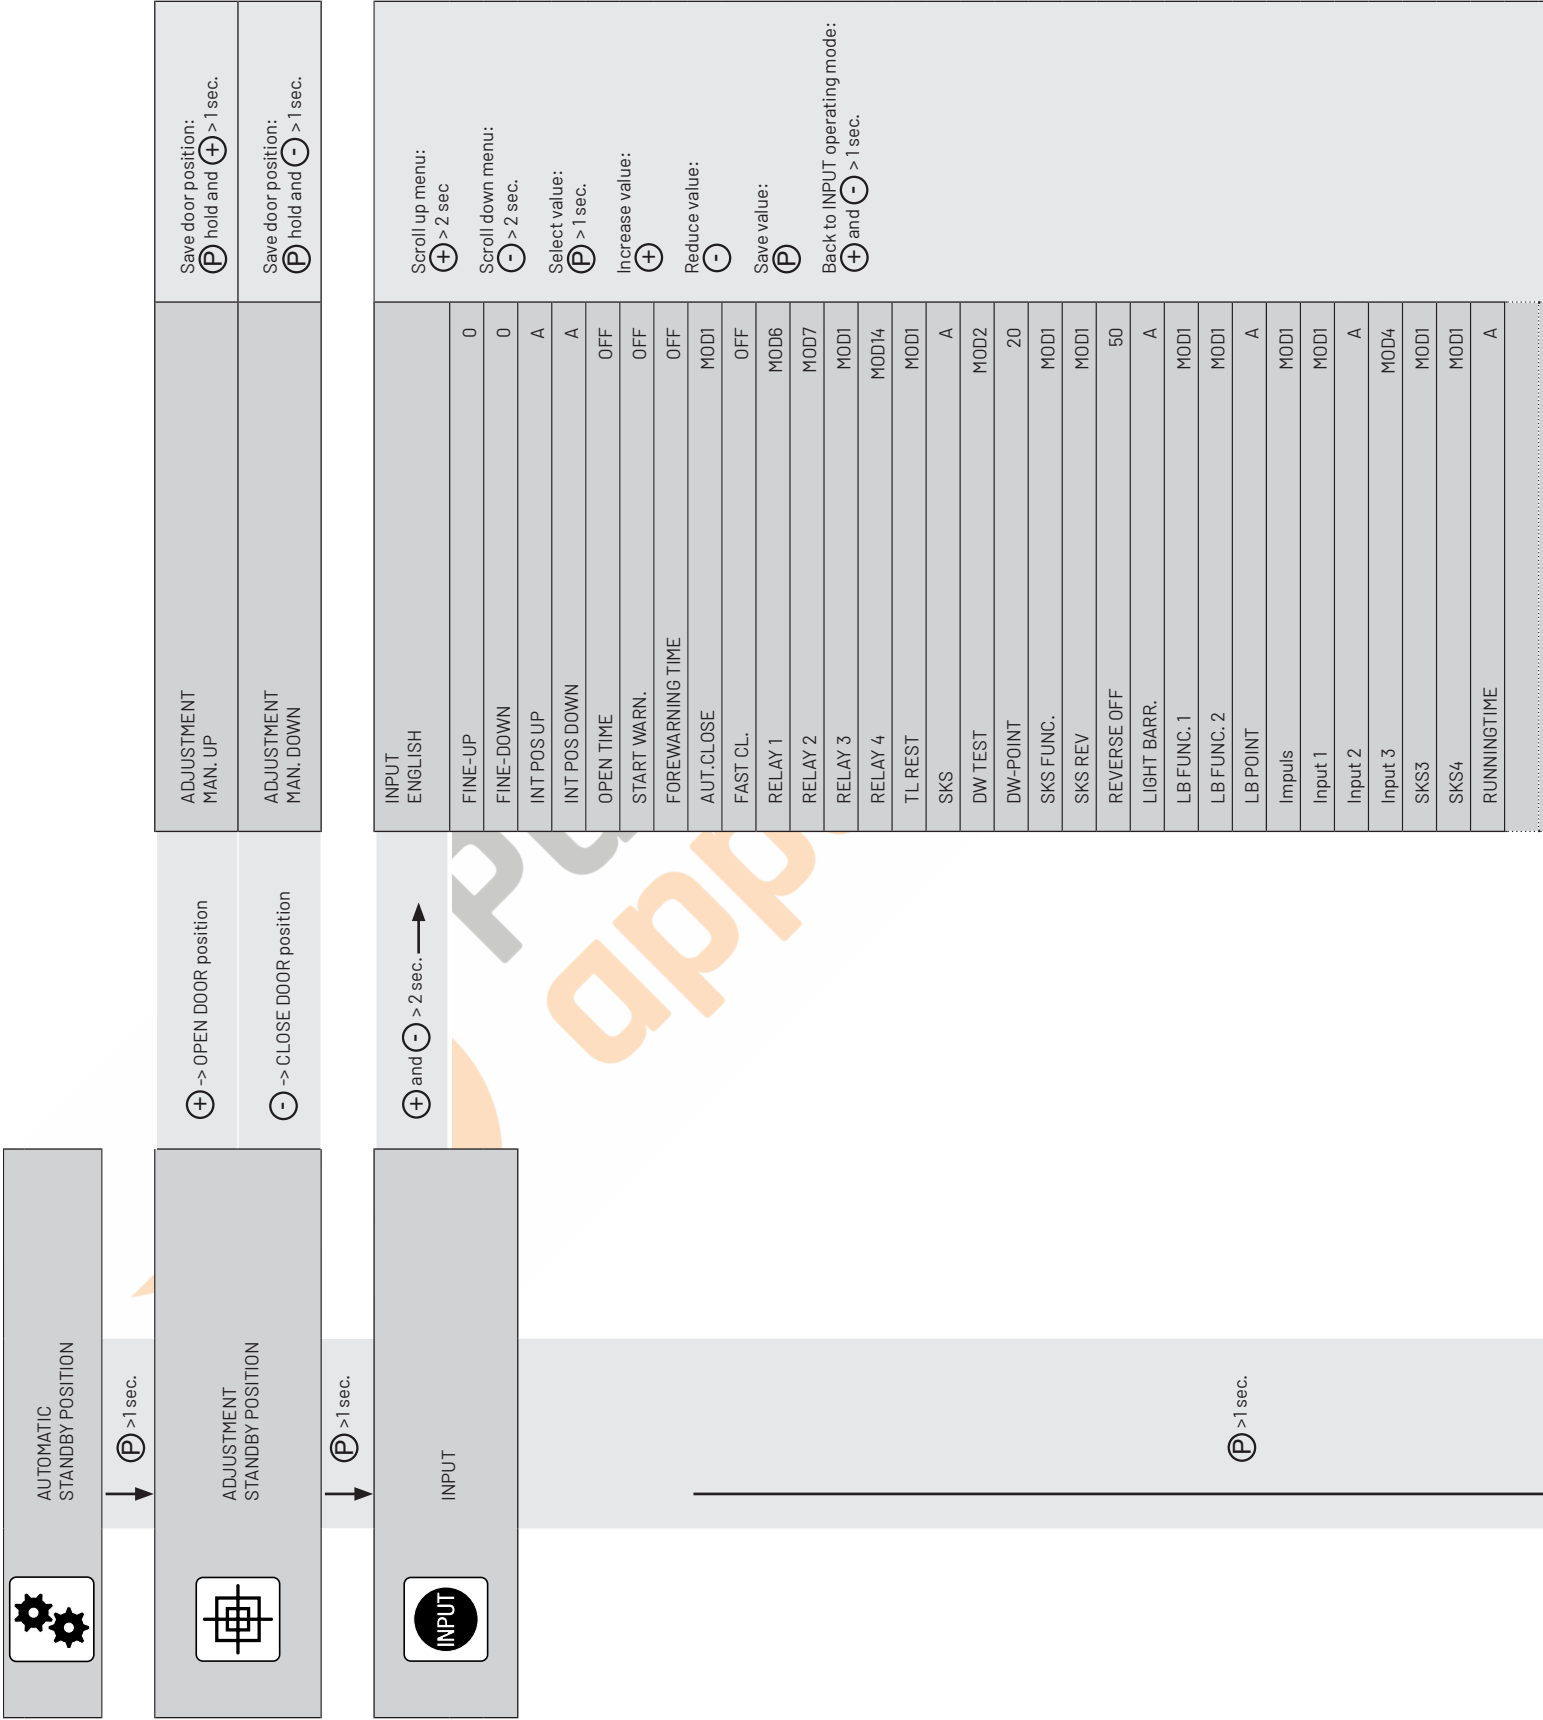After initialisation is complete, the limit positions are deleted and all parameters are reset to factory settings.

7. Navigator (only LCD monitor)




REVERS.TIME	300
LIMIT SW.	A
SELF LOCK.	MOD1
POWER	10
RESET MSBUS	OFF
RESTART	OFF
FACTORY SET.	99
RESET	OFF
PIN-NO.2	1111
SERVICE	OFF
INVERTER	MOD1
EXPERT MENU	OFF

	DIAGNOSIS	
	<p>Scroll up menu:   &gt; 2 sec</p> <p>Scroll down menu:   &gt; 2 sec.</p> <p>Back to AUTOMATIC operating mode:  </p> <p>Only interrogation possible</p>	
UPPER SWITCH	ON	ON
LOWER SWITCH	ON	ON
UP-SWITCH	OFF	OFF
DOWN-SWITCH	OFF	OFF
INPUT 1	OFF	OFF
INPUT 2 / SKS OP. 2 / SAFE. 2	- / ON / OFF	- / ON / OFF
INPUT 3	- / OFF	- / OFF
SKS	ON	ON
SKS 3 / SAFE: 3	- / ON	- / ON
SKS 4 / SAFE: 4	- / ON	- / ON
IMPULS	OFF	OFF
TIMER	OFF	OFF
LIGHT BARR.	ON	ON
LIGHT BARR. 2	ON	ON
SAFETY CIRC.	ON	ON
STOP	ON	ON
ROT FIELD	Right	Right
CYCLE	000000	000000
SERVICE	OFF	OFF
AWG	0000	0000
C.STOP	0000	0000
C.OPENED	0000	0000
C.O.BTN	0000	0000
Error memory	Error ...	Error ...

## 8. Functional overviews

### 8.1 Automatic mode



Display	Description
AUTOMATIC TEACH IN RUN	The run-time is taught automatically.
AUTOMATIC OPENING	The door is currently in the opening phase.
AUTOMATIC CLOSING	The door is currently in the closing phase.
AUTOMATIC STANDBY POSITION	The door is currently in an intermediate position.
AUTOMATIC STANDBY POSITION	0 The door is in the UP limit position.
AUTOMATIC STANDBY POSITION	o The door is in the Sect. UP position ("intermediate position UP" parameter).
AUTOMATIC STANDBY POSITION	U The door is in the DOWN limit position.
AUTOMATIC STANDBY POSITION	u The door is in the Sect. DOWN position ("intermediate position DOWN" parameter).
AUTOMATIC STANDBY POSITION	r The door is in the reverse shut-off position.
AUTOMATIC STOP	The command button STOP (cover keypad CS) was pressed for longer than 5 seconds.
AUTOMATIC PERMANENT INPUT	When the power is switched off, an active signal (NO) is detected at the UP, DOWN, pulse or programmable input 1 (with use of I/O BUS modules, also inputs 11-14 or 15-18). This always constitutes an impermissible state. The cause is probably a defective component that must be replaced. Exception: The signal comes from a pluggable timer or the programmable input 1 if this is set as a timer function (MOD 4), or fire alarm function (MOD 5-9, 13).
AUTOMATIC CRASH SENSOR	The door system crash sensor has been activated (connection to X4/9-10, programmable input 1, MOD 18). A vehicle (e. G. forklift truck) has possibly driven into the closed door.
SERVICE STANDBY POSITION	The pre-selected service interval has been reached.

If the "Self-locking" parameter is set to MOD 2-7 or MOD 9 in the input menu, the display switches from AUTOMATIC mode to MANUAL.

Display	Description
MANUAL MAN. UP	The door is currently in the opening phase.
MANUAL MAN. DOWN	The door is currently in the closing phase.
MANUAL STANDBY POSITION	The door is currently in an intermediate position.

## 8.2 Input operating mode



Function	Description	Adjustment options	Factory setting
DEUTSCH	<p>Selection of the menu language.</p> <p><b>Only with LCD monitor:</b>            The menu language can also be selected during the initialisation phase (during first commissioning or after a reset). The factory pre-set menu language (ENGLISH) appears here for approx. 60 seconds as flashing text in the display. At this time it is possible to change the menu language during the initialisation phase.            You can scroll through the language choices by pressing the [ + ] or [ - ] buttons. Save the desired language with the [ P ] button.            All texts / messages are subsequently displayed in the selected language.</p>	DEUTSCH ENGLISH FRANCAIS NEDERLANDS DANSK ESPANOL POLSKI CESKY ITALIANO SUOMI SVENSKA TÜRKÇE NORSK MAGYARUL	DEUTSCH
FINE-UP	<p>Fine adjustment of the UP limit position in relation to the saved limit position (UP SWITCH).            Only visible with electronic limit position system.</p>	-250 – 250	0
FINE-DOWN	<p>Fine adjustment of the DOWN limit position in relation to the saved limit position (DOWN SWITCH).            Only visible with electronic limit position system.</p>	-250 – 250	0
INT POS UP	<p>Setting the switching point UP intermediate position (Sect. UP) in relation to the saved limit position UP. Display as a negative value.            Only visible with electronic limit position system.</p> <p>Automatic teach-in of the position:            → "5.5 Setting the intermediate positions of the electronic limit position system via the LCD monitor"</p>	A (teaching) -1 – DOWN SWITCH	A
INT POS CLOSED	<p>Setting the switching point DOWN intermediate position (Sect. DOWN) in relation to the saved limit position DOWN. Display as a positive value.            Only visible with electronic limit position system.</p> <p>Automatic teach-in of the position:            → "5.5 Setting the intermediate positions of the electronic limit position system via the LCD monitor"</p>	A (teaching) 1 – UP SWITCH	A
OPEN TIME	<p>After opening, the door automatically travels in the DOWN direction after the set value has passed.</p> <p><b>NOTE:</b>            Pressing the DOWN button during the open time starts the closing operation immediately.            Pressing the UP or STOP button during the open time restarts the time.            If an automatic closing operation is interrupted by the closing edge protective device, the open time is added to every new attempt. After 3 attempts, automatic closing is cancelled.</p>	OFF, 1 – 3600 seconds	OFF
START WARN.	<p>The start-up warning is implemented before <b>every</b> run.</p>	OFF, 1 – 10 seconds	OFF

Function	Description	Adjustment options	Factory setting
FORE-WARNING TIME	<p>The warning time is activated before automatic downward travel or closing through pulse operation.</p> <p><b>NOTE:</b> This time is added to the start-up warning</p>	OFF, 1 – 300 seconds	OFF
AUT.CLOSE	<p>Automatic closing after the open time has elapsed.</p> <p>MOD 1: AUT.CLOSE from UP limit position MOD 2: AUT.CLOSE from Sect. UP limit position MOD 3: AUT.CLOSE from UP limit position and Sect. UP limit position MOD 4: AUT.CLOSE from <i>all</i> door positions</p>	MOD 1 – MOD 4	MOD 1
FAST CL.	<p>Premature closing after passing through the light barrier.</p> <p><b>PREREQUISITE:</b> Connection of a light barrier at pass through-height and setting of an open time &gt; 0. With open time = 0 the door closes directly after passing through the light barrier.</p> <p>MOD 2: The open time is cancelled after passing through the light barrier (system shuts immediately). If passing through the light barrier occurs during opening, the programmed open time is ignored and the door closes directly.</p> <p>MOD 3: The open time is cancelled after passing through the light barrier for a minimum duration of 2 seconds (personnel suppression). If passing through the light barrier occurs during opening, the programmed open time is ignored and the door closes directly.</p> <p>MOD 4: Like MOD 2, but the light barrier does not function during opening.</p>	OFF, MOD 2 – MOD 4	OFF
RELAY 1	<p>All 4 relays can be assigned a relay mode from 1 – 13, 17 – 19, 21 – 46, 49 – 51 and 60 – 62. Relay 4 can also be programmed with MOD 14 – 16. Further explanations: → “8.3 Explanations of the relay modes:”</p>	MOD 1 – MOD 13 MOD 17 – MOD 19 MOD 21 – MOD 46 MOD 49 – MOD 51 MOD 60 – MOD 62	MOD 6
RELAY 2	<p>MOD 1: (Red traffic light inside 1) forewarning – flashing, door running – illuminated MOD 2: (Red traffic light inside 2) forewarning – flashing, door running – flashing MOD 3: (Red traffic light inside 3) forewarning – illuminated, door running – illuminated MOD 4: Pulse signal with UP command from inside MOD 5: Fault message</p>	MOD 1 – MOD 13 MOD 17 – MOD 19 MOD 21 – MOD 46 MOD 49 – MOD 51 MOD 60 – MOD 62	MOD 7
RELAY 3	<p>MOD 6: UP limit position MOD 7: DOWN limit position MOD 8: UP limit position negated MOD 9: DOWN limit position negated MOD 10: Intermediate position UP MOD 11: Intermediate position DOWN MOD 12: Intermediate position DOWN to end position DOWN MOD 13: Magnetic lock function MOD 14: Brake (closed-circuit current principle) MOD 15: Brake (open-circuit current principle) MOD 16: Brake (closed-circuit current principle) applied in UP end position MOD 17: SKS actuated or test error MOD 18: (Red traffic light 4) forewarning – flashing, door running – off MOD 19: Intermediate position UP to end position UP</p>	MOD 1 – MOD 13 MOD 17 – MOD 19 MOD 21 – MOD 46 MOD 49 – MOD 51 MOD 60 – MOD 62	MOD 1

Function	Description	Adjustment options	Factory setting
RELAY 4	<p>MOD 21: Test of the trap-in protection before opening (additional module required)</p> <p>MOD 22: Activation of transmission system radio 1 and 3, or testing light grid</p> <p>MOD 23: (Green traffic light) limit position UP - illuminated, forewarning - OFF, door running - OFF*</p> <p>MOD 24: Capacitor switching for sectional door drives 230V/1~</p> <p>MOD 25: Courtyard light function, 2 minutes illuminated after UP/pulse - command</p> <p>MOD 26: Activation of transmission system radio 2</p> <p>MOD 27: Pulse signal after reaching UP end position</p> <p>MOD 28: Relay general OFF</p> <p>MOD 29: Door drives open</p> <p>MOD 30: Door drives closed</p> <p>MOD 31: Service, continuous signal after reaching the set service interval</p> <p>MOD 32: Battery operation</p> <p>MOD 33: No battery operation</p> <p>MOD 34: BMA signal (fire alarm signal active)</p> <p>MOD 35: Light barrier in function</p> <p>MOD 36: Locking cylinder slip door</p> <p>MOD 37: Testing stop signal transmission system radio 1 and 3</p> <p>MOD 38: Testing light grid 2 (input 2)</p> <p>MOD 39: Error LED</p> <p>MOD 40: Pulse signal with UP command from outside</p> <p>MOD 41: Test transmission system radio 4 in UP direction</p> <p>MOD 43: Drive moving</p> <p>MOD 44: (Red traffic light inside + outside) DOWN door movement from intermediate position DOWN - flashing UP door movement - off</p> <p>MOD 45: Closing edge in function</p> <p>MOD 46: Controller in operating mode ADJUSTMENT</p> <p>MOD 49: Testing presence and movement sensors (NC)</p> <p>MOD 50: Notification crash sensor triggered (Only in conjunction with input mod 18)</p> <p>MOD 51: Notification gap bridging active (Only in conjunction with input mod 27)</p> <p>MOD 60: (Red traffic light outside 1) forewarning - flashing, door running - illuminated</p> <p>MOD 61: (Red traffic light outside 2) forewarning - flashing, door running - flashing</p> <p>MOD 62: (Green traffic light outside) limit position UP - illuminated, forewarning/door running - off</p>	<p>MOD 1 - MOD 19</p> <p>MOD 21 - MOD 46</p> <p>MOD 49 - MOD 51</p> <p>MOD 60 - MOD 62</p>	MOD 43
TL REST	<p>Switch traffic lights</p> <p>MOD 1: off in standby position</p> <p>MOD 2: on in standby position</p> <p>MOD 3: off after 5 minutes when in standby position</p>	MOD 1 - MOD 3	MOD 1

Function	Description	Adjustment options	Factory setting
SKS	MOD 1: OSE (photo sensor) MOD 2: 8.2kΩ (electric contact strip) MOD 3: DW (pressure wave strip) as NC with testing MOD 4: Light grid OSE without testing MOD 5: Light grid SSR or PNP with testing MOD 6: Light grid SSR or PNP without testing MOD 7: 2-wire OSE (photo sensor with 2 connection wires)  <b>NOTE:</b> MOD4, MOD5 and MOD6 must be set manually when using a light grid. - Without addition of the open time (if programmed) after interruption of the light grid during the automatic closing. - Without switch-off of the function "Automatic closing" after 3 interruptions in succession.	A (teaching) MOD 1 – MOD 7	A
DW TEST	Activation and deactivation of the test function for the connected pressure wave strip. Only appears when setting parameter SKS = MOD 3. MOD 1: Test OFF MOD 2: Test ON	MOD 1 – MOD 2	MOD 2
DW-POINT	Point at which the connected pressure wave strip (X4 / 5+6) is tested. Only appears when setting parameter SKS = MOD 3. Setting in increments (only AWG), starting from bottom limit switch-off point. In the case of systems with mechanical limit switches, the supplementary limit switch DOWN serves as a DW-Point.	0 – 1000	20
SKS FUNC.	MOD 1: Stop + reversing MOD 2: Stop + rev for 2 seconds	MOD 1 – MOD 2	MOD 1
SKS REV	MOD 1: Stop + reversing between limit position UP and reversing point Stop between reversing point and limit position DOWN → for vertically closing doors MOD 2: Stop + reversing between limit position UP reversing point No action between reversing point and limit position DOWN → for vertically closing doors with leading light barrier MOD 3: Stop + reversing between limit position UP and limit position DOWN → for horizontally closing doors and systems with mechanical limit switches without pre-limit switch  <b>NOTE:</b> In the case of systems with mechanical limit switches the supplementary limit switch DOWN serves as reversing point.	MOD 1 – MOD 3	MOD 1
REVERSE OFF	Reversing point. Point at which the reversing of the door is switched off. Only appears with systems with an electronic limit position system (AWG). Setting in increments, starting from bottom limit switch-off point. In the case of systems with mechanical limit switches, the supplementary limit switch DOWN serves as reversing point.	A (teaching) 1 – 1000	50



Function	Description	Adjustment options	Factory setting																														
LIGHT BARR. 1	<p>Light barrier 1, with or without testing, mounted in passage area of the door. Connection to X4 / 1-4. The respective system connected is automatically detected and taught ➔ Wiring diagrams “3.10 Connection of closing edge protective device 1” on page 17</p> <table><tr><td>MOD 1:</td><td>2-wire-system (Marantec)</td><td>with testing</td></tr><tr><td>MOD 2:</td><td>3-wire-system NPN</td><td>without testing</td></tr><tr><td>MOD 3:</td><td>3-wire-system PNP</td><td>without testing</td></tr><tr><td></td><td></td><td>4-wire-system NC contact without testing</td></tr><tr><td>MOD 4:</td><td>3-wire-system NPN</td><td>with testing</td></tr><tr><td>MOD 5:</td><td>3-wire-system PNP</td><td>with testing</td></tr><tr><td></td><td></td><td>4-wire-system NC contact with testing</td></tr></table> <p><b>NOTE:</b> If a 3- or 4-wire-system is operated with testing, the respective MOD (4 or 5) must be set manually.</p>	MOD 1:	2-wire-system (Marantec)	with testing	MOD 2:	3-wire-system NPN	without testing	MOD 3:	3-wire-system PNP	without testing			4-wire-system NC contact without testing	MOD 4:	3-wire-system NPN	with testing	MOD 5:	3-wire-system PNP	with testing			4-wire-system NC contact with testing	A (teaching) MOD 1 – MOD 5	A									
MOD 1:	2-wire-system (Marantec)	with testing																															
MOD 2:	3-wire-system NPN	without testing																															
MOD 3:	3-wire-system PNP	without testing																															
		4-wire-system NC contact without testing																															
MOD 4:	3-wire-system NPN	with testing																															
MOD 5:	3-wire-system PNP	with testing																															
		4-wire-system NC contact with testing																															
LB FUNC. 1	<p>Function of the light barrier 1 in passage area of the door.</p> <table><tr><td></td><td><b>DOWN door movement</b></td><td><b>UP door movement</b></td></tr><tr><td>MOD 1:</td><td>Stop + reversing</td><td>No action</td></tr><tr><td>MOD 2:</td><td>Stop + rev</td><td>No action</td></tr><tr><td>MOD 3:</td><td>STOP</td><td>No action</td></tr><tr><td>MOD 4:</td><td>STOP</td><td>STOP</td></tr><tr><td>MOD 5:</td><td>Stop + reversing</td><td>Ride-along suppression (UP door movement only possible if the light barrier is clear).</td></tr><tr><td>MOD 6:</td><td>No action</td><td>Stop + reversing</td></tr><tr><td>MOD 7:</td><td>No action</td><td>Stop + rev</td></tr><tr><td>MOD 8:</td><td>No action</td><td>Stop</td></tr><tr><td>MOD 9:</td><td>Ride-along suppression (DOWN door movement only possible, if the light barrier is clear).</td><td>Stop + reversing</td></tr></table>		<b>DOWN door movement</b>	<b>UP door movement</b>	MOD 1:	Stop + reversing	No action	MOD 2:	Stop + rev	No action	MOD 3:	STOP	No action	MOD 4:	STOP	STOP	MOD 5:	Stop + reversing	Ride-along suppression (UP door movement only possible if the light barrier is clear).	MOD 6:	No action	Stop + reversing	MOD 7:	No action	Stop + rev	MOD 8:	No action	Stop	MOD 9:	Ride-along suppression (DOWN door movement only possible, if the light barrier is clear).	Stop + reversing	MOD 1 – MOD 9	MOD 1
	<b>DOWN door movement</b>	<b>UP door movement</b>																															
MOD 1:	Stop + reversing	No action																															
MOD 2:	Stop + rev	No action																															
MOD 3:	STOP	No action																															
MOD 4:	STOP	STOP																															
MOD 5:	Stop + reversing	Ride-along suppression (UP door movement only possible if the light barrier is clear).																															
MOD 6:	No action	Stop + reversing																															
MOD 7:	No action	Stop + rev																															
MOD 8:	No action	Stop																															
MOD 9:	Ride-along suppression (DOWN door movement only possible, if the light barrier is clear).	Stop + reversing																															
LB FUNC. 2	<p>Function of the light barrier 2 in passage area of the door. Only appears when setting parameter INPUT 1= MOD 15. Connection only as NC contact via programmable input 1 (X4 / 9+10). Selection mode analogous to the settings under LB FUNC. 1</p>	MOD 1 – MOD 9	MOD 1																														
LB POINT	<p>Between limit position DOWN and LB POINT, the light barrier 1 (X4 / 1-4) is not evaluated. Setting in increments, starting from bottom limit switch-off point. Only appears with systems with an electronic limit switch.</p> <p><b>NOTE:</b> At the first approach during adjustment, this point is automatically detected, provided that light barrier 1 is mounted in the door frame and remains interrupted during the downward travel from this point to the limit position DOWN.</p>	A (teaching) 1 – UP SWITCH	A																														

Function	Description	Adjustment options	Factory setting
Impuls	<p>Selection of a function that should be assigned to the impuls button (X3 / 7+8).</p> <p>MOD 1: UP - STOP - DOWN - STOP - UP ... (sequential control)  MOD 2: UP when door is stationary / no action during UP movement  Stop and run open with DOWN movement  MOD 3: UP when door is stationary / STOP with door movement  MOD 4: UP when door is stationary / no action with door movement  MOD 5: UP when door is stationary / DOWN from UP limit position</p>	MOD 1 – MOD 5	MOD 1
Input 1	<p>Selection of a function that should be assigned to input 1(X4 / 9+10).</p> <p>MOD 1: Button Sect. UP ..... <b>NO</b>  MOD 2: Switch Sect. UP ..... <b>NO</b>  MOD 3: Switch auto CL..... <b>NO</b>  MOD 4: External CLOCK (permanent UP)..... <b>NO</b>  MOD 5: Switch BMA 3 (Sect. opening) ..... <b>NO</b>  MOD 6: Switch BMA 1 (emergency closing) ..... <b>NO</b>  MOD 7: Switch BMA 1 (emergency closing) ..... <b>NC</b>  MOD 8: Switch BMA 2 (emergency opening) ..... <b>NO</b>  MOD 9: Switch BMA 2 (emergency opening) ..... <b>NC</b>  MOD 10: Button ventilation function (Sect. opening) ..... <b>NO</b>  MOD 11: Button automatic closing ..... <b>NO</b>  MOD 12: Laser scanner (height detection) ..... <b>NO</b>  MOD 13: Switch BMA 3 (Sect. opening) ..... <b>NC</b>  MOD 14: Slip door locking ..... <b>NO</b>  MOD 15: Light barrier 2 ..... <b>NC</b>  MOD 16: Forewarning switch ..... <b>NO</b>  MOD 17: Impuls button ..... <b>NO</b>  MOD 18: Crash sensor ..... <b>NC</b>  MOD 19: Lock operation commands via LCD monitor ..... <b>NC</b>  MOD 22: Monitoring an external load contactor ..... <b>NO</b>  MOD 25: External clock (part-open)  MOD 26: Stop command ..... <b>NO</b>  MOD 27: Gap bridging (in conjunction with RS30x)  MOD 30: UP switch inside ..... <b>NO</b>  MOD 31: UP switch outside ..... <b>NO</b>  MOD 32: DOWN switch ..... <b>NO</b>  (only active with functioning closing edge protective device  and functioning light barrier 1. No function in dead-man's  operation.)</p>	MOD 1 – MOD 19 MOD 22 MOD 25 – MOD 27 MOD 30 – MOD 32	MOD 1



Function	Description	Adjustment options	Factory setting
INPUT 2	<p>Selection of a function that should be assigned to input 2 (X4 / 11+12).</p> <p>OFF: NOT active</p> <p>MOD 2: Safety switching with resistance evaluation. .... <b>xx Ω</b></p> <p>MOD 3: Switching strip – active in UP direction ..... <b>8.2 kΩ</b> Stops and reverses with actuation</p> <p>MOD 4: Switching strip – active in UP direction ..... <b>8.2 kΩ</b> Stop and rev with actuation</p> <p>MOD 5: Battery operation ..... <b>NO</b></p> <p>MOD 6: Radar movement detector (height detection). .... <b>NO</b></p> <p>MOD 7: Light grid 2 (SSR / PNP) with testing. .... <b>NC</b></p> <p>MOD 9: Safety element – STOP with deviation ..... <b>OSE</b></p> <p>MOD 10: Switching strip – active in UP direction ..... <b>OSE</b> Stops and reverses with actuation</p> <p>MOD 11: Switching strip – active in UP direction ..... <b>OSE</b> Stop and rev (2 sec.) with actuation</p> <p>MOD 12: Light grid 2 without testing ..... <b>OSE</b></p> <p>With first commissioning and after a reset, input 2 is set to A – self-teaching once. If a resistance value is detected, MOD 2 (safety input 5.14) is automatically set and the measured value is stored and monitored as a reference for the connected safety-related components. A single switching strip 8.2 kΩ (MOD 3/4) must be manually activated. If no connected component is detected during initial commissioning or after a reset, the input is automatically deactivated. OFF appears in the display and the input must be manually activated.</p>	<p>A (teaching) OFF MOD 2 – MOD 12</p>	A
INPUT 3	<p>Selection of a function that should be assigned to input 3 (X10/1-3).</p> <p>MOD 4: Week timer</p> <p>MOD 21: Brake actuation monitoring</p> <p>MOD 22: (analogous to input 1/MOD 22)</p> <p><b>NOTE:</b> If MOD 14 – 16 is set at relay 4, MOD 21 (brake monitoring) is automatically set at input 3. This setting cannot be changed if the brake mode is active.</p>	<p>MOD 4 / MOD 21/ MOD 22</p>	MOD 4
SKS3	<p>Setting for channel 1 of the pluggable signal transmission system (X20).</p> <p>OFF: Not active</p> <p>MOD 2: Activates as closing edge protection in DOWN direction.</p> <p>MOD 3: Activates as closing edge protection in UP direction.</p> <p>MOD 4: Activates as safety device (internal safety circuit)</p> <p>If the pluggable component of the signal transmission system is plugged into X20, the controller recognises this (only during initial commissioning or after a reset) and the parameter is automatically set to MOD 4.</p>	<p>A – (teaching) OFF MOD 2 – MOD 4</p>	A
SKS4	<p>Setting for channel 2 of the pluggable signal transmission system (X20). Selection mode analogous to the settings under SKS 3.</p>	<p>A – (teaching) OFF MOD 2 – MOD 4</p>	A
RUNNING-TIME	<p>Monitoring the maximum running time of an UP or DOWN movement. During the teach-in run, the runtime of the door is learned automatically.</p> <p>If the deviation is 20% (in both directions), a runtime error appears. After automatic teach-in, the runtime can be changed manually.</p>	<p>A (teaching) OFF 1 – 300 seconds</p>	A

Function	Description	Adjustment options	Factory setting
REVERS.TIME	Motor standstill time with each direct change of direction. The reversal time when the safety edge is activated during the closing movement is one quarter of the set time.	100 – 5000 milliseconds	300
LIMIT SW.	<p>Selection of the limit position system to be evaluated.</p> <p>MOD 1: Absolute value encoder (AWG)  MOD 2: Mechanical limit switches (MEC)  MOD 4: only for frequency converter operation  MOD 5: Absolute value encoder (AWG) + mechanical limit switch DOWN (NC)  with standard installation  MOD 6: Absolute value encoder (AWG) + mechanical limit switch DOWN (NC)  with special installation with left rotating field</p> <p><b>MOD 5+6 (optional):</b>  Here an additional external mechanical limit switch is set to query the lower end point in order to compensate for tolerances caused by the door mechanism and/or the door curtain. As soon as the mechanical limit switch is actuated, the lower end position is considered reached, regardless of the information from the absolute encoder.</p>	A (teaching) MOD 1 – MOD 2 MOD 4 – MOD 6	A
SELF LOCK	<p>Selection between pulse operation and manual operation (dead man) with or without evaluation of closing edge safety device (SKS) and light barrier system (LB).</p> <p>MOD 1: Pulse operation for OPEN + CLOSE with SKS and LB  With defective safety equipment, switch over to manual operation.  MOD 2: Manual operation for OPEN + CLOSE with SKS and LB  MOD 3: Manual operation for CLOSE, pulse operation for OPEN, with SKS and LB  MOD 4: Manual operation for OPEN, pulse operation for CLOSE, with SKS and LB  MOD 5: Manual operation for OPEN + CLOSE without SKS and LB  MOD 6: Manual operation for CLOSE, pulse operation for OPEN, without SKS and LB  MOD 7: Manual operation for OPEN + CLOSE with SKS and LB  STOP upon reaching the intermediate position CLOSE.  By pressing the button again, continued travel to end position CLOSED is possible.  MOD 8: Pulse operation for OPEN + CLOSE with SKS and LB  With defective safety equipment, switch over to manual operation only via circuit board button  MOD 9: Manual operation for OPEN + CLOSE with SKS and LB  With defective safety equipment, operation only via circuit board button.</p>	MOD 1 – MOD 9	MOD 1
POWER	<p><b>Automatic power monitoring</b>  (Monitoring of the rotational speed)  Fault message in the event of the door being difficult to move or blocked.  Adjustment of the sensitivity for OPEN direction.  A value for the force (rotational speed) will be displayed during opening.  With the power monitoring active, the value must be set to a lower value than the lowest value shown during the door travel. The greater the difference to the lowest displayed value, the less sensitive the reaction of the power monitoring.  The power monitoring is only activated if the numeric value is set.</p>	OFF 1 – 999	10

Function	Description	Adjustment options	Factory setting
RESET MSBUS	All assigned MSBUS addresses are reset. After a controller restart, re-addressing of all connected MSBUS devices takes place.  For detailed information refer to the manual for the MSBUS device.	ON OFF	OFF
RESTART	With activation of the function, the controller is restarted.	ON OFF	OFF
FACTORY SET.	Selection of the parameter set that should be reset with a RESET. MOD 5: Marantec S → Drives in dead man operation MOD 6: Marantec FU → Drive series MDF-U (integrated UPS) MOD 7: Marantec S → Drive series STAW with increased switch-on duration MOD 8: Marantec FU → Drive series MTZ 05 (230V) MOD 9: Marantec FU → Drive series STA MOD 14: Marantec FU → Drive series MTZ 05 (400V) MOD 28: Marantec S → Standard with brake test monitoring MOD 31: Marantec S → Dead-mans function, not resettable MOD 32: Marantec DUO → DUO-system, 2 drives MOD 99: Marantec S → Standard  MOD 10 – MOD 13 / MOD 15 – MOD 97: Customer-specific parameter sets	MOD 5 – MOD 99	MOD 99
RESET	Reset control parameters to the pre-selected factory settings. MOD 1: Part reset 1 (everything apart from frequency converter settings) MOD 2: Part reset 2 (everything apart from limit positions / known limit position system) MOD 3: Complete reset (everything is reset to factory settings)	OFF, MOD 1 – MOD 3	OFF
PIN no. 2	Input and selection of a PIN code for programming a service interval. After inputting the PIN code, the second programming level opens. Afterwards, a service interval can be entered via the SERVICE parameter. Input level 2 disappears again after the voltage is switched off, or automatically after 10 minutes. A change to the PIN code can only take place in the second programming level.	0 – 9999	1111
SERVICE	OFF: Service display not active  Setting a service interval. After the set load cycles are complete, a service message is issued (LED / LCD). If a relay output is programmed with MOD 31, the respective relay (continuous signal) switches. Only appears after activation of input level 2 via parameter PIN no. 2.	OFF 0 – 99950	OFF
INVERTER	Activates or deactivates a connected frequency converter. By connecting a frequency converter to Interface X18 the controller becomes an CS 320 FU.  For detailed information refer to the manual for the CS 320 FU.  MOD 1: Operation without frequency converter MOD 2: Operation with frequency converter MOD 3: Operation with frequency converter (effective ramp times)	MOD 1 – MOD 3	MOD 1

Function	Description	Adjustment options	Factory setting
EXPERT MENU	<p>Activation and deactivation of expert setting. In the factory setting OFF, only a limited choice of parameters appears in INPUT mode. If this parameter is set to ON, all parameters in the input menu can be called up and set.</p> <p>OFF: Limited number of parameter settings:</p> <ul style="list-style-type: none"> <li>- Menu language</li> <li>- INC.P.OP</li> <li>- OPEN TIME</li> <li>- FOREWARNING</li> <li>- FAST CL.</li> <li>- REVERS- POINT.</li> <li>- INPUT 1</li> <li>- SELF LOCK</li> <li>- EXPERT MENU</li> </ul> <p>ON: Access to all parameters as listed in Chapter 8.2.</p>	ON - OFF	OFF

### 8.3 Explanations of the relay modes:

#### A. Traffic light functions

MOD	Description	CLOSED limit position	OPEN limit position	Forewarning	Door movement
MOD 1	Red traffic light inside 1	ON / OFF <sup>1</sup>	OFF <sup>2</sup>	Flashing	Illuminated
MOD 2	Red traffic light inside 2	ON / OFF <sup>1</sup>	OFF <sup>2</sup>	Flashing	Flashing
MOD 3	Red traffic light inside 3	ON / OFF <sup>1</sup>	OFF <sup>2</sup>	Illuminated	Illuminated
MOD 18	Red traffic light inside 4	OFF	OFF	Flashing	OFF
MOD 23	Green traffic light inside	OFF	Illuminated <sup>2</sup>	OFF	OFF
MOD 44	Red traffic light inside + outside	OFF	OFF	OFF	Flashing <sup>3</sup>
MOD 60	Red traffic light outside 1	ON / OFF <sup>1</sup>	OFF <sup>2</sup>	Flashing	Illuminated
MOD 61	Red traffic light outside 2	ON / OFF <sup>1</sup>	OFF <sup>2</sup>	Flashing	Flashing
MOD 62	Green traffic light <sup>4</sup>	OFF	Illuminated <sup>2</sup>	OFF	OFF

<sup>1</sup> depending on the parameter TL REST

<sup>2</sup> With active two-way control: Depending on the UP command inside or outside

<sup>3</sup> from intermediate position DOWN to DOWN, also after stop command. Only in CLOSE direction.

## B. Position messages

MOD	Description	Remarks
MOD 6	UP limit position	The relay closes the contact when the door is in the OPEN limit position.
MOD 7	DOWN limit position	The relay closes the contact when the door is in the CLOSED limit position.
MOD 8	Not OPEN limit position	The relay closes the contact when the door is not in the OPEN limit position.
MOD 9	Not CLOSED limit position	The relay closes the contact when the door is not in the CLOSED limit position.
MOD 10	Intermediate OPEN position (Sect. OPEN)	The relay closes the contact when the door is in the intermediate OPEN position (Sect. OPEN).
MOD 11	Intermediate CLOSED position (Sect. CLOSED)	The relay closes the contact when the door is in the intermediate CLOSED position (Sect. CLOSED).
MOD 12	Intermediate CLOSED position to CLOSED limit position	The relay closes the contact when the door is in the range between the CLOSED limit position and the intermediate CLOSED position (Sect. CLOSED).
MOD 19	Intermediate OPEN position to OPEN limit position	The relay closes the contact when the door is in the range between the OPEN limit position and the intermediate OPEN position (Sect. OPEN).

## C. Pulse signals

MOD	Description	Remarks
MOD 4	Pulse with OPEN command from inside	The relay closes the contact for 1 second if the door receives an OPEN command from inside. It is possible to realise light actuation with this pulse for example.
MOD 27	Pulse after reaching the OPEN limit position	The relay closes the contact for 2 seconds if the door reaches the OPEN limit position. It is possible to open a downstream cabinet with this pulse for example.
MOD 40	Pulse with OPEN command from outside	The relay closes the contact for 1 second if the door receives an OPEN command from outside. It is possible to realise light actuation with this pulse for example.

## D. Brake functions (can only be set at relay 4)

MOD	Description	Remarks
MOD 14	Brake (closed-circuit current principle)	The switching contact of the brake rectifier is controlled via the relay in order to implement a faster braking function. As soon as the door moves, the contact is closed and the brake is vented (closed-circuit current principle).
MOD 15	Brake (open-circuit current principle)	The switching contact of the brake rectifier is controlled via the relay in order to implement a faster braking function. As soon as the door moves, the contact is opened and the brake is vented (open-circuit current principle).

MOD	Description	Remarks
MOD 16	Brake (closed-circuit current principle) applied in OPEN limit position	The switching contact of the brake rectifier is controlled via the relay in order to implement a faster braking function. As soon as the door moves, the contact is closed and the brake is vented (closed-circuit current principle). To achieve a smoother stopping behaviour of the door in the top limit position, the switching contact is not switched in the OPEN limit position.

## E. Error messages

MOD	Description	Remarks
MOD 5	Fault message	The relay opens the contact if a STOP command or an error is present. All errors of chapter 9 lead to relay actuation.
MOD 17	Closing edge protective device SKS 1-4 actuated	Monitoring SKS1 (X4/5-8), SKS2 (X4/11-12) and SKS3/SKS4 (transmission system). The relay opens the contact if one of the closing edge protective devices SKS 1-4 is actuated. An error with one of the closing edge protective devices or a faulty test is displayed via MOD 5.
MOD 35	Light barrier	Analogous to the light barrier input X4 (3/4), switches the applied signal on as a message. Relay ON: Light barrier signal is OK Relay OFF: Light beam interrupted or light barrier defective
MOD 39	Error LED	The relay always closes the contact if the internal error LED 2 (red) lights up.
MOD 45	Closing edge protective devices SKS 1-4 OK	Monitoring SKS1 (X4/5-8), SKS2 (X4/11-12) and SKS3/SKS4 (transmission system) Relay ON: All closing edge protective devices are OK Relay OFF: At least one closing edge protective device is actuated or defective

## F. Movement signal

MOD	Description	Remarks
MOD 29	Door drives open.	Active with movement in the OPEN direction.
MOD 30	Door drives closed.	Active with movement in the CLOSE direction.
MOD 43	Door drives open or closed.	Active with all movement. The brake monitoring module BWM 1 is not active with this setting!

## G. Functions for external accessories

MOD	Description	Remarks
MOD 13	Magnetic lock function	The relay closes before every door movement. The relay is opened in the standby position. A delay time of 0.5 seconds is set before every door movement.

MOD	Description	Remarks
MOD 21	Test of the trap-in protection	The relay generates a test signal upon reaching the CLOSED limit position and awaits actuation of the STOP circuit as a response to the test signal.
MOD 22	Activation of transmission system radio 1 and radio 4, test of light grid 1	The relay generates a test signal upon reaching the OPEN limit position and awaits actuation of the switching strip input as a response to the test signal.
MOD 24	Capacitor switching	With every operation command, the relay is closed for approx. 1 second. This relay is used to add an additional start capacitor required for alternating current applications to ensure safe starting of the motor. For series STAW with increased switch-on duration.
MOD 25	Courtyard light function	With each OPEN command, the relay is closed for 2 minutes and can therefore be used to control a lighting system.
MOD 26	Activation of transmission system radio 2 and radio 4	Before every DOWN command, the transmission system radio is activated with a pulse. The duration of activation must be set on the transmission system. As a result of this activation, travel is delayed by approx. 0.5 seconds.
MOD 28	Relay OFF	The relay is switched off as a general rule, the contact is always open.
MOD 36	Pneumatic cylinder for locking the slip door (threshold-free door system)	With every OPEN command the relay is activated and controls a pneumatic cylinder that mechanically locks the slip door of the door. The locking position of the cylinder is queried via a limit switch. Only after this limit switch is released does the door start to move. The relay remains active until the lower end point is reached again.
MOD 37	Testing the stop signal via transmission system radio 1 and radio 3	The relay generates a test signal upon reaching the OPEN limit position and awaits an interruption of the stop circuit as a response to the test signal.
MOD 38	Test of light grid 2 (8.2 kΩ), connection via input 2 (X4 / 11+12)	The relay generates a test signal upon reaching the OPEN limit position and awaits an interruption at input 2 as a response to the test signal.
MOD 41	Activation transmission system radio 4 in OPEN direction	The relay generates a test signal upon reaching the CLOSED limit position and awaits an interruption at input 2 as a response to the test signal.
MOD 49	Testing presence and movement sensors (NC)	The relay generates a test signal each time before closing travel and awaits an interruption of the closing edge input as a response to the test signal.

## H. Input-dependent messages

MOD	Description	Remarks
MOD 32	Battery operation	Active with battery operation. Input 2 is bridged (setting MOD 5).
MOD 33	no battery operation	Active with mains operation. Input 2 is open (setting MOD 5). When programmed with MOD 32/33, the relays operate as delayed changeover contacts and follow the signal at input 2 when MOD 5 is set. In this case, input 2 is fed with a control signal from the UPS system, which ensures the changeover between mains supply and UPS supply.

MOD	Description	Remarks
MOD 34	BMA signal	Switches with an active fire alarm system. Follows the signal at input 1 with setting MOD 5-9 / 13. In this case, input 1 is fed with a control signal from the fire alarm system and, depending on the setting, the door opens or closes to an end or intermediate position.

## I. System messages

MOD	Description	Remarks
MOD 31	Service	The relay is active after reaching the programmed service interval. Only after the service interval is reset or redefined does the relay drop out again. → "8.2 Input operating mode" on page 35
MOD 46	ADJUSTMENT operating mode	The relay is active if the control is in the ADJUSTMENT operating mode.

## 8.4 Explanations of the inputs:

### A. Functions input 1

MOD	Description	Remarks
MOD 1	SECT. OPEN button	By pressing the button (input 1), the door opens to the intermediate OPEN position (SECT. OPEN).
MOD 2	SECT. OPEN switch	Closed: All OPEN commands lead to intermediate OPEN position (SECT. OPEN). Open: All OPEN commands lead to the OPEN limit position.
MOD 3	AUT.CLOSE switch	Closed: No automatic closing. (Open time stops, if open time > 0). Open: Automatic closing is active (if open time > 0).
MOD 4	External CLOCK (permanent OPEN)	The door opens as soon as the contact closes and remains in the OPEN position (maintain open time) until the contact opens. Then the door drives closed automatically (only with open time > 0). This function can be cancelled by actuating the CLOSE button. The door drives CLOSED.
MOD 5	Switch BMA 3 (Sect. opening) NO	Control function with an active fire alarm system. Open: Normal function. Closed: Sect. opening of the door. The intermediate OPEN position (Sect. OPEN) is approached from both directions, irrespective of the current door position.  BUTTON: No function. LB / SKS: Door stops and moves clear (only in CLOSE direction), after 5 seconds renewed closing. STOP: Interruption of the emergency closing for the duration of activation.

MOD	Description	Remarks
MOD 6	Switch BMA 1(emergency closing) NO	<p>Control function with an active fire alarm system.</p> <p>Open: Normal function.</p> <p>Closed: Emergency closing of the door.</p> <p>BUTTON: No function.</p> <p>LB / SKS: Door stops and moves clear, after 5 seconds renewed emergency closing.</p> <p>STOP: Interruption of the emergency closing for the duration of activation.</p>
MOD 7	Switch BMA 1(emergency closing) NC	<p>Control function with an active fire alarm system.</p> <p>Closed: Normal function.</p> <p>Open: Emergency closing of the door.</p> <p>BUTTON: No function.</p> <p>LB / SKS: Door stops and moves clear, after 5 seconds renewed emergency closing.</p> <p>STOP: Interruption of the emergency closing for the duration of activation.</p>
MOD 8	Switch BMA 2(emergency opening) NO	<p>Control function with an active fire alarm system.</p> <p>Open: Normal function.</p> <p>Closed: Emergency opening of the door.</p> <p>BUTTON: No function.</p> <p>LB / SKS: No function.</p> <p>STOP: Interruption of the emergency opening for the duration of activation.</p> <p>No automatic closing after deactivation of the BMA signal.</p>
MOD 9	Switch BMA 2(emergency opening) NC	<p>Control function with an active fire alarm system.</p> <p>Closed: Normal function.</p> <p>Open: Emergency opening of the door.</p> <p>BUTTON: No function.</p> <p>LB / SKS: No function.</p> <p>STOP: Interruption of the emergency opening for the duration of activation.</p> <p>No automatic closing after deactivation of the BMA signal.</p>
MOD 10	Button ventilation function NO	Sect. opening of the door. By pressing an additional button at input 1, the intermediate CLOSED position (Sect. CLOSED) is approached from both directions, independent of the current door position.
MOD 11	"Automatic closing" button	<p>1. Actuation: No automatic closing, open time is stopped.</p> <p>2. Actuation: Automatic closing is active again if open time &gt; 0.</p> <p>3. Actuation: No automatic closing, open time is stopped.</p> <p>...</p>
MOD 12	Laser scanner (height detection)	<p>Only in conjunction with input 2 (MOD 6).</p> <p>→ See explanations for input 2</p>

MOD	Description	Remarks
MOD 13	Switch BMA 3 (Sect. opening) NC	<p>Control function with an active fire alarm system.</p> <p>Closed: Normal function.</p> <p>Open: Sect. opening of the door. The intermediate OPEN position (SECT. OPEN) is approached from both directions, irrespective of the current door position.</p> <p>BUTTON: no function.</p> <p>LB / SKS: Door stops and moves clear (only in CLOSE direction), after 5 seconds renewed closing.</p> <p>STOP: Interruption of the emergency closing for the duration of activation.</p>
MOD 14	Slip door locking	<p>Monitoring limit switch for the pneumatic locking system of slip doors. The limit switch must have confirmed the correct locking within 10 seconds after an OPEN command, otherwise an error message is issued and the door stops.</p> <p>This function acts on relay mode 36.</p>
MOD 15	Light barrier 2 NC	<p>If a second light barrier is connected in the passage area of the door, this system can be programmed via the parameter LB FUNC 2 in the INPUT.</p> <p>Only connection of light barriers with potential-free NC contact.</p>
MOD 16	Forewarning switch	<p>Closed: Start-up warning and forewarning are inactive (even if both times &gt; 0).</p> <p>Open: Start-up warning and forewarning are active (only if both times &gt; 0).</p> <p>→ "8.2 Input operating mode"</p>
MOD 17	Impuls button outside	<p>Pressing the button moves or stops the door.</p> <ul style="list-style-type: none"> <li>- Function and direction of the movement depend on the IMPULS parameter setting in the input menu.</li> </ul> <p>→ "8.2 Input operating mode" / IMPULS parameter</p> <ul style="list-style-type: none"> <li>- With active two-way control, this pulse command is treated as an external signal.</li> </ul>
MOD 18	Crash sensor NC	<p>Query of a crash sensor as NC contact. If the crash sensor was actuated once, only renewed door travel is possible.</p> <ul style="list-style-type: none"> <li>- after pressing and holding the STOP button for more than 5 seconds, or</li> <li>- switching the supply voltage off and back on.</li> </ul>
MOD 19	Switch block operation commands NC	<p>Closed: no restrictions.</p> <p>Open: It is no longer possible to use the (+) and (-) buttons on the LCD monitor and the motherboard to issue operation commands in AUTOMATIC mode.</p>
MOD 22	Monitoring an external load contactor	<p>In a control version with external load contactor (motor power &gt; 2.2kW / 8A) the auxiliary contacts of the load contactor (NO) are connected and monitored here.</p>
MOD 25	External clock CLOSED (part-open)	<p>The door opens as soon as the contact closes and remains in the INC.P.OP. position (maintain open time) until the contact opens. Then the door drives closed automatically (only with open time &gt; 0).</p> <p>This function can be cancelled by actuating the CLOSE button. The door then drives closed immediately.</p>
MOD 26	External stop command (NO)	<p>Stop button: Pressing the button moves or stops the door immediately.</p>
MOD 27	Gap bridging	<p>Signal active: Only possible to move between the end position OPEN and INT-POS open.</p> <p>Signal inactive: Only possible to move between the end position CLOSED and INT-POS open.</p> <p>(Only in conjunction with ramp control with gap bridging)</p>

MOD	Description	Remarks
MOD 30	UP switch inside	Pressing the button opens the door to the UP limit position. The internal traffic light switches to green.
MOD 31	UP switch outside	Pressing the button opens the door to the UP limit position. The external traffic light switches to green.
MOD 32	DOWN switch	Pressing the button closes the door to the DOWN limit position. Only active with functioning closing edge protective device and functioning light barrier 1. No function in dead-man's operation.

## B. Functions input 2

MOD	Description	Remarks
OFF		Not active.
MOD 2	Safety switching with resistance evaluation	<p>With first commissioning and after a reset, input 2 is set to A (self-teaching) once. If a resistance value is detected, MOD 2 is automatically set and the measured value is stored and monitored as a reference for the connected safety-related components. → "3.14 Safety input per EN 12453" on page 22 Deviation of the measured value leads to an error message.</p> <p>If a safety element is subsequently added or removed, the resistance measurement must be performed again. For this purpose the parameter INPUT 2 must be manually reset to A (self-teaching) and the supply voltage must be switched off and on again. Renewed measurement then takes place.</p> <p>If no connected component is detected during initial commissioning or after a reset, the input is automatically deactivated. OFF appears in the display and the input must be manually activated.</p>
MOD 3	Switching strip OPEN (8.2 kΩ)	Switching strip active in OPEN direction. Stop and reversing to the CLOSED limit position upon actuation of the switching strip.
MOD 4	Switching strip OPEN (8.2 kΩ)	Switching strip active in OPEN direction. Stop and close for 2 seconds (rev) with actuation of the switching strip.
MOD 5	Battery operation (MDFU-special) NO	Active with supply via battery. Relay switching MOD 32 / MOD 33.
MOD 6	Radar movement detector (Height detection) NO	<p>The function is coupled with input 1 (MOD 12 – laser scanner). The upstream laser scanner detects the height of the vehicle. The connected radar motion detector generates an OPEN command when activated.</p> <ul style="list-style-type: none"> <li>A tall vehicle (HGV) is detected by the laser scanner. The laser scanner switches input 1 (MOD 12) to ON. The radar motion detector detects the vehicle and triggers the door movement. The door is moved to the OPEN limit position.</li> <li>A low vehicle (car) is detected by the laser scanner. The laser scanner switches input 1 (MOD 12) to OFF. The radar motion detector detects the vehicle and triggers the door movement. The door is moved to the intermediate OPEN position (SECT. OPEN).</li> </ul> <p>All other OPEN commands (via X3, X7, X9, X13) always move the door to the OPEN limit position. The function of input 1 (MOD 12) is then irrelevant.</p>

MOD	Description	Remarks
MOD 7	Light grid 2 (SSR / PNP) with testing	Behaves like light grid 1 (SKS MOD 4 – 6). – Light grid active in CLOSE direction. – Stops and reverses with actuation of the light grid. Form of reversing (reverse / rev) is accepted.
MOD 9	Safety element (OSE)	STOP the system with actuation.
MOD 10	Switching strip OPEN (OSE)	Switching strip active in OPEN direction. Stop and reversing to the CLOSED limit position upon actuation of the switching strip.
MOD 11	Switching strip OPEN (OSE)	Switching strip active in OPEN direction. Stop and close for 2 seconds (rev) with actuation of the switching strip.
MOD 12	Light grid 2 (OSE) without testing	Behaves like light grid 1 (SKS MOD 4 – 6). – Light grid active in CLOSE direction. – Stops and reverses with actuation of the light grid. Form of reversing (reverse / rev) is accepted.

## 8.5 Diagnosis operating mode / error memory



Display	Meaning	Condition
UPPER SWITCH	UP limit position	OFF: Limit position reached. ON: Limit position not reached.
LOWER SWITCH	DOWN limit position	OFF: Limit position reached. ON: Limit position not reached.
UP-SWITCH	Command button / input OPEN	ON: Button is actuated / input is active. OFF: Button not actuated / input not active.
DOWN-SWITCH	Command button / input CLOSE	ON: Button is actuated / input is active. OFF: Button not actuated / input not active.
INPUT 1	Programmable INPUT 1 (X4 / 9 + 10)	ON: Input 1 is active. OFF: Input 1 is not active.
INPUT 2 / SKS OPEN 2 / SAFE. 2 (optionally)	Programmable INPUT 2 (X4 / 11 + 12)  Input dependent on MOD selected at the programmable input.  INPUT 2 with MOD 5-7 SKS OPEN 2 with MOD 3-4 SAFE. 2 with MOD 2	ON: Input 2 is active. OFF: Input 2 is not active. –: Not activated.

Display	Meaning	Condition
INPUT 3	Programmable INPUT 3 (X10 / 1 – 3)	ON: Input 3 is active. OFF: Input 3 is not active. —: Not activated.
SKS	Closing edge protective device 1 (DW, 8.2kΩ or photo-sensor) or light grid 1 (PNP or photo-sensor) (X4 / 5-8) CLOSE direction	ON: System is closed. OFF: System is interrupted (fault).
SKS 3 / SAFE. 3 (optionally)	Closing edge protective device 3 (8.2kΩ or photo-sensor) Radio transmission system channel 1 OPEN or CLOSE direction  Display dependent on MOD selected at parameter SKS 3.  SKS 3 with MOD 2-3 SAFE. 3 with MOD 4	ON: System is closed. OFF: System is interrupted (fault). —: Not activated.
SKS 4 / SAFE. 4 (optionally)	Closing edge protective device 4 (8.2kΩ or photo-sensor) Radio transmission system channel 2 OPEN or CLOSE direction  Display dependent on MOD selected at parameter SKS 4.  SKS 4 with MOD 2-3 SAFE. 4 with MOD 4	ON: System is closed. OFF: System is interrupted (fault). —: Not activated.
IMPULS	Command button / input IMPULS (X3 / 7+8)	ON: Button is actuated / input is active. OFF: Button is not actuated / input is not active.
TIMER	Week timer (pluggable)	ON: Timer is active. OFF: Timer is not active.
LIGHT BARR.	Light barrier 1 (X4 / 1-4)	ON: Light barrier signal is OK. OFF: Light beam interrupted or light barrier defective.
LIGHT BARR. 2	Light barrier 2 Connection at input 1 (X4 / 9+10)	ON: Light barrier signal is OK. OFF: Light beam interrupted or light barrier defective.
SAFETY CIRC.	Safety circuit 1 Emergency stop systems of door system	ON: Safety circuit is closed. OFF: Safety circuit is interrupted.
STOP	Command button STOP (cover keypad)	ON: Button is not actuated. OFF: Button is actuated.
ROT FIELD	Shows the currently set rolling direction of the drive	RIGHT: Setting for a right rotating field. LEFT: Setting for a left rotating field.

Display	Meaning	Condition
CYCLE	Door cycle counter	Display of the door cycles that have run through: 1 x open + 1 x CLOSE = 1 cycle Counting only takes place when the end switch-off points have each been reached.
SERVICE	Service alarm function Setting via parameter SERVICE and PIN no. 2	OFF: Service display not active. 0 – 99999: Service display is active. Display of the remaining door cycles up to the service message.
AWG	Position information of the absolute value encoder	Display of the currently transferred value.
C.STOP	HALT/STOP counter	Shows how often the door was stopped. Either through activation of a safety device, in case of direct direction reversal by a run command or by a direct STOP/HALT command.
C.OPENED	Counter for top limit position	Shows how often the top limit position was approached.
C.O.BTN	Counter for OPEN commands	Number of all incoming OPEN commands through command devices, sensors and safety devices (e. g. light barrier).
ERROR ... COUNT CYCLE	Controller error memory.  The error messages of the controller can be read out here with information about frequency and cycle. Use the [+] and [-] keys on the LCD monitor to scroll through the list of various error messages. → "9.1 Fault display on the LCD monitor"  Deletion of the error memory: Press the buttons [+] and [-] simultaneously for approx. 2 seconds. Each error message must be individually deleted.	The display changes in 2-second intervals between – the fault description, – the frequency of occurrence, and – the information on which cycle the fault arose most recently.  Only errors that have already occurred appear in the list.

The following messages can be read from the error memory, but are not displayed in the AUTOMATIC operating mode:

Display	Meaning	Condition
POWER ON	Counter for switching the supply voltage off and back on again.	Counts up by actively switching the supply on and off, or with power failures.
ERROR SUPP. VOLT.	Counter for the occurrence of deviations in the supply voltage.	Overvoltage and undervoltage are detected and counted.
RESTART	Restart counter	Display of the restarts executed. Caused by detection of undervoltage, change of the limit position system, change to the motor parameters, or after a RESET of the controller.

## 9. Fault display and remedial measures

### 9.1 Fault display on the LCD monitor

Fault / message	Cause	Rectification
System does not react.	<ul style="list-style-type: none"> <li>No voltage present.</li> </ul>	<ul style="list-style-type: none"> <li>Check power supply for the drive and controller.</li> </ul>
Door drives to the CLOSED limit position upon actuation of the OPEN button. Door drives to the OPEN limit position upon actuation of the CLOSE button.	<ul style="list-style-type: none"> <li>Rotating field has been incorrectly connected.</li> </ul>	<ul style="list-style-type: none"> <li>Check rotating field and establish right rotating field if necessary.</li> </ul>
FAULT - X	<ul style="list-style-type: none"> <li>internal software or hardware error.</li> </ul>	<ul style="list-style-type: none"> <li>RESET via circuit board button: → "6.6 RESETTING the controller without LCD monitor"</li> </ul>
SAFETY CIRC.	<ul style="list-style-type: none"> <li>The safety circuit is interrupted. X3 / 1+2 Safety circuit controller EMERGENCY STOP, slack rope switch X6 / 1+2 ON / OFF internal X11 / 4+8 Safety circuit drive AWG X2 / B1+B2 Safety circuit drive MEC X3 / 3+4 Stop button external X7 / 1+2 Stop button internal</li> </ul>	<ul style="list-style-type: none"> <li>Check safety circuit, locate interruption and eliminate problem.</li> </ul>
ERROR STOP	<ul style="list-style-type: none"> <li>An error has occurred at the safety input (X4/11-12 - MOD 2).</li> </ul>	<ul style="list-style-type: none"> <li>Check all components at the safety input and replace if necessary.</li> </ul>
ERROR RUNTIME	<ul style="list-style-type: none"> <li>The programmed running time has been exceeded.</li> </ul>	<ul style="list-style-type: none"> <li>Check the path of the door and running time.</li> <li>Re-programme the running time if necessary.</li> </ul>
ERROR AWG	<ul style="list-style-type: none"> <li>Signal transmission between absolute value encoder and controller is interrupted or faulty.</li> </ul>	<ul style="list-style-type: none"> <li>Check cable and connector and replace if necessary.</li> </ul>
TERM SWITCH FAIL	<ul style="list-style-type: none"> <li>The door is located outside the programmed limit position range.</li> <li>The limit positions are not yet programmed.</li> </ul>	<ul style="list-style-type: none"> <li>Reset the door in the programmed range via the emergency operation.</li> <li>First program the limit positions.</li> </ul>
ERROR REVOLUTION	<ul style="list-style-type: none"> <li>The power monitoring has triggered.</li> </ul>	<ul style="list-style-type: none"> <li>Check door for mechanical impairments.</li> </ul>
ERROR DIRECTION	<ul style="list-style-type: none"> <li>The present rotating field is not clockwise rotating.</li> </ul>	<ul style="list-style-type: none"> <li>Check rotating field and change if necessary. → "5.1 Checking the drive / travel direction"</li> </ul>
ERROR SKS CLOSE	<ul style="list-style-type: none"> <li>Closing edge protective device 1 defective in CLOSE direction → (X4 / 5-8).</li> </ul>	<ul style="list-style-type: none"> <li>Check closing edge protective devices and spiral cable.</li> </ul>

Fault / message	Cause	Rectification
ERROR SKS OPEN 2	<ul style="list-style-type: none"> <li>- Closing edge protective device 2 defective in OPEN direction → (X4 / 11+12) input 2.</li> </ul>	<ul style="list-style-type: none"> <li>- Check closing edge protective devices and spiral cable.</li> </ul>
ERROR STOP. 2	<ul style="list-style-type: none"> <li>- Safety circuit 2 is interrupted. Slip door switch 8.2 kΩ → (X4 / 11+12) input 2.</li> </ul>	<ul style="list-style-type: none"> <li>- Check slip door switch.</li> </ul>
ERROR SKS CLOSE 3	<ul style="list-style-type: none"> <li>- Closing edge protective device 3 defective in CLOSE direction → (X20) Pluggable transmission system RADIO channel 1.</li> </ul>	<ul style="list-style-type: none"> <li>- Check closing edge protective device.</li> <li>- Check transmission system RADIO.</li> <li>- Check setting of parameter SKS 3.</li> </ul>
ERROR SKS OPEN 3	<ul style="list-style-type: none"> <li>- Closing edge protective device 3 defective in OPEN direction → (X20) Pluggable transmission system RADIO channel 1.</li> </ul>	<ul style="list-style-type: none"> <li>- Check closing edge protective device.</li> <li>- Check transmission system RADIO.</li> <li>- Check setting of parameter SKS 3.</li> </ul>
ERROR STOP. 3	<ul style="list-style-type: none"> <li>- Safety circuit 3 is interrupted. → (X20) Pluggable transmission system RADIO channel 1.</li> </ul>	<ul style="list-style-type: none"> <li>- Check safety circuit.</li> <li>- Check transmission system RADIO.</li> </ul>
ERROR SKS CLOSE 4	<ul style="list-style-type: none"> <li>- Closing edge protective device 4 defective in CLOSE direction → (X20) Pluggable transmission system RADIO channel 2.</li> </ul>	<ul style="list-style-type: none"> <li>- Check closing edge protective device.</li> <li>- Check transmission system RADIO.</li> <li>- Check setting of parameter SKS 4.</li> </ul>
ERROR SKS OPEN 4	<ul style="list-style-type: none"> <li>- Closing edge protective device 4 defective in OPEN direction → (X20) Pluggable transmission system RADIO channel 2.</li> </ul>	<ul style="list-style-type: none"> <li>- Check closing edge protective device.</li> <li>- Check transmission system RADIO.</li> <li>- Check setting of parameter SKS 4.</li> </ul>
ERROR STOP. 4	<ul style="list-style-type: none"> <li>- Safety circuit 4 is interrupted. → (X20) Pluggable transmission system RADIO channel 2.</li> </ul>	<ul style="list-style-type: none"> <li>- Check safety circuit.</li> <li>- Check transmission system RADIO.</li> </ul>
ERROR SKS-TEST	<ul style="list-style-type: none"> <li>- The test of the connected pressure wave strip was unsuccessful.</li> </ul>	<ul style="list-style-type: none"> <li>- Check DW switch, spiral cable and rubber profile.</li> <li>- Check DW-POINT setting.</li> </ul>
	<ul style="list-style-type: none"> <li>- The test of the transmission systems radio 1 – 4 failed.</li> </ul>	<ul style="list-style-type: none"> <li>- Check transmission system radio.</li> <li>- Check relay MOD setting for transmission system.</li> <li>→ "G. Functions for external accessories" on page 46</li> </ul>
ERROR LIGHT BAR.	<ul style="list-style-type: none"> <li>- The connected light barrier exhibits a permanent fault. → (X4 / 1-4)</li> </ul>	<ul style="list-style-type: none"> <li>- Check light barrier (function and alignment).</li> <li>- Check cabling.</li> </ul>
ERROR LIGHT BAR. 2	<ul style="list-style-type: none"> <li>- The connected light barrier exhibits a permanent fault. → (X4 / 9+10) input 1</li> </ul>	<ul style="list-style-type: none"> <li>- Check light barrier (function and alignment).</li> <li>- Check cabling.</li> </ul>
ERROR LB TEST	<ul style="list-style-type: none"> <li>- The test of the 2-wire light barrier failed.</li> </ul>	<ul style="list-style-type: none"> <li>- Check light barrier (function and alignment).</li> <li>- Check cabling.</li> </ul>

Fault / message	Cause	Rectification
ERROR STOP-TEST	<ul style="list-style-type: none"> <li>The test of the slip door switch (8.2 kΩ) failed. -&gt; input 2</li> </ul>	<ul style="list-style-type: none"> <li>Check slip door switch.</li> </ul>
ERROR TRAPIN	<ul style="list-style-type: none"> <li>The test of the trap-in protection (auxiliary module) failed. -&gt; Relay MOD 21</li> </ul>	<ul style="list-style-type: none"> <li>Check light barrier (function and alignment).</li> <li>Check cabling.</li> </ul>
ERROR CYLINDER	<ul style="list-style-type: none"> <li>The monitoring limit switch of the locking system for threshold-free slip doors has not switched within 10 seconds of the input of an OPEN command.</li> </ul>	<ul style="list-style-type: none"> <li>Check limit switch of the cylinder.</li> </ul>
ERROR MSBUS	<ul style="list-style-type: none"> <li>The communication between the controller and connected MS-BUS module is interrupted.</li> </ul>	<ul style="list-style-type: none"> <li>Check cable and connectors and replace if necessary.</li> </ul>
ERROR 24 V	<ul style="list-style-type: none"> <li>The voltage supply 24V DC (X4/1-2) was switched off due to excessive load from external consumers.</li> </ul>	<ul style="list-style-type: none"> <li>Reduce the number of connected consumers.</li> <li>Limit current draw to max. 500 mA through the selection of other components.</li> </ul>
ERROR POWERSEGM.	<ul style="list-style-type: none"> <li>The load contactor or a relay is defective.</li> </ul>	<ul style="list-style-type: none"> <li>The circuit board must be replaced.</li> </ul>
ERROR BRAKE	<ul style="list-style-type: none"> <li>Monitoring module BWM1 has identified a defect at relay 4.</li> </ul>	<ul style="list-style-type: none"> <li>The circuit board must be replaced.</li> </ul>

**After rectifying the cause of the error, the power supply to the control must be turned off once and/or the control must be restarted (> INPUT menu > parameter RESTART > ON) in the event of the following errors:**

- ERROR DIRECTION
- ERROR REVOLUTION
- ERROR RUNTIME
- TERM SWITCH FAIL

## 9.2 Error message via LED indicator

### LED H1 (green, main circuit board)

Fault / error message	LED indicator	Remarks
No operating voltage	Off	No power supply present.

### LED H2 (red, main circuit board)

Fault / error message	LED indicator	Remarks
SAFETY CIRC.	Flashes 1 x	Safety circuit is interrupted. - Check safety circuit, localise interruption and rectify problem.
ERROR AWG	Flashes 2 x	Signal transmission between absolute value encoder and control interrupted and/or broken down. - Check the cable and socket connections and replace, if necessary.

Fault / error message	LED indicator	Remarks
TERM SWITCH FAIL	Flashes 3 x	The door has travelled beyond the programmed end position area or the end positions have not yet been programmed. <ul style="list-style-type: none"> <li>- First, programme the end positions.</li> <li>- Move the door/gate back into the programmed area using the emergency operation facility.</li> </ul>
ERROR DIRECTION	Flashes 4 x	The rotating field present is not a clockwise rotating field. <ul style="list-style-type: none"> <li>- Check the rotating field and change the direction, if necessary.</li> </ul> → "5.1 Checking the drive / travel direction"
ERROR REVOLUTION	Flashes 5 x	The power monitoring has been triggered. <ul style="list-style-type: none"> <li>- Check the door for any mechanical impairment or damage.</li> </ul>
ERROR RUNTIME	Flashes 6 x	The programmed running time has been exceeded. <ul style="list-style-type: none"> <li>- Check the path of the door and the running time.</li> <li>- Re-programme the running time, if necessary.</li> </ul>
ERROR MSBUS	Flashes 9 x	Communication error between the control and the installed MS BUS end device. <ul style="list-style-type: none"> <li>- Check the cable and socket connections and replace, if necessary.</li> </ul>
SERVICE	Flashes 10x	The programmed service interval has been reached. <ul style="list-style-type: none"> <li>- Reset or redefine service interval.</li> </ul> → "8.2 Input operating mode" / SERVICE parameter
ERROR POWERSEGM.	Flashes 11x	The load contactor or a relay is defective. <ul style="list-style-type: none"> <li>- The circuit board must be replaced.</li> </ul>
ERROR STOP	Continuous illumination, travel no longer possible.	An error has occurred at the safety input (X4/11-12 - MOD 2). <ul style="list-style-type: none"> <li>- Check all components at the safety input and replace if necessary.</li> </ul>
ERROR SKS	Continuous light Travel only possible in deadman mode	Closing edge safety device faulty in OPENING or CLOSING direction. <ul style="list-style-type: none"> <li>- Check the closing edge safety device and the spiral cable and, if necessary, check the RADIO transmission system.</li> </ul>
ERROR LIGHT BAR	Continuous light Travel in CLOSING direction only possible in deadman mode	The installed photocell indicates a permanent fault. <ul style="list-style-type: none"> <li>- Check photocell (function and alignment).</li> <li>- Check cabling.</li> </ul>

## 10. Service



### WARNING!

#### Life-threatening danger due to electric shock!

- The control **MUST** be disconnected from the power supply before carrying out any service work on the control unit or door system. Take measures to ensure that the power supply remains disconnected for the duration of the work.

The CS 320 controller is maintenance-free.

The CS 320 controller must be checked at least once yearly.



### ATTENTION!

#### Property damage due to improper checking of the controller!

In order to avoid damage to the controller, drive and door, observe the following points:

- Testing must only be carried out by trained, qualified and authorised persons.
  - Worn or faulty parts must be replaced or disposed of correctly.
  - Only approved original parts may be installed.
  - The test results must be documented in the log book for the door system.
- Check all electrical cables and the housing for damage. A defective cable must be replaced immediately.

## 11. Declaration of incorporation (EU)

in accordance with Directive 2006/42/EC (Machinery) for the incorporation of an incomplete machine per Annex II, Part 1B

### Declaration of conformity

in accordance with Directive 2014/30/EU (EMC)  
in accordance with Directive 2011/65/EU (RoHS)

Marantec Legden GmbH & Co.KG,  
Neue Mühle 4,  
D - 48739 Legden

We hereby declare that the product cited below

Product designation: **Controller for industrial doors**  
Type designation: **CS 320**

is intended exclusively for incorporation in a door system and has been developed, designed and produced in accordance with the following directives:

Machinery Directive 2006/42/EC

Annex 1: 1.1.2, 1.1.3, 1.1.5, 1.2.1, 1.2.2, 1.2.3, 1.2.4.2, 1.2.5, 1.2.6, 1.3.1, 1.3.2, 1.3.3, 1.3.4, 1.3.9, 1.5.1, 1.5.2, 1.5.4, 1.5.5, 1.5.6, 1.5.7, 1.5.8, 1.5.9, 1.5.10, 1.5.11, 1.5.13, 1.6.1, 1.6.2, 1.6.3, 1.6.4, 1.7.1.1, 1.7.1.2, 1.7.2, 1.7.3, 1.7.4.3.

EMC Directive 2014/30/EU - Electromagnetic Compatibility

RoHS Directive 2011/65/EU - Hazardous substances in electrical appliances

LV Directive 2014/35/EU - Low voltage, per Annex I part 1.5.1 of 2006/42/EC

Applied standards:

EN 12453:2017

Doors - Safety in use of power-operated doors: Requirements and test methods

EN ISO 13849-1:2015

Safety of machinery - Safety-related parts of control systems -

EN ISO 13849-2:2012

Part 1: General principles for design  
Safety of machinery - Safety-related parts of control systems -

EN 60335-1:2012

Part 2: Validation  
Safety of household and similar electrical appliances -

EN 60335-2-103:2015

Part 1: General requirements  
Safety of household and similar electrical appliances -

EN IEC 61000-6-2:2019

Part 2-103: Particular requirements for drives for gates, doors and windows  
Electromagnetic compatibility (EMC) -

EN 61000-6-3:2011

Part 6-2: Generic standards - Immunity for industrial environments  
Electromagnetic compatibility (EMC) -

EN 55014-1:2017

Part 6-3: Generic standards - Emission standard for residential, commercial and light-industrial environments  
Electromagnetic compatibility -

EN 55014-2:2015

Electromagnetic compatibility - Requirements for household appliances, electric tools and similar apparatus - Part 2: Immunity - Product family standard

The relevant technical documentation has been compiled in accordance with Annex VII, part B of the Machinery Directive (2006/42/EC).

We shall transmit this information in electronic form, in response to a justified request by the market surveillance authorities, in a timely manner.

Person authorised to compile the technical documentation is the undersigned.

Incomplete machines in accordance with Directive 2006/42/EC are only intended for incorporation in other machines or incomplete machines or systems or for combination with them, in order to form a machine with them in accordance with the aforementioned directive. This product must therefore not be put into service until the complete machine/system into which it is incorporated is compliant with the provisions of the aforementioned directives. Any change to this product that we have not approved will void this regulation.

Legden, 01.08.2022



Michael Hörmann, General Manager



## 12. Declaration of incorporation (UK)

within the context of Supply of Machinery (Safety) Regulations 2008 for incorporation in an incomplete machine according to Appendix II, Part 1B

### Declaration of conformity

within the context of Electromagnetic Compatibility Regulations 2016

within the context of The Restriction of the Use of Certain Hazardous Substances in Electrical and Electronic Equipment Regulations 2012

Marantec Legden GmbH & Co.KG,  
Neue Mühle 4,  
D - 48739 Legden

#### UK Representative:

Link Controls  
Stuart Road, Manor Park  
Runcorn Cheshire, WA7 1TS

We hereby declare that the following listed product

Product designation: **Controller for industrial doors**  
Type designation: **CS 320**

is exclusively intended for integration in a door system and has been developed, designed and produced in accordance with the following Directives:

Supply of Machinery (Safety) Regulations (2008 No.1597)

Appendix 1: 1.1.2, 1.1.3, 1.1.5, 1.2.1, 1.2.2, 1.2.3, 1.2.4.2, 1.2.5, 1.2.6, 1.3.1, 1.3.2, 1.3.3, 1.3.4, 1.3.9, 1.5.1, 1.5.2, 1.5.4, 1.5.5, 1.5.6, 1.5.7, 1.5.8, 1.5.9, 1.5.10, 1.5.11, 1.5.13, 1.6.1, 1.6.2, 1.6.3, 1.6.4, 1.7.1.1, 1.7.1.2, 1.7.2, 1.7.3, 1.7.4.3.

- Electromagnetic Compatibility Regulations (2016 No.1091)
- The Restriction of the Use of Certain Hazardous Substances in Electrical and Electronic Equipment Regulations (2012 No.3032)
- Electrical Equipment (Safety) Regulations (2016 No.1101) according to Annex I Part 1.5.1 of "2008 No.1597"

Applied and consulted standards:

EN 12453:2022	Doors - Safety in use of power operated doors: Requirements and test methods
EN ISO 13849-1:2015	Safety of machinery - Safety-related parts of control systems - Part 1: General principles for design
EN ISO 13849-2:2012	Safety of machinery - Safety-related parts of control systems - Part 2: Validation
EN 60335-1:2020	Household and similar electrical appliances - Safety - Part 1: General requirements
EN 60335-2-103:2016	Household and similar electrical appliances - Safety - Part 2-103: Particular requirements for drives for gates, doors and windows
EN IEC 61000-6-2:2019	Electromagnetic compatibility (EMC) - Part 6-2: Generic standards - Immunity standard for industrial environments

EN 61000-6-3:2011

Electromagnetic compatibility (EMC) - Part 6-3: Generic standards - Emission standard for residential, commercial and light-industrial environments

Electromagnetic compatibility - Requirements for household appliances, electric tools and similar apparatus - Part 1: Emission

Electromagnetic compatibility - Requirements for household appliances, electric tools and similar apparatus - Part 2: Immunity - Product family standard

EN 55014-1:2017

EN 55014-2:2015

The special technical documents were created according to Appendix VII Part B of Supply of Machinery (Safety) Regulations (2008 No.1597). We are obligated to transmit these to market monitoring agencies in a timely manner upon justified request in electronic form.

Authorised representative for compiling the technical documents is the undersigned.

Incomplete machines within the context of Supply of Machinery (Safety) Regulations 2008 are therefore only specified for incorporation with other machines or with other incomplete machines or systems or combined with them to form a machine within the contact of the directive indicated above. For this reason, this product may only be commissioned once it has been determined that the complete machine /system into which it has been incorporated corresponds with the indicated UK guidelines. In case of changes to the product that are not confirmed by us, this declaration is void.

Legden, 01.11.2022




Michael Hörmann, General Manager

**UK  
CA**

## 13. Annex

### 13.1 Safety circuit measuring points

13.1 / 1

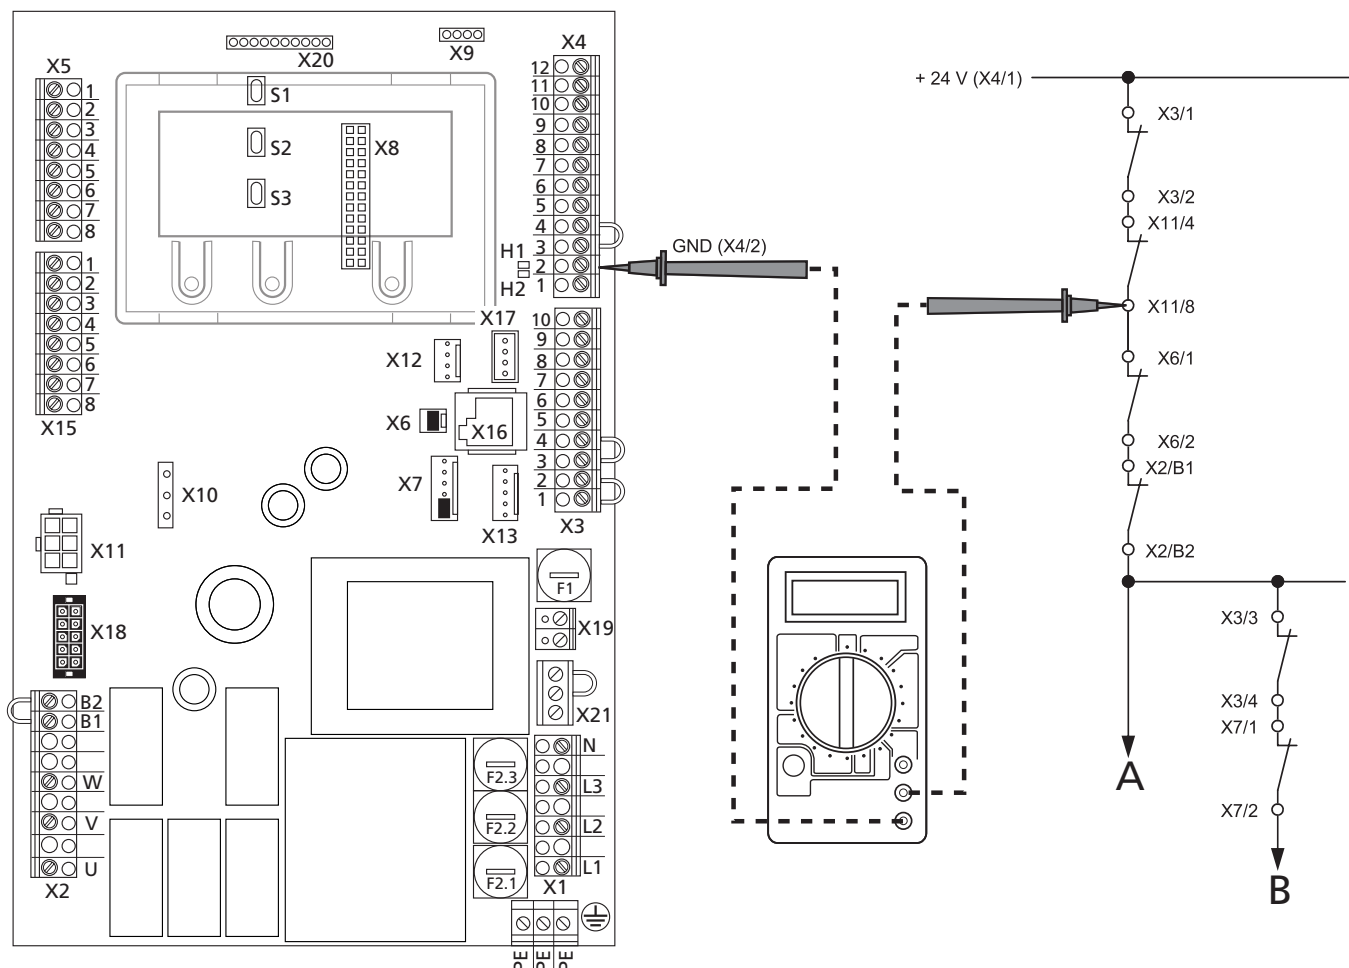

#### NOTE:

The measuring range must be set for 24 V-DC.


A Emergency stop  
B Stop

- Measure at all measuring points on the diagram, to locate the interruption.




ParkKeer  
apparatuur.nl

## 13.2 Overview of the connections

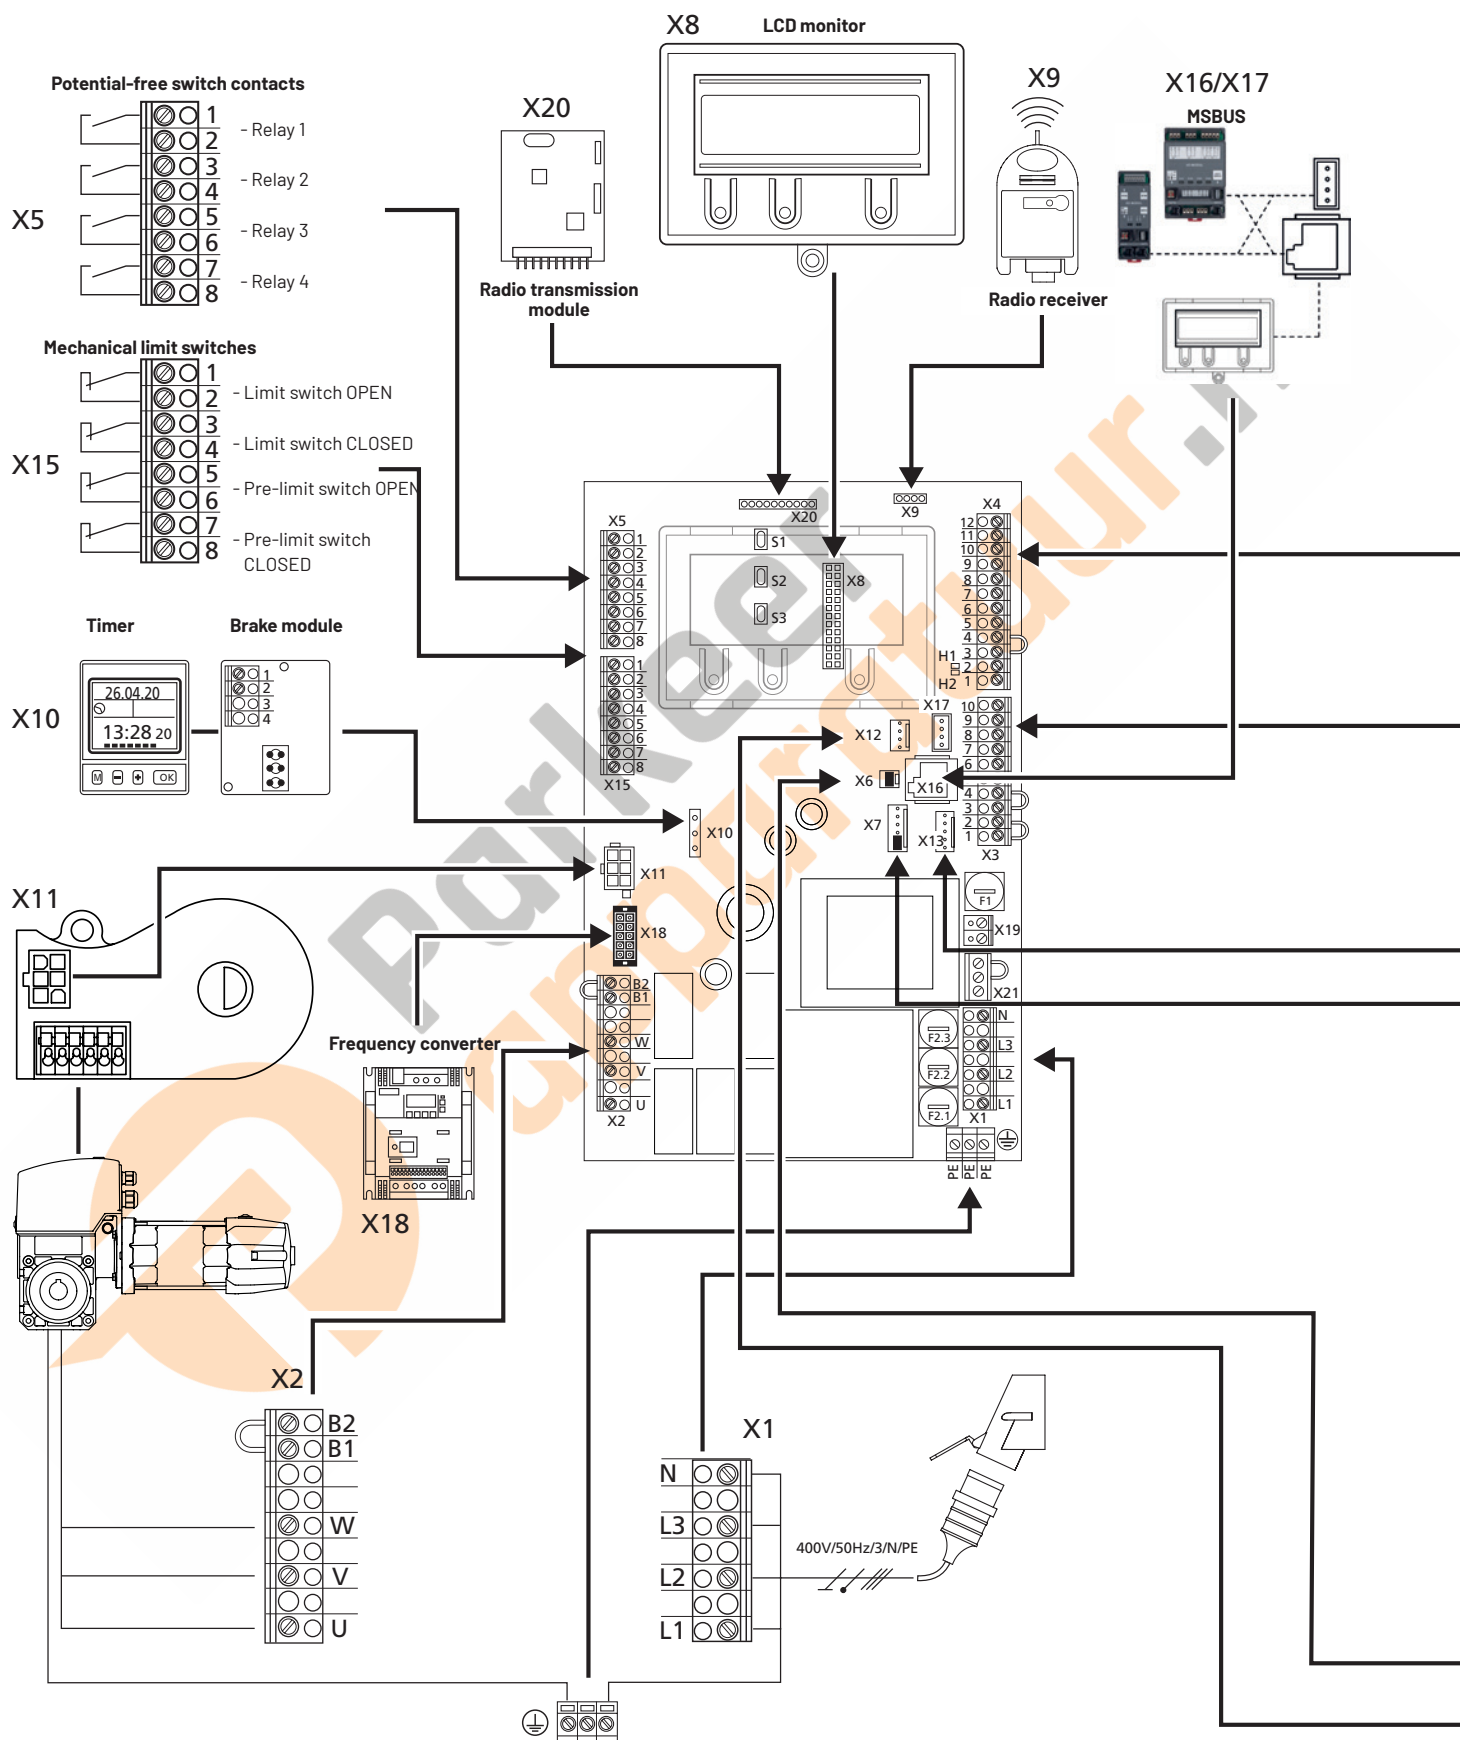


**Closing edge protective device  
OSE**

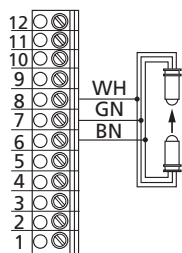


X4


**Input 1 (9 + 10)  
Closing edge protective device 8.2 kΩ /  
DW (5+6)**

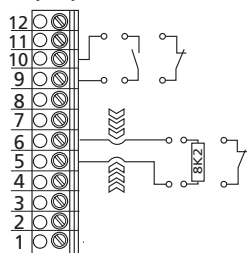


**Input 2 (11 + 12)  
Light barrier (2 + 4)**

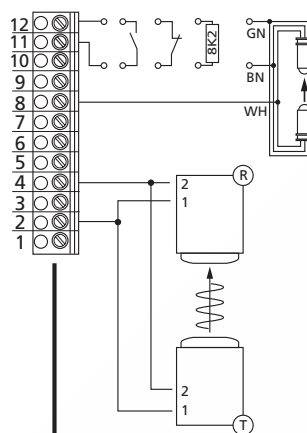

**Light barrier  
NC, NPN, PNP**

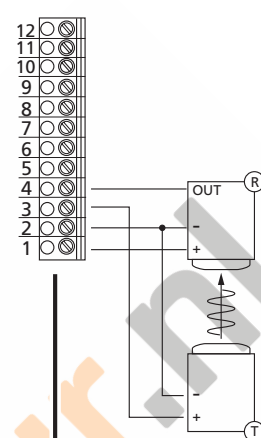


**Command devices**

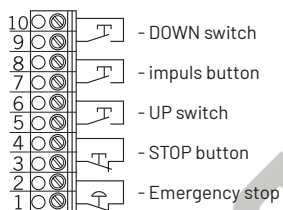


X3


**UP / STOP / DOWN switch  
(6-wire solution)**

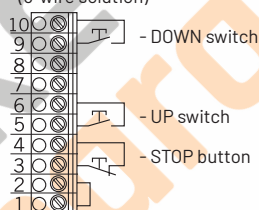


**UP / STOP / DOWN switch  
(4-wire solution)**

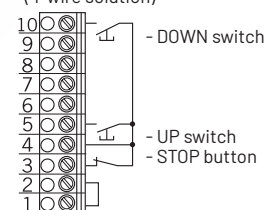


**IMPULS button**

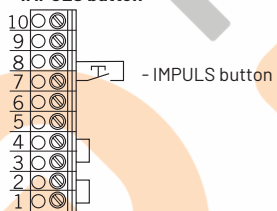

**Key switch**

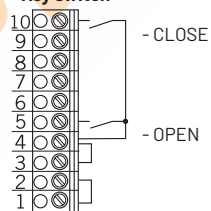


**Cover keypad CS**

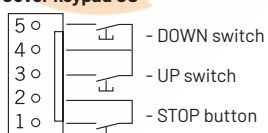


X13

**Cover switch KDT**

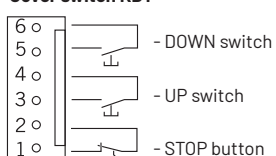


X7

**ON/OFF key switch**



X6

**External radio receiver**



X12

WH: white  
GN: green  
BN: brown







Parkkeer  
apparatuur.nl