




## Operation Manual Multichannel Transmitter SKJ22/44MR

The SKJ22MR or SKJ44MR hand transmitters are part of the Teletaster® K512 product range and can learn 2 or 4 independent codes from another (mother) transmitter.

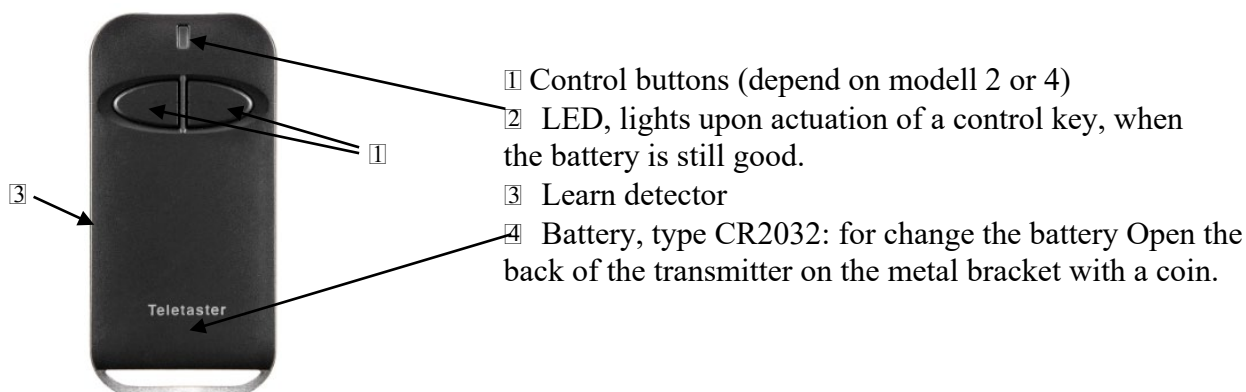

### Attention:

For adjustments on the transmitter disconnect the power plug of the receiver. Risk of accident!

### Learn of X-code:

1. To learn, hold the mother transmitter with the antenna to the learn detector □ (not use a table with metallic ground).
2. On the SKJ22 / 44MR, keep buttons 1 2 pressed simultaneously for at least 3 seconds (LED flashes to confirm after 3 seconds), then release buttons.
3. Master transmitter: Press the key from which the coding is to be taken and keep it pressed.
4. On the SKJ22 / 44MR press the key to which the coding is to be transferred (approx. 1sec, LED flashes to confirm)
5. Release the buttons on both transmitters.
6. Repeat the programming from point 1 to learn another coding

### Service:

1. Press the operating button □; when the LED is lit the battery is still good and the transmission is done.

The device corresponds to the technical European regulations Community, carries the CE sign and can in all EU states and Switzerland to be used without registration. The declaration of conformity for the devices see



[www.tedsen.com](http://www.tedsen.com)


**Do not throw old devices and batteries into the trash!**





## Bedienungsanleitung für Mehrkanalsender SKJ22/44MR

Die Handsender SKJ22MR bzw. SKJ44MR gehören zur Produktreihe Teletaster® K512 und können 2 bzw. 4 unabhängige Codierungen von einem anderen (Mutter-) Sender lernen.

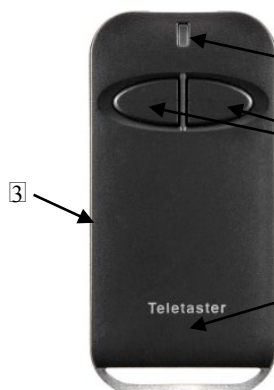

- ❶ Bedientaster (je nach Modell 2 oder 4 Tasten)
- ❷ LED, leuchtet bei Betätigung eines Bedientasters, wenn die Batterie noch gut ist.
- ❸ Lerndetektor
- ❹ Batterie, Typ CR2032: Zum Wechsel der Batterie die Rückseite des Senders am Metallbügel mit einer Münze öffnen.

### Achtung:

Bei Einstellarbeiten am Sender vorher Netzstecker des Antriebes/Empfängers ziehen.  
Unfallgefahr!

### Codierung:

1. Zum Lernen den Muttersender mit der Antenne an den Lerndetektor ☐ halten (nicht auf metallischen Untergrund).
2. Beim SKJ22/44MR die Tasten 1+2 gleichzeitig für mindestens 3 sec gedrückt halten (LED blinkt zur Bestätigung nach 3 Sekunden kurz auf), dann Tasten loslassen.
3. Muttersender: Die Taste drücken, von der die Codierung übernommen werden soll und diese gedrückt halten.
4. Dann beim SKJ22/44MR die Taste drücken, auf die die Codierung übernommen werden soll (ca. 1sec, LED blinkt zur Bestätigung kurz auf)
5. Bei beiden Sendern die Tasten loslassen.
6. Zum Lernen einer weiteren Codierung die Programmierung ab Punkt 1. wiederholen

### Bedienung:

1. Bedientaster ☐ betätigen; wenn die LED leuchtet ist die Batterie noch gut und die Aussendung erfolgt.

Das Gerät entspricht den technischen  
Vorschriften der Europäischen  
Gemeinschaft, trägt das CE-Zeichen und  
kann in allen EU-Staaten und der Schweiz  
ohne Anmeldung verwendet werden.  
Die Konformitätserklärung zu den Geräten  
finden Sie unter [www.tedsen.com](http://www.tedsen.com)

