


# PAP\_003

## Beste positie voor kopiëren

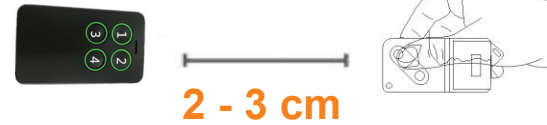

Auto-scan Type

Multi-frequentie

Max 4 verschillende zenders in 1

## PROGRAMMERING:

### -standaard

- 1.Houd knop 1 ingedrukt en druk knop 2 vier keer in tot de LED op de **PAP\_003** iedere 2 sec. 2x snel knippert.
- 2.Plaats de originele zender tegenover de **PAP\_003** (zoals op bovenstaande tekening) en druk zolang op de te kopiëren knop totdat de LED op de **PAP\_003** snel gaat knipperen.
- 3.Als de LED op de **PAP\_003** knippert, druk op de knop van de **PAP\_003** waar je de code van de originele zender onder wilt opslaan, totdat de LED dooft.

### LET OP:

Voor het programmeren van een 2e knop moet de bovenstaande procedure weer bij #1 worden begonnen.

### Automatische matching code: **AMC**

Druk de knop die u wilt programmeren in de ontvanger, en druk een andere knop 3 keer. Laat beide knoppen los tot de LED snel gaat knipperen. Druk dan wederom op de knop die u wilt matchen. De zendercode is dan succesvol gematched met de ontvanger.

### De broncode uitzenden:

Druk knop 1 en 3 gelijktijdig tot de LED snel knippert. Laat beide knoppen los en druk op de knop waarvan u de broncode wilt zenden. U heeft succesvol de broncode verzonden.

**AMC:Automatische matching code**

### -BFT

- 1.Houd knop 1 en 4 ingedrukt tot de LED van de **PAP\_003** iedere 2 sec. snel knippert.
- 2.Plaats de originele zender tegenover de **PAP\_003** zoals op de tekening, op 2-3 cm afstand.
- 3.Houd de knop ingedrukt van de originele zender die u wilt kopiëren, tot de LED blijft oplichten en iedere 2 sec knippert.
- 4.Zend nu de broncode uit van de originele zender (druk op de verborgen knop aan de achterkant, of door bij de nieuwe modellen op knop 1 & 2 gelijktijdig te drukken)
5. Nu gaat de LED van de **PAP\_003** snel knipperen, druk vervolgens op de knop waar u de code wilt opslaan, totdat de LED dooft.
- 6.Start nu de **AMC** procedure om de zender te programmeren in de ontvanger.

### -FAAC and GENIUS

**LET OP!!! Wees zeker dat de originele te kopiëren zender een MASTER is. Druk op een knop en de LED moet dubbel-knipperen in plaats van meteen over te gaan tot het continue oplichten.**

- 1.Houd knop 1 en 4 gelijktijdig ingedrukt tot de LED van de **PAP\_003** iedere 2 sec. snel knippert.
- 2.Plaats de originele zender tegenover de **PAP\_003** zoals op de tekening, op 2-3 cm afstand.
- 3.Houd de knop ingedrukt van de originele zender die u wilt kopiëren, tot de LED blijft oplichten en iedere 2 sec knippert.
- 4.Prepareer de FAAC/GENIUS zender om de broncode uit te zenden (druk gelijktijdig de knoppen 2 en 3)
- 5.Wanneer de FAAC/GENIUS LED knippert, plaats hem tegenover de **PAP\_003** op 2-3 cm zoals op de tekening, en druk op de knop die u wilt kopiëren, totdat de LED op de PAA-003 sneller (sneller dan daarvoor) gaat knipperen, om te bevestigen dat de code juist is overgezet.

### -V2

- 1.Houd knop 1 en 4 gelijktijdig ingedrukt tot de LED van de **PAP\_003** iedere 2 sec. snel knippert.
- 2.Plaats de originele zender tegenover de **PAP\_003** zoals op de tekening, op 2-3 cm afstand.
- 3.Houd de knop ingedrukt van de originele zender die u wilt kopiëren, tot de LED blijft oplichten en iedere 2 sec dubbel knippert.

- 4.Houdt wederom de knop op de originele zender ingedrukt.
- 5.Nu zal de LED op de **PAP\_003** snel gaan knipperen, druk vervolgens op de knop waar u de code onder wilt registreren, totdat de LED dooft.
- 6.Activeer nu de **AMC** procedure om de nieuwe zender op de ontvanger te programmeren.

## COMPATIBILITY LIST

ACM	TX2, TX2 COLOR, TX4
ADYX	<b>AMC</b> TE4433H BLUE, 433-HG BRAVO
AERF	COMPACT, HY-DOM, MERCURI B, MERCURI C, SABUTON, MARS, SATURN, ST3/N, TERRA, TMP-1, TMP-2, UNITECH
ALLMATIC	<b>AMC</b> BROWN, BROWN RED, BRO.OVER, PASS, MINIPASS, TECH3
APERIO	GO, GO PRO, GO MINI
APERTO (Sommer)	TX02-434-2, TX02-868-2 BLUE, 4025 TX02-868-2, 4022 TX02-434-2, 4020-TX03-434, TX-03-868-4, 4013, TX03-434-4
APRI-MATIC	<b>AMC</b> TR2/TR4, TM4, TXM
ATA	PTX4 BLUE, PTX4 PINK
AVIDSEN	104251, 104250, 104250 OLD, 104250 RED, 104257, 104350, 654250
BALLAN	FM400, FM400E, FM404B, 4013
BENINCA	TO. GO. WV, TWV, ROLLKEY, APPLE, LOT WCV, CUPIDO, TO.GO. QV, IO, LOT2WCV, LOT1W, LOT2W, LOT4W, LOT1W, LOT2W, T2W, T4W, APPLE
BESIDE	BEZAP, HIT
BFT	MITTO, MITTO M ( MITTO2M/MITTO4M), MITTO RCB (MITTO RCB02/RCB04), MITTO A (MITTO 2A/MITTO 4A), MITTO B, TRC(TRC2/TRC4), GIBLI, MURALE, KLEIO, TE01, TE02, TE04, RB4 MURALE
CAME	T431, T434, TOP432A, TOP434A, TOP432, TAM432SA, TOP432NA
CARDIN	TRQ S449 (TRQ449100/TRQ449200/TRQ449300/TRQ449400), TRQ S449 GREEN (PRECODE), TXQ S449 (TXQ449200/TXQ449300/TXQ449400), TXQ S449 GREEN, TRQ S486 (TRQ486200/TRQ486400), TXQ S486 (TXQ486200/TXQ486400), S437 TX, XRADO, S449, S476TX2, S476TX, S486
CASALI	JA33 AMIGO, GENIUS/CASALI A252RC


CASIT	ERTS92B,ERTS92T,ERTS476D,ERTS20DQ,ERTS476D,ERTS476Q
CELISA	S10 1, S10 2
CENTURION	CLASSIC,SMART
CHAMBERLAIN/ LIFT MASTER/ MOTOR LIFT	953ESTD, 371 LM, 971 LM, 84330E, 94334CE, 94333E/94334E/94335E, 9747E, 1A5639-7, 1A5477, 1A6487, 132B2372, 94330EML/9333EML/94335EML, 84330EML/84333EML/84335EML, 8747EML
CLEMSA	MUTANCODE, T, T-8, E-CODE N, MASTERCODE MV
CPS	TCP3,CPS1,TCP3,CPS2,TCP3,CPS4,TCP3
DASPI	<b>AMC</b> HAPPY2,POPS 2, ZERO RC( ZERO 2RC,ZERO 4RC)
DEA SYSTEM	TR MIO,133 1,433 2,433 4,GENIE,PUNTO S2, PUNTO 278, GOLDR, GENIE R 273, GENIE R-GT2N
DELMA	MIXARD 433 1, MIXARD 433 2,KING 433 2
DICKERT	MAHS433 01, MAHS433 04
DITEC	<b>AMC</b> GOL,GOL4C,BIXLS2,BIXLP2,BIXAG4, BIXLG
DOITRAND	MPSTF2E,JAUNE
DOORMATIC	SAW
DOORHAN	TRANSMITTER 4
DUCATI	TSAW1,TSAW2,TSAW3,124,TE2
ECOSTAR	RSE,RSC,RSZ
ELBE	501,502,504,502A,504A
ERREKA	IRIS, ROLLER 2, ROLLER 433, ROLLER 868, SOL433, SOL868, VEGA 433, VEGA 868
ELBE	501,502,504,502A,504A
ELCA	IRIS,ASTER 2,ASTER 1000,ASTER 1001
<b>FAAC</b> <b>AMC</b>	XT4 433 RC, TM1 433 DS, TM2 433 DS, TM3 433 DS, 433L2, 433L4, TM22 433 SLP, TM4 433 SLP, TML 433SLH, TML 868 SLH, DL 868 SLH, XT 868SLH, XT 433 SLH, T 868 SLH, T 433 SLH, XT 433 RC, TE433HG
FADINI	<b>AMC</b> JUBI-SMALL,433 M2, ASTRO 433-2,ASTRO 433-4,JUBI2/JUBI4
FERPORT	TAC1,TAC2,TAC4,TAC 1K,TAC 2K,TAC 4K,TAC2KR
GIBIDI	OPEN TMB, OPEN OUT, AU1600, AU1600 WOOD, AU1680, AU1680 WOOD DOMINO
GULLIVER	MDW
GENIUS	<b>AMC</b> AMIGO,AMIGOLD,KILO, BRAVO, ECHO
<b>GENIE</b> <b>AMC</b>	GITR-3, GIT, GICT390, GIFT390-1, G3T-BX, G1T-BX, GM3T, GICTD, GIFTD
GIBIDI	AU01590,AU1600,DOMINO AU1680 WOOD,GIBIDI AU1610,AU1810,AU03000,DTC 4334
HORMANN	HSM2,HSM4
JCM	NEO, TWIN, GO, GO PORTIS, GO NORTON
JAY	UBEI X1SL1,UBET 11,UBET 21,UBET 31,UBET 41,UBET 61

KBLUE	ETH-TEL01
KEY	900TXB-42R,SUB44, TXB-44R, TXG-44R
KING GATES	STYLO, CLIPPER
KLING	KUA, KUA E, KUA S
LABEL	SPYCO,RJW4E
LEB	TMW
LINCE	LR2035
LIFE	FIDO
LINEAR	MCT-11, ACT-21, ACT-22, STING RAY ACT-31, STING RAY ACT- 34B
MHOUSE	TX4
MA	TX1,TX2,TX3
MARANTEC	D101,D12,DIGITAL302,DIGITAL304
MERLIN/ PROLIF	M230T(PROLIFT),M430R(PROLIFT)
MERLIN2.0	E945M,E943M,E940M
MERLIN/ PROLIF	M842(GREENREMOTE),M832(GREEN REMOTE),M844(GREEN REMOTE),C945,C940,C943
MHOUSE	<b>AMC</b> TX4,TX3,GTX4
MOOVO	<b>AMC</b> MT4G
MONSEIGNEUR	ARC
<b>NICE</b> <b>AMC</b>	SMILO,FLOR-S,VERY-VR, INTI,FLO2,FLO4, FLOR-S ERA, ONE (ON) ON ERA, ERGO, PLANO, ONE (ON FM)
NORTON	NEO, TXCD, GO NORTON, GO MINI NORTON
NOVOTECNICA	<b>AMC</b> BIXL2
NOVOFERM	NOVOTRON 502-504-512MIX43-2,MTR40-2,MCHS43-2,MHS43(2- 4),MNHS433(2-4), MCHS, MINI-NOVOTRON 504, MICRO- NOVOTRON 502, MICRO-NOVOTRON 504, MICRO-NOVOTRON 31, MICRO-NOVOTRON 51, MINI-NOVOTRON 30, MINI-NOVOTRON 50, MNHS
NOLOGO	ECO DIP
NORMSTAHL	T433
O & O	T.COM,TWIN,TX,TWIN,TX2/TX4(NEO),T.COM R4-2/T.COM R4-4, <b>AMC</b> T.COM R8-2/T.COM R8-4,
OG	OG62,OG64
OPENOUT	TMQ
PECCININ	TX MENBRANA
PORTAMATIC	MPH01,MPH02
<b>PRASTEL</b> <b>AMC</b>	TC2E(4E),SLIM,BFOR,MPSTP2E,MPSTF2,MPSTF4,MPSTF2RE, MPSTF4RE,,MPSTP2E,MPSTP2E BLUE, MTE(MT4E,MT2E),TRQ- P(TRQ4P,TRQ2P), MPSTLE(MPSTL-1E,MPSTL-2E,MPSTL-4E)

PROEM	ER4C4ACS
PROGET	ETY_433N2,ETY_433N4
PROTECO	TX433,EUROMATIC
PUJOL	MARTE,P215, TWIN, VARIO, VARIO MARS, VARIO OCEAN, NEO
QUASAR	433
RIB	LITHIO
ROPER	NEO, GO ROPER, GO MINI ROPER
SABUTOM	BROOVER, BROSTAR
SEA	SMART DIP
SEAV	BE HAPPY RS(BE-HAPPY-RS1,BE-HAPPY-RS2,BE- HAPPY-RS3),BE-SMART RSX, BE-HAPPY RH1,BE- HAPPY RH2,BE-HAPPY RH3
SECULUX	NEO
SILVELOX	Mhz 2007, QUARZ SAW
SICE	4790207
SIMINOR	CVXNL, MITTO, SIM433
SECURVERA	SV R2C,SV R4C,SV R6C
SERAI	OG/52,OG54,OG82,OG84,OG/28,OG48,OG62,OG64
SIMINOR	S433(2T-4T),ER2C4ACS,ER4C4ACS
SOMFY	TELIS, K-EASY, K-EASY NEW, K-EASY OLD, MITTO, KEY GO RTS, TELIS RTS, KEYTIS RTS, KEYTIS RTS NS, ALARMA
SOMMER	4010, 4011, 4014 TX03-434-2, 4013 TX03-434-4, 4020 TX03-868-4, 4026 TX03-868-2, 4022 TX02-434-2, 4025 TX02-868-2, 4031 TX08-868-4
STAGNOLI	KALLISTO, VENUS AV223
TAU	<b>AMC</b> 250K-SLIMRP, 250K-SLIMR, 250T-4RP
TELCOMA	FM 402, FM 402 E, FM400E, FM400
TOR LIFT	TORMIT4
VDS	<b>AMC</b> TRQ P,ECO-R
VRAWFORD	EA433 4K,SMART2,SMART3
<b>V2</b> <b>AMC</b>	PHOENIX 433-868, TXC, TSC, TRC, HANDY, SERIE ROYAL:TRR/43,TRR2/43,TRR4/43, PHOX 433

# PAP\_003

## Best position for duplication

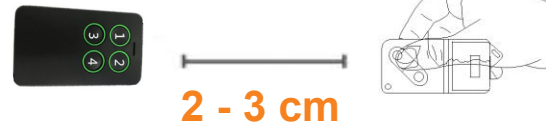

2 - 3 cm

Auto-scan Type

Multi-frequency

Up to 4 different remotes in 1

## PROGRAMMING:

### -standard

1. Hold button 1 and press button 2 four at the same time then release both buttons. the led on the **PAP\_003** emits a quick flash every 2 sec.
2. Place and press the original remote control in front of the remote, at about 2-3 cm of distance, until the led of **PAP\_003** starts flash quickly.
3. While the LED of **PAP\_003** is flashing, press the button of the **PAP\_003** where you want to store the remote' code just copied, until the led will turn off.

### Note:

To duplicate a second button, repeat the operation from the point 1.

### Automatic matching code: **AMC**

Press the button you want to match the code, and press another button 3 times. Release both buttons until the LED flashes quickly. Then press again on the button you want to match. The remote's code has matched successfully .

### Emitting the seed code:

Pressing the button 1 and button 3 at the same time until LED flashes quickly. Release two buttons, press the button that you want to emit the seed code, it has emitted the seed code successfully .

AMC:Automatic matching code



### -BFT

1. Hold button 1 and button 4 at the same time until the LED of **PAP\_003** emits a quick flash every 2 sec.
2. Place the original remote control in front of the remote, at about 2-3 cm of distance.
3. Press and retain pressed the button of the original remote control that you want to copy until the remote's led will turn on with a fix light and then emits a double flash every 2 sec.
4. Transmit now the seed code of the original remote control (by pressing the rear hide button or the buttons 1 and 2 simultaneously in the new models)
5. Now the LED will flash quickly, press the button of the remote where you want to store the code just copied, until the LED will turn off.
6. Now activate the **AMC** procedure to insert the new remote control on the receiver.

### -FAAC and GENIUS

**ATTENTION, PLEASE: Verify that the remote control to be copied is a MASTER.**

**Pressing any button, the LED should issue a double flash rather than switch on immediately as a fixed light!**

1. Hold button 1 and 4 at the same time until the LED of **PAP\_003** emits a quick flash every 2 sec.
2. Place the original remote control in front of the remote, at about 2-3 cm of distance
3. Press and retain pressed the original remote control button that you want to copy until the LED **PAP\_003** switches on a fixed light and then it stars to emit a double flash every 2 seconds.
4. Prepare the FAAC/GENIUS remote control for the emission of the seed code (by pressing simultaneously the buttons 2 and 3)
5. While the FAAC/GENIUS LED is flashing, place it in front of the **PAP\_003** at about 2-3 cm of distance and press the button that you want to copy until the remote's LED will change frequency of flashing (faster than before), as confirm of the correct copy of the code.

### -V2

1. Hold button 1 and 4 at the same time until the LED of **PAP\_003** emits a quick flash every 2 sec.
2. Place the original remote control in front of the remote, at about 2-3 cm of distance

3. Press and retain pressed the button of the original remote control that you want to copy until the remote's LED will turn on with a fix light and then emits a double flash every 2 sec.
4. Press and retain pressed once again the same button of the original remote control.
6. Now the LED will flash quickly, press the button of the remote where you want to store the code just copied, until the LED will turn off.
5. Now activate the **AMC** procedure to insert the new remote control on the receiver.

## COMPATIBILITY LIST

ACM	TX2, TX2 COLOR, TX4
ADYX	<b>AMC</b> TE4433H BLUE, 433-HG BRAVO
AERF	COMPACT, HY-DOM, MERCURI B, MERCURI C, SABUTON, MARS, SATURN, ST3/N, TERRA, TMP-1, TMP-2, UNITECH
ALLMATIC	<b>AMC</b> BROWN, BROWN RED, BRO.OVER, PASS, MINIPASS, TECH3
APERIO	GO, GO PRO, GO MINI
APERTO (Sommer)	TX02-434-2, TX02-868-2 BLUE, 4025 TX02-868-2, 4022 TX02-434-2, 4020-TX03-434, TX-03-868-4, 4013, TX03-434-4
APRI-MATIC	<b>AMC</b> TR2/TR4, TM4, TXM
ATA	PTX4 BLUE, PTX4 PINK
AVIDSEN	104251, 104250, 104250 OLD, 104250 RED, 104257, 104350, 654250
BALLAN	FM400, FM400E, FM404B, 4013
BENINCA	TO. GO. WV, TWV, ROLLKEY, APPLE, LOT WCV, CUPIDO, TO.GO. QV, IO, LOT2WCV, LOT1W, LOT2W, LOT4W, LOT1WM, LOT2WM, T2W, T4W, APPLE
BESIDE	BEZAP, HIT
BFT	MITTO, MITTO M ( MITTO2M/MITTO4M), MITTO RCB (MITTO RCB02/RCB04), MITTO A (MITTO 2A/MITTO 4A), MITTO B, TRC(TRC2/TRC4), GIBLI, MURALE, KLEIO, TE01, TE02, TE04, RB4 MURALE
CAME	T431, T434, TOP432A, TOP434A, TOP432, TAM432SA, TOP432NA
CARDIN	TRQ S449 (TRQ449100/TRQ449200/TRQ449300/TRQ449400), TRQ S449 GREEN (PRECODE), TXQ S449 (TXQ449200/TXQ449300/TXQ449400), TXQ S449 GREEN, TRQ S486 (TRQ486200/TRQ486400), TXQ S486 (TXQ486200/TXQ486400), S437 TX, XRADO, S449, S476TX2, S476TX, S486
CASALI	JA33 AMIGO, GENIUS/CASALI A252RC

CASIT	ERTS92B,ERTS92T,ERTS476D,ERTS20DQ,ERTS476D,ERTS476Q
CELISA	S10 1, S10 2
CENTURION	CLASSIC,SMART
CHAMBERLAIN/ LIFT MASTER/ MOTOR LIFT	953ESTD, 371 LM, 971 LM, 84330E, 94334CE, 94333E/94334E/94335E, 9747E, 1A5639-7, 1A5477, 1A6487, 132B2372, 94330EML/9333EML/94335EML, 84330EML/84333EML/84335EML, 8747EML
CLEMSA	MUTANCODE, T, T-8, E-CODE N, MASTERCODE MV
CPS	TCP3,CPS1,TCP3,CPS2,TCP3,CPS4,TCP3
DASPI	<b>AMC</b> HAPPY2,POPS 2, ZERO RC( ZERO 2RC,ZERO 4RC)
DEA SYSTEM	TR MIO,133 1,433 2,433 4,GENIE,PUNTO S2, PUNTO 278, GOLDR, GENIE R 273, GENIE R-GT2N
DELMA	MIXARD 433 1, MIXARD 433 2,KING 433 2
DICKERT	MAHS433 01, MAHS433 04
DITEC	<b>AMC</b> GOL,GOL4C,BIXLS2,BIXLP2,BIXAG4, BIXLG
DOITRAND	MPSTF2E,JAUNE
DOORMATIC	SAW
DOORHAN	TRANSMITTER 4
DUCATI	TSAW1,TSAW2,TSAW3,124,TE2
ECOSTAR	RSE,RSC,RSZ
ELBE	501,502,504,502A,504A
ERREKA	IRIS, ROLLER 2, ROLLER 433, ROLLER 868, SOL433, SOL868, VEGA 433, VEGA 868
ELBE	501,502,504,502A,504A
ELCA	IRIS,ASTER 2,ASTER 1000,ASTER 1001
<b>FAAC</b> <b>AMC</b>	XT4 433 RC, TM1 433 DS, TM2 433 DS, TM3 433 DS, 433L2, 433L4, TM22 433 SLP, TM4 433 SLP, TML 433SLH, TML 868 SLH, DL 868 SLH, XT 868SLH, XT 433 SLH, T 868 SLH, T 433 SLH, XT 433 RC, TE433HG
FADINI	<b>AMC</b> JUBI-SMALL,433 M2, ASTRO 433-2,ASTRO 433-4,JUBI2/JUBI4
FERPORT	TAC1,TAC2,TAC4,TAC 1K,TAC 2K,TAC 4K,TAC2KR
GIBIDI	OPEN TMB, OPEN OUT, AU1600, AU1600 WOOD, AU1680, AU1680 WOOD DOMINO
GULLIVER	MDW
GENIUS	<b>AMC</b> AMIGO,AMIGOLD,KILO, BRAVO, ECHO
<b>GENIE</b> <b>AMC</b>	GITR-3, GIT, GICT390, GIFT390-1, G3T-BX, G1T-BX, GM3T, GICTD, GIFTD
GIBIDI	AUO1590,AU1600,DOMINO AU1680 WOOD,GIBIDI AU1610,AU1810,AUO3000,DTC 4334
HORMANN	HSM2,HSM4
JCM	NEO, TWIN, GO, GO PORTIS, GO NORTON
JAY	UBEI X1SL1,UBET 11,UBET 21,UBET 31,UBET 41,UBET 61

KBLUE	ETH-TEL01
KEY	900TXB-42R,SUB44, TXB-44R, TXG-44R
KING GATES	STYLO, CLIPPER
KLING	KUA, KUA E, KUA S
LABEL	SPYCO,RJW4E
LEB	TMW
LINCE	LR2035
LIFE	FIDO
LINEAR	MCT-11, ACT-21, ACT-22, STING RAY ACT-31, STING RAY ACT- 34B
MHOUSE	TX4
MA	TX1,TX2,TX3
MARANTEC	D101,D12,DIGITAL302,DIGITAL304
MERLIN/ PROLIF	M230T(PROLIFT),M430R(PROLIFT)
<b>MERLIN</b> <b>2.0</b>	E945M,E943M,E940M
MERLIN/ PROLIF	M842(GREENREMOTE),M832(GREEN REMOTE),M844(GREEN REMOTE),C945,C940,C943
MHOUSE	<b>AMC</b> TX4,TX3,GTX4
MOOVO	<b>AMC</b> MT4G
MONSEIGNEUR	ARC
<b>NICE</b> <b>AMC</b>	SMILO,FLOR-S,VERY-VR, INTI,FLO2,FLO4, FLOR-S ERA, ONE (ON) ON ERA, ERGO, PLANO, ONE (ON FM)
NORTON	NEO, TXCD, GO NORTON, GO MINI NORTON
NOVOTECNICA	<b>AMC</b> BIXL2
NOVOFERM	NOVOTRON 502-504-512MIX43-2,MTR40-2,MCHS43-2,MHS43(2- 4),MNHS433(2-4), MCHS, MINI-NOVOTRON 504, MICRO- NOVOTRON 502, MICRO-NOVOTRON 504, MICRO-NOVOTRON 31, MICRO-NOVOTRON 51, MINI-NOVOTRON 30, MINI-NOVOTRON 50, MNHS
NOLOGO	ECO DIP
NORMSTAHL	T433
O & O	T.COM,TWIN,TX,TWIN,TX2/TX4(NEO),T.COM R4-2/T.COM R4-4, <b>AMC</b> T.COM R8-2/T.COM R8-4,
OG	OG62,OG64
OPENOUT	TMQ
PECCININ	TX MENBRANA
PORTAMATIC	MPH01,MPH02
<b>PRASTEL</b> <b>AMC</b>	TC2E(4E),SLIM,BFOR,MPSTP2E,MPSTF2,MPSTF4,MPSTF2RE, MPSTF4RE,,MPSTP2E,MPSTP2E BLUE, MTE(MT4E,MT2E),TRQ- P(TRQ4P,TRQ2P), MPSTLE(MPSTL-1E,MPSTL-2E,MPSTL-4E)

PROEM	ER4C4ACS
PROGET	ETY_433N2,ETY_433N4
PROTECO	TX433,EUROMATIC
PUJOL	MARTE,P215, TWIN, VARIO, VARIO MARS, VARIO OCEAN, NEO
QUASAR	433
RIB	LITHIO
ROPER	NEO, GO ROPER, GO MINI ROPER
SABUTOM	BROOVER, BROSTAR
SEA	SMART DIP
SEAV	BE HAPPY RS(BE-HAPPY-RS1,BE-HAPPY-RS2,BE- HAPPY-RS3),BE-SMART RSX, BE-HAPPY RH1,BE- HAPPY RH2,BE-HAPPY RH3
SECULUX	NEO
SILVELOX	Mhz 2007, QUARZ SAW
SICE	4790207
SIMINOR	CVXNL, MITTO, SIM433
SECURVERA	SV R2C,SV R4C,SV R6C
SERAI	OG/52,OG54,OG82,OG84,OG/28,OG48,OG62,OG64
SIMINOR	S433(2T-4T),ER2C4ACS,ER4C4ACS
SOMFY	TELIS, K-EASY, K-EASY NEW, K-EASY OLD, MITTO, KEY GO RTS, TELIS RTS, KEYTIS RTS, KEYTIS RTS NS, ALARMA
SOMMER	4010, 4011, 4014 TX03-434-2, 4013 TX03-434-4, 4020 TX03-868-4, 4026 TX03-868-2, 4022 TX02-434-2, 4025 TX02-868-2, 4031 TX08-868-4
STAGNOLI	KALLISTO, VENUS AV223
TAU	<b>AMC</b> 250K-SLIMRP, 250K-SLIMR, 250T-4RP
TELCOMA	FM 402, FM 402 E, FM400E, FM400
TOR LIFT	TORMIT4
VDS	<b>AMC</b> TRQ P,ECO-R
VRAWFORD	EA433 4K,SMART2,SMART3
<b>V2</b> <b>AMC</b>	PHOENIX 433-868, TXC, TSC, TRC, HANDY, SERIE ROYAL:TRR/43, TRR2/43, TRR4/43, PHOX 433